
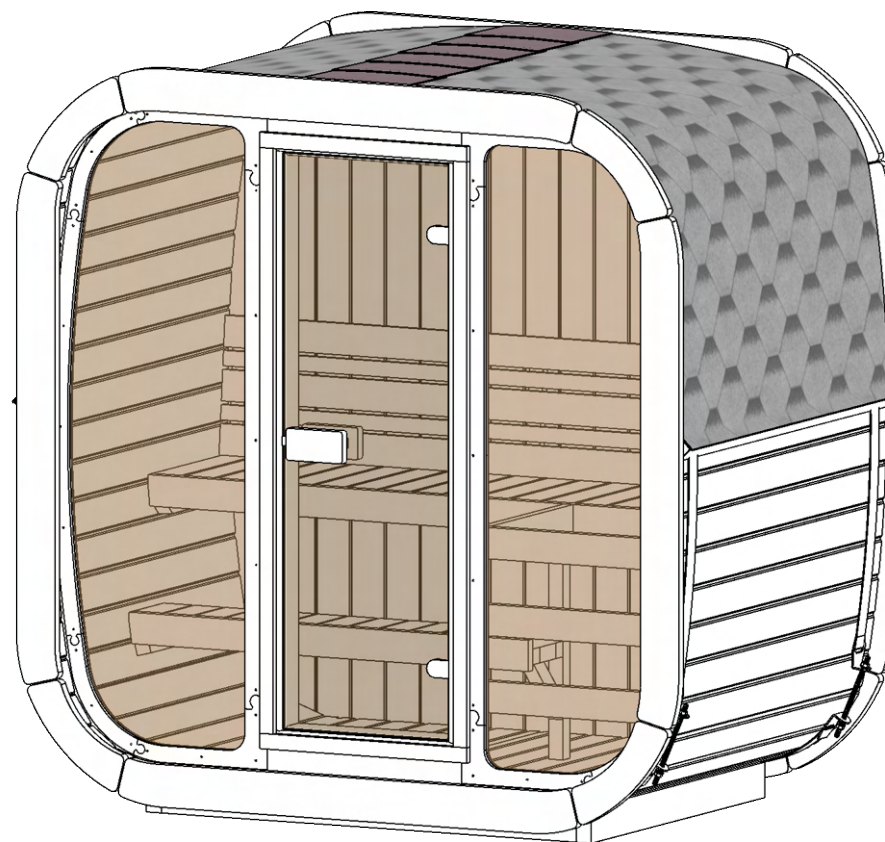


Sauna "Icon" 125,Ø200




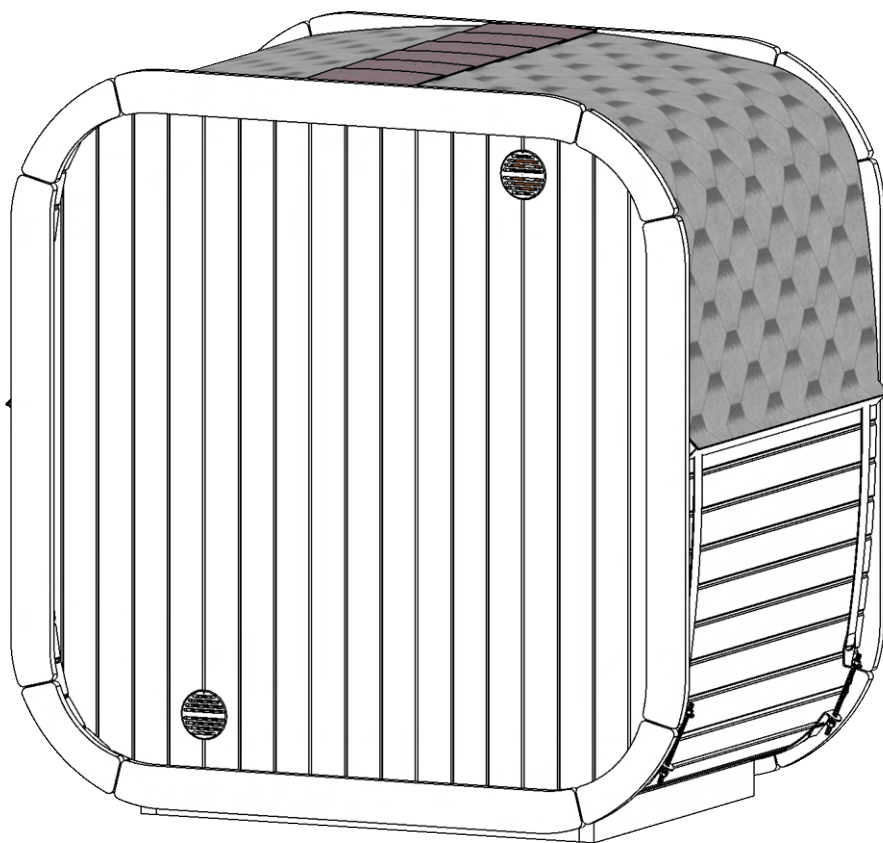


Note: Please read manual before construction.

(TIC20/125KE-PT01)

Sauna Icon 125, Ø200




(Front glass wall)

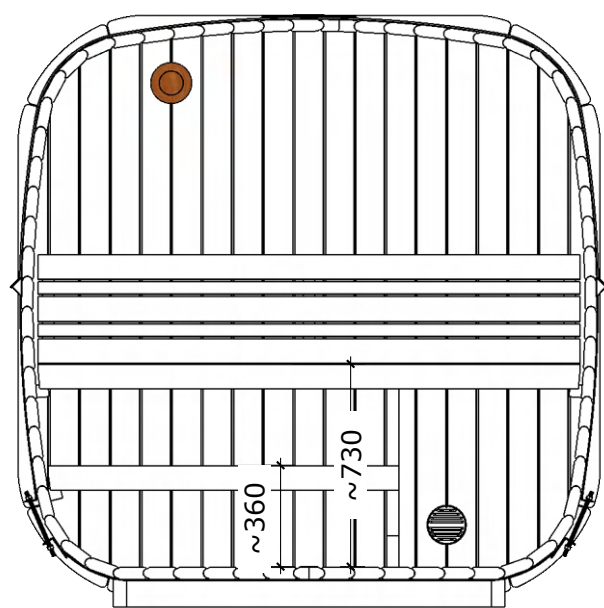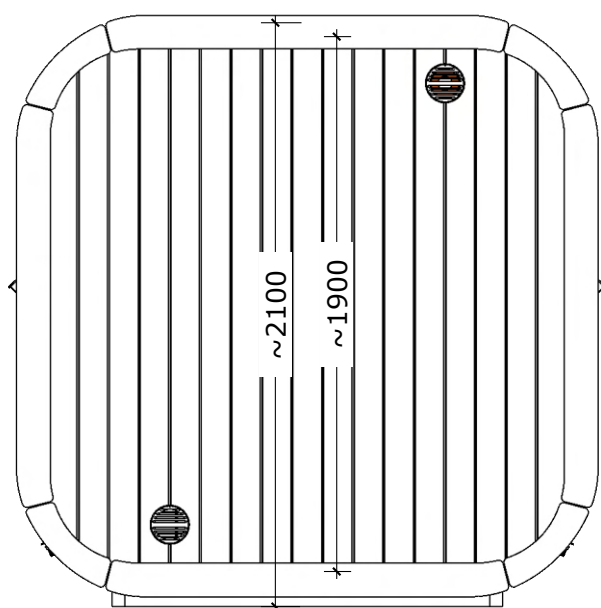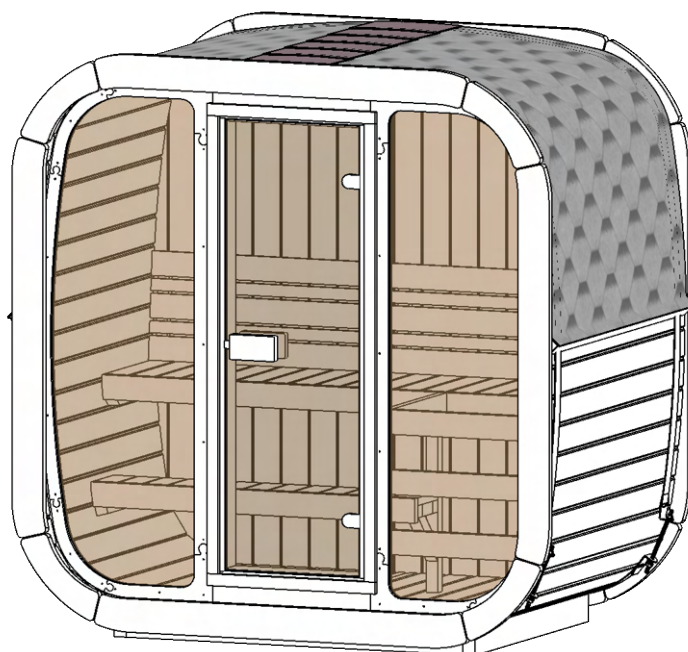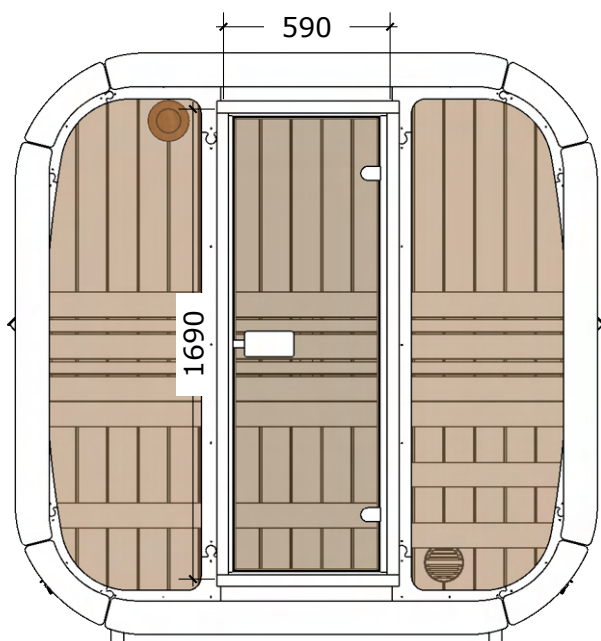


(TIC20/125KE-PT01)

Sauna Icon 125, Ø200

(Front glass wall)

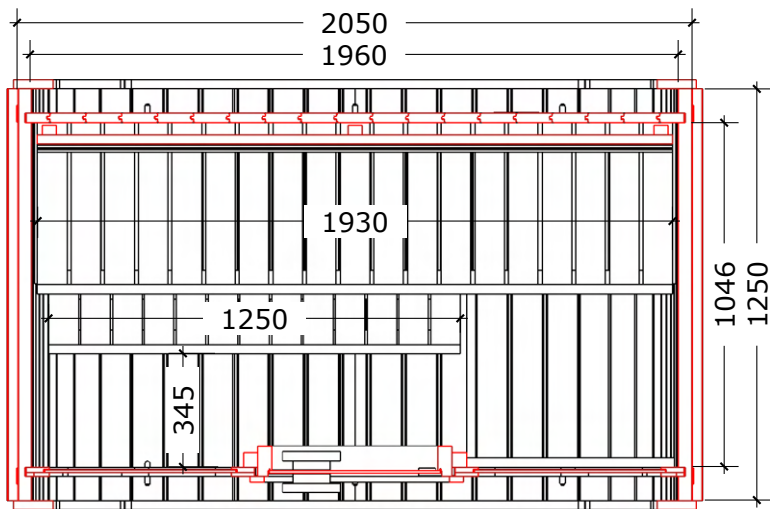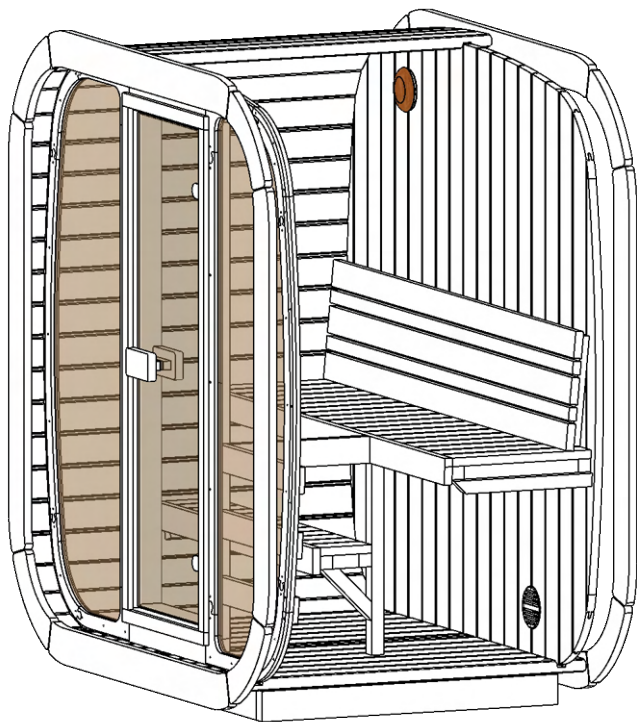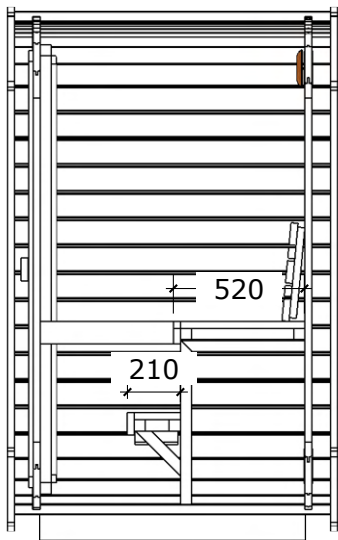


















Base frame and recommended support positions.

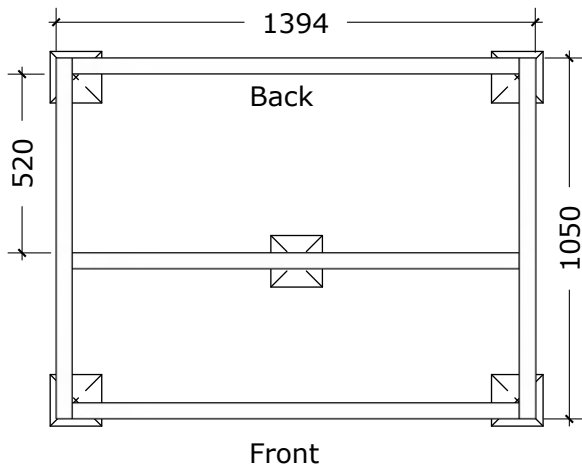

(TIC20/125KE-PT01)














Sauna "Icon" 125,Ø200

Details list 1/4

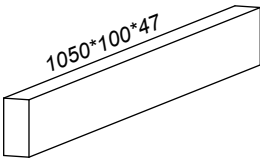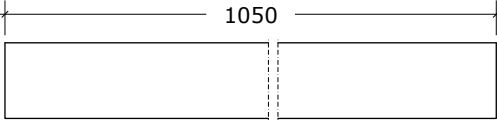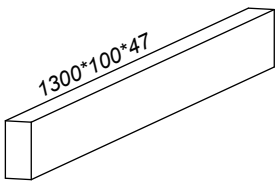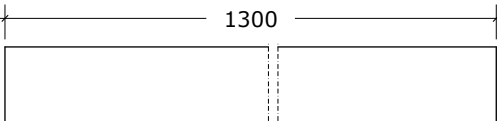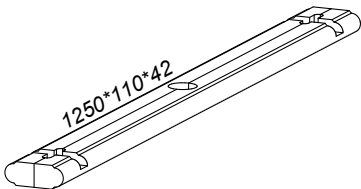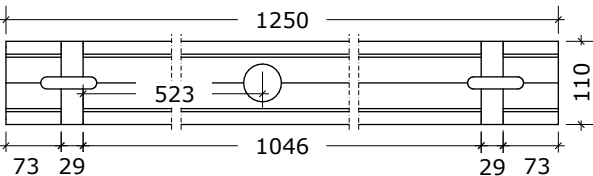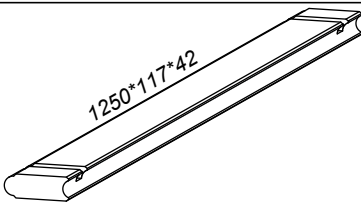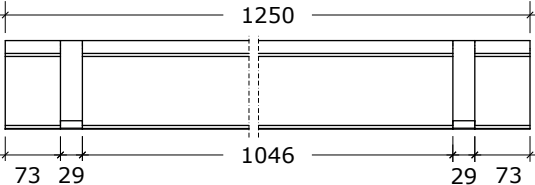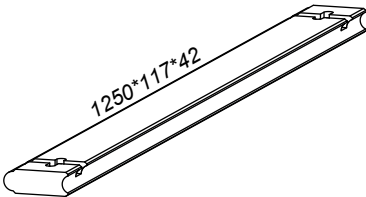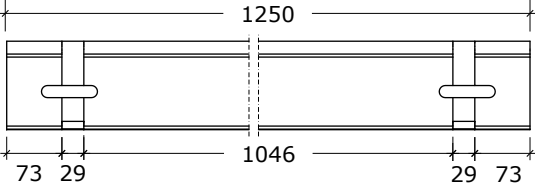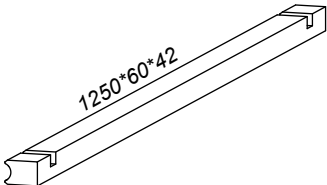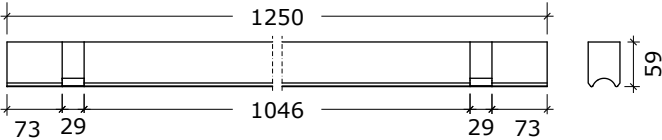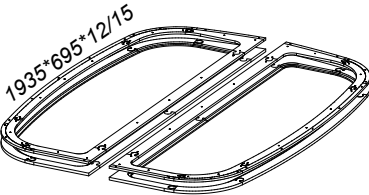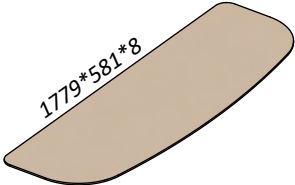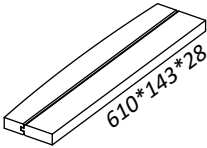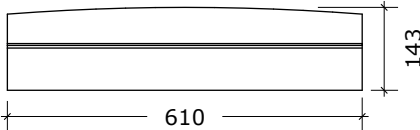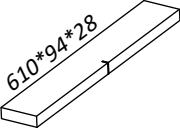DET 1 Article. <i>K-SM100/1050</i>	x2		
DET 2 Article. <i>K-SM100/1300</i>	x3		
DET 3 Article. <i>T-STL117/1250XLM02</i>	x1		
DET 3a Article. <i>T-STL117/1250-01</i>	x65		
DET 3a/H Article. <i>T-STL117/1250-01X</i>	x2		
DET 6 DET 3 vastaspool Article. <i>T-STL117/1250XL-01</i>	x2		
DET Frame (Front glass-wall) Article. <i>IC-20-TKE12/15-USA</i>	x1		
DET Glass (Front glass-wall) Article. <i>IC-20-ES</i>	x2		
DET Ta Article. <i>K-SL117/610UK1</i>	x1		
DET Tb Article. <i>K-TL94/610J</i>	x1		











Sauna "Icon" 125,Ø200

Details list 2/4

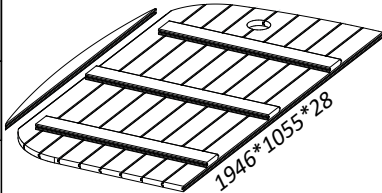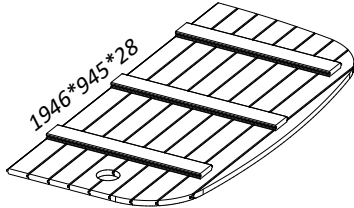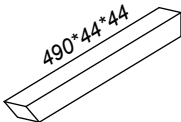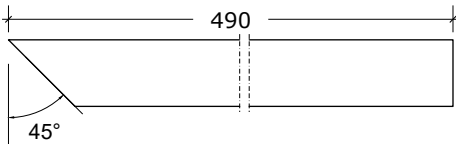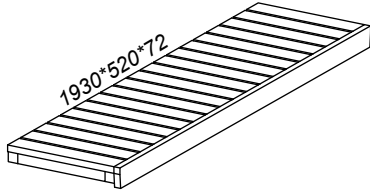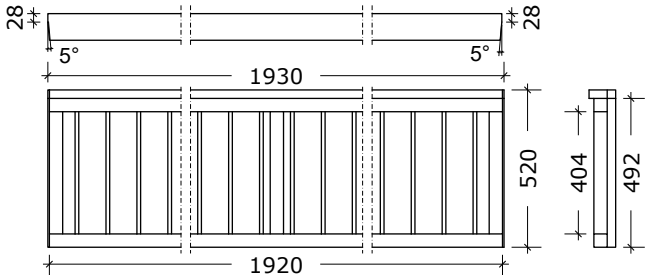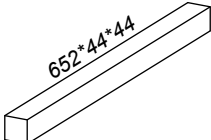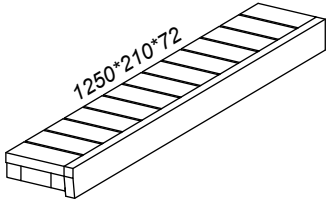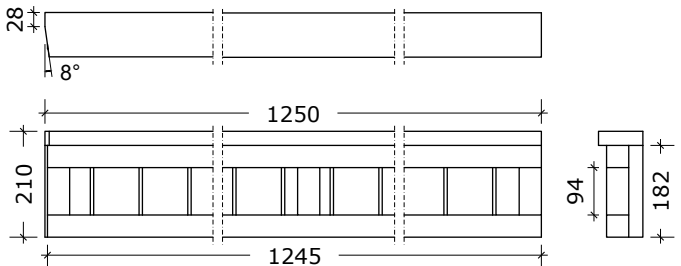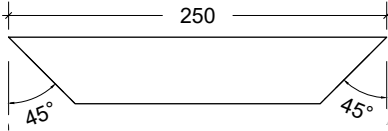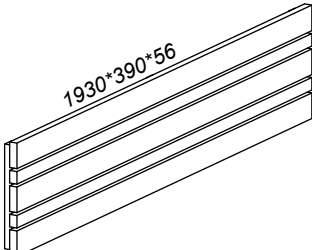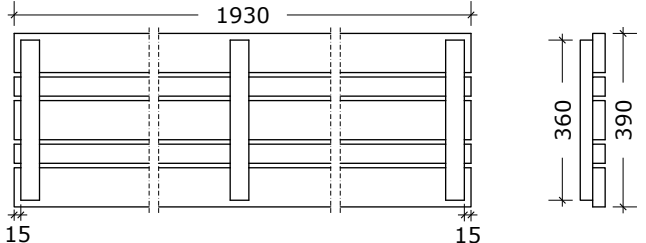DET Y1	x1		
Article. T-IC20-PTS/28-V			
DET Y2	x1		
Article. T-IC20-PTS/28-P			
DET 10a	x2		
Article. K-HP44/490XP			
DET 10c	x1		
Article. K-HP44/170			
DET 10	x1		
Article. TL-LAMOD-1930-01			
DET 11a	x1		
Article. K-HP44/652			
DET 11	x1		
Article. TL-LAMOD-1250-01			
DET 11b	x1		
Article. K-HP44/250XP-XP			
DET 14	x1		
Article. TL-STMOD-1930-01			












Sauna "Icon" 125,Ø200

Details list 3/4

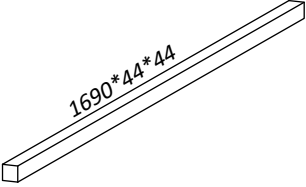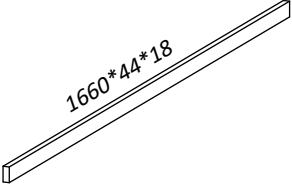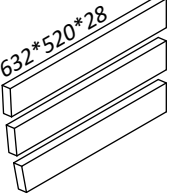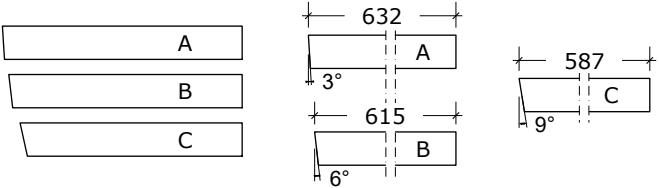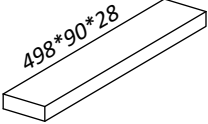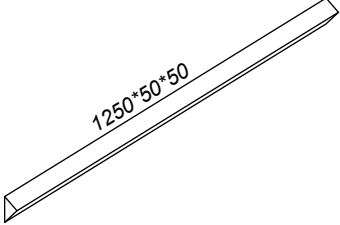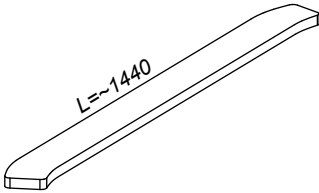
DET 21	x1		
Article. U-6/17			
DET 21c	x2		
Article. K-HP44/1690			
DET 21d	x2		
Article. K-HP44/680			
DET 21a	x2		
Article. K-HL44/1660			
DET 21b	x2		
Article. K-HL44/650			
DET 16	x1		
Article. TL-PIMOD-632-02			
DET 15	x1		
Article. TL-LAV90/498			
DET 22	x2		
Article. T-STL-1250-XX			
DET 25a	x8		
Article. MU-OL-IC-20-1			
DET 25b	x8		
Article. MU-OL-IC-20-2			

Sauna "Icon" 125,Ø200


Details list 4/4

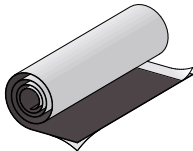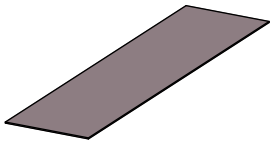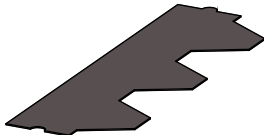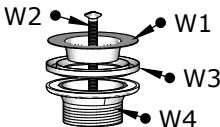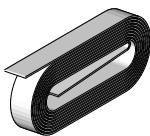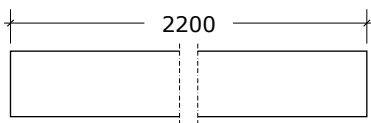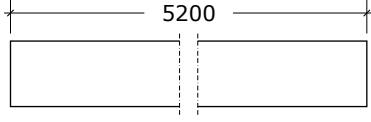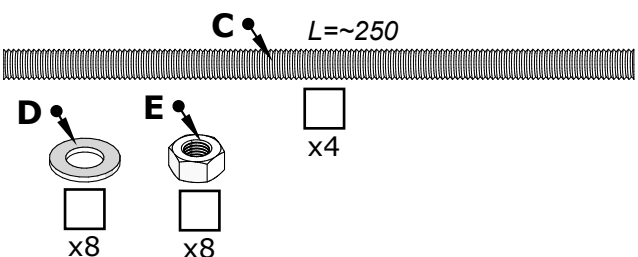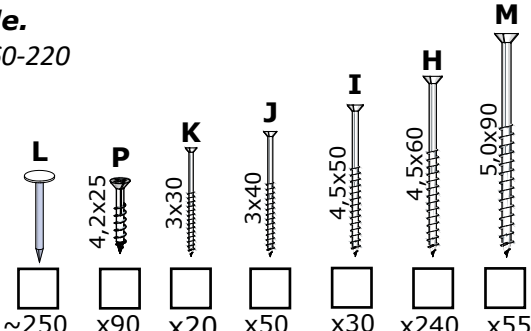Underlay felt	8 m.		
Article. KAT-AL			
DET N	x5		
Article. KAT-HAR			
DET O	x42		
Article. KAT-SIN			
DET W	x1 kmpł		
Article. MU-TRAPP			
DET V	x4		
Article. KI-VIN-25/40/40-ZN			
DET A1	x2		
Article. MU-VIT10/2200			
DET A2	x2		
Article. MU-VIT10/5200			
DET B	x8		
Article. MU-VITKL-RV			
DET G	x1		
Article. MU-VENT-100-PU			
DET F	x3		
Article. MU-VENT-100-ZN			
Article. KI-KERL-12-RV4		Article. KI-ICO-160-220	
			


Sauna "Icon" 125,Ø200

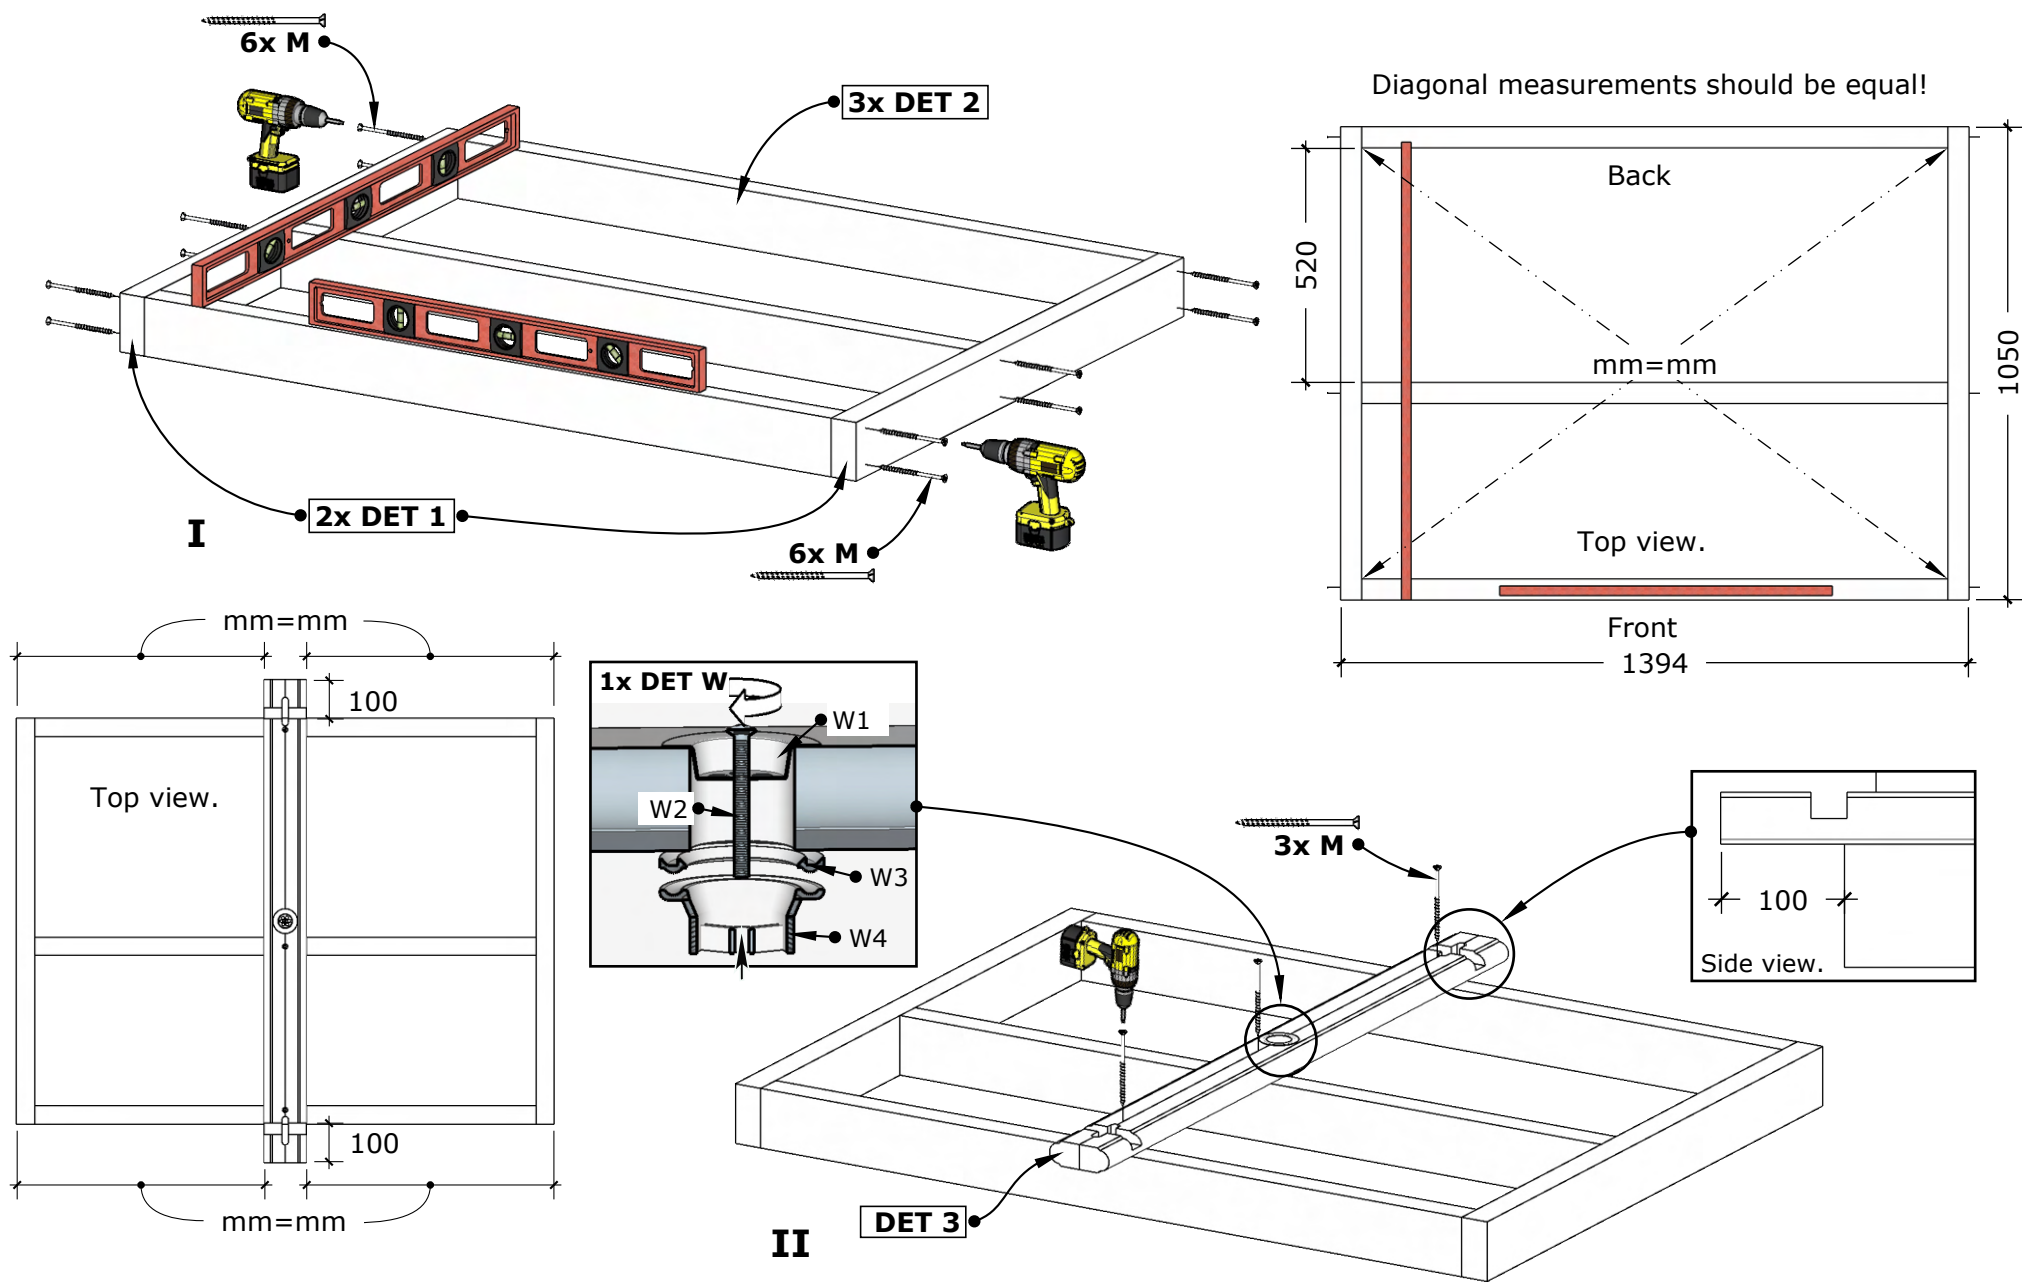

Sauna "Icon" 125,Ø200

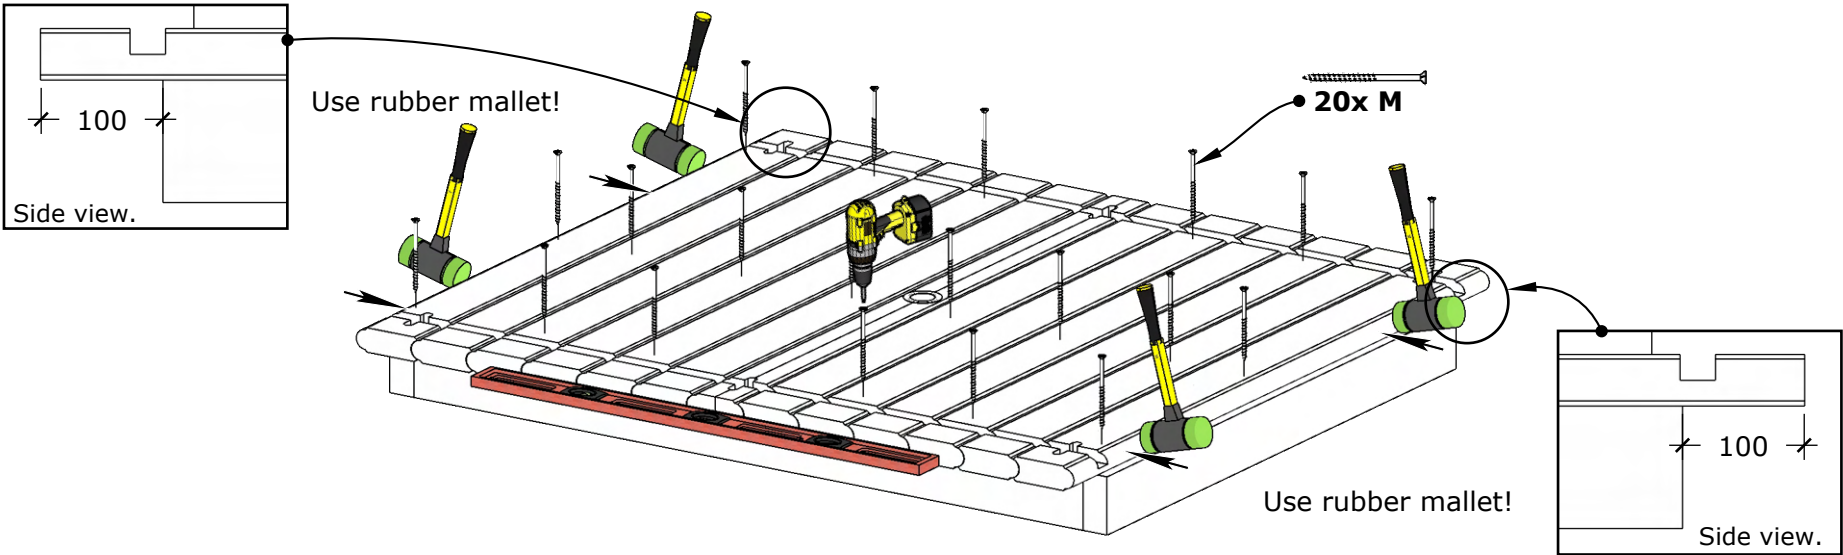


Fix screws over the one board, diagonally in every board.

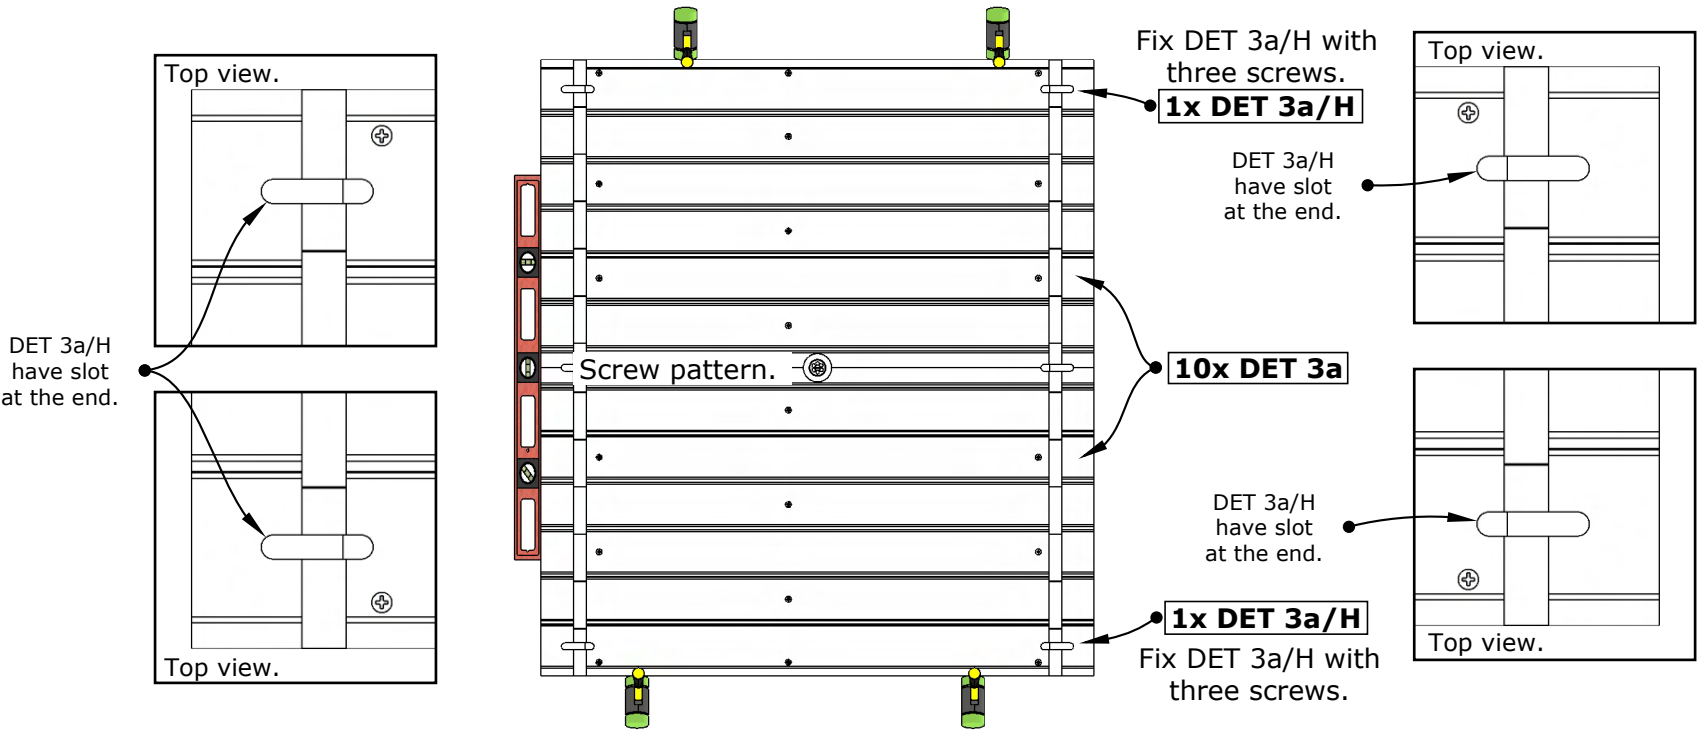


Sauna "Icon" 125, Ø200

Front glass wall assembly

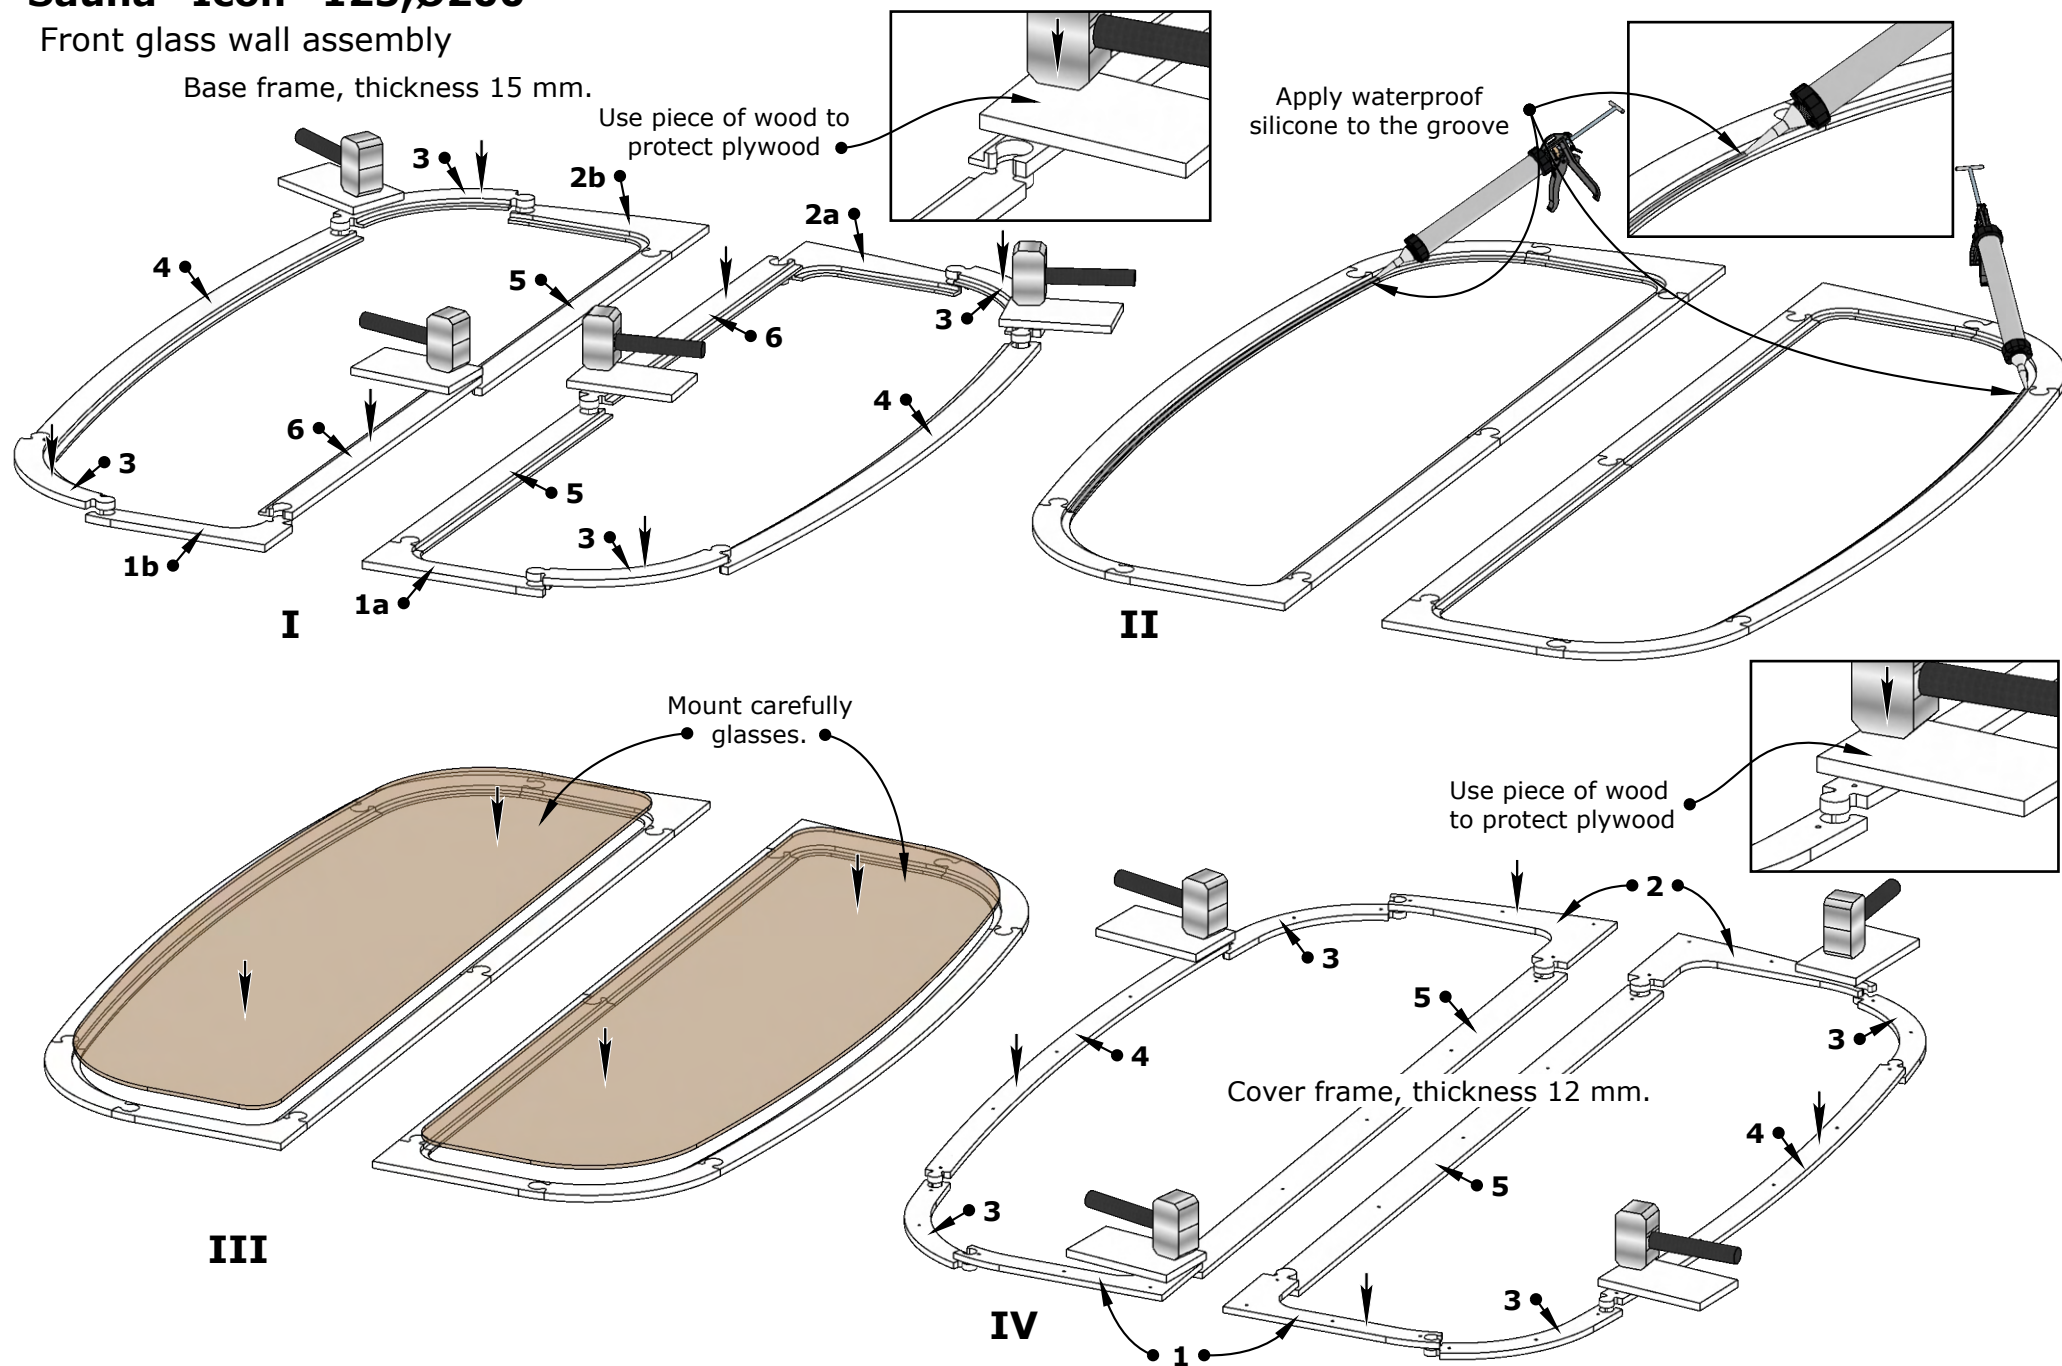


Sauna "Icon" 125,Ø200

Front glass wall assembly

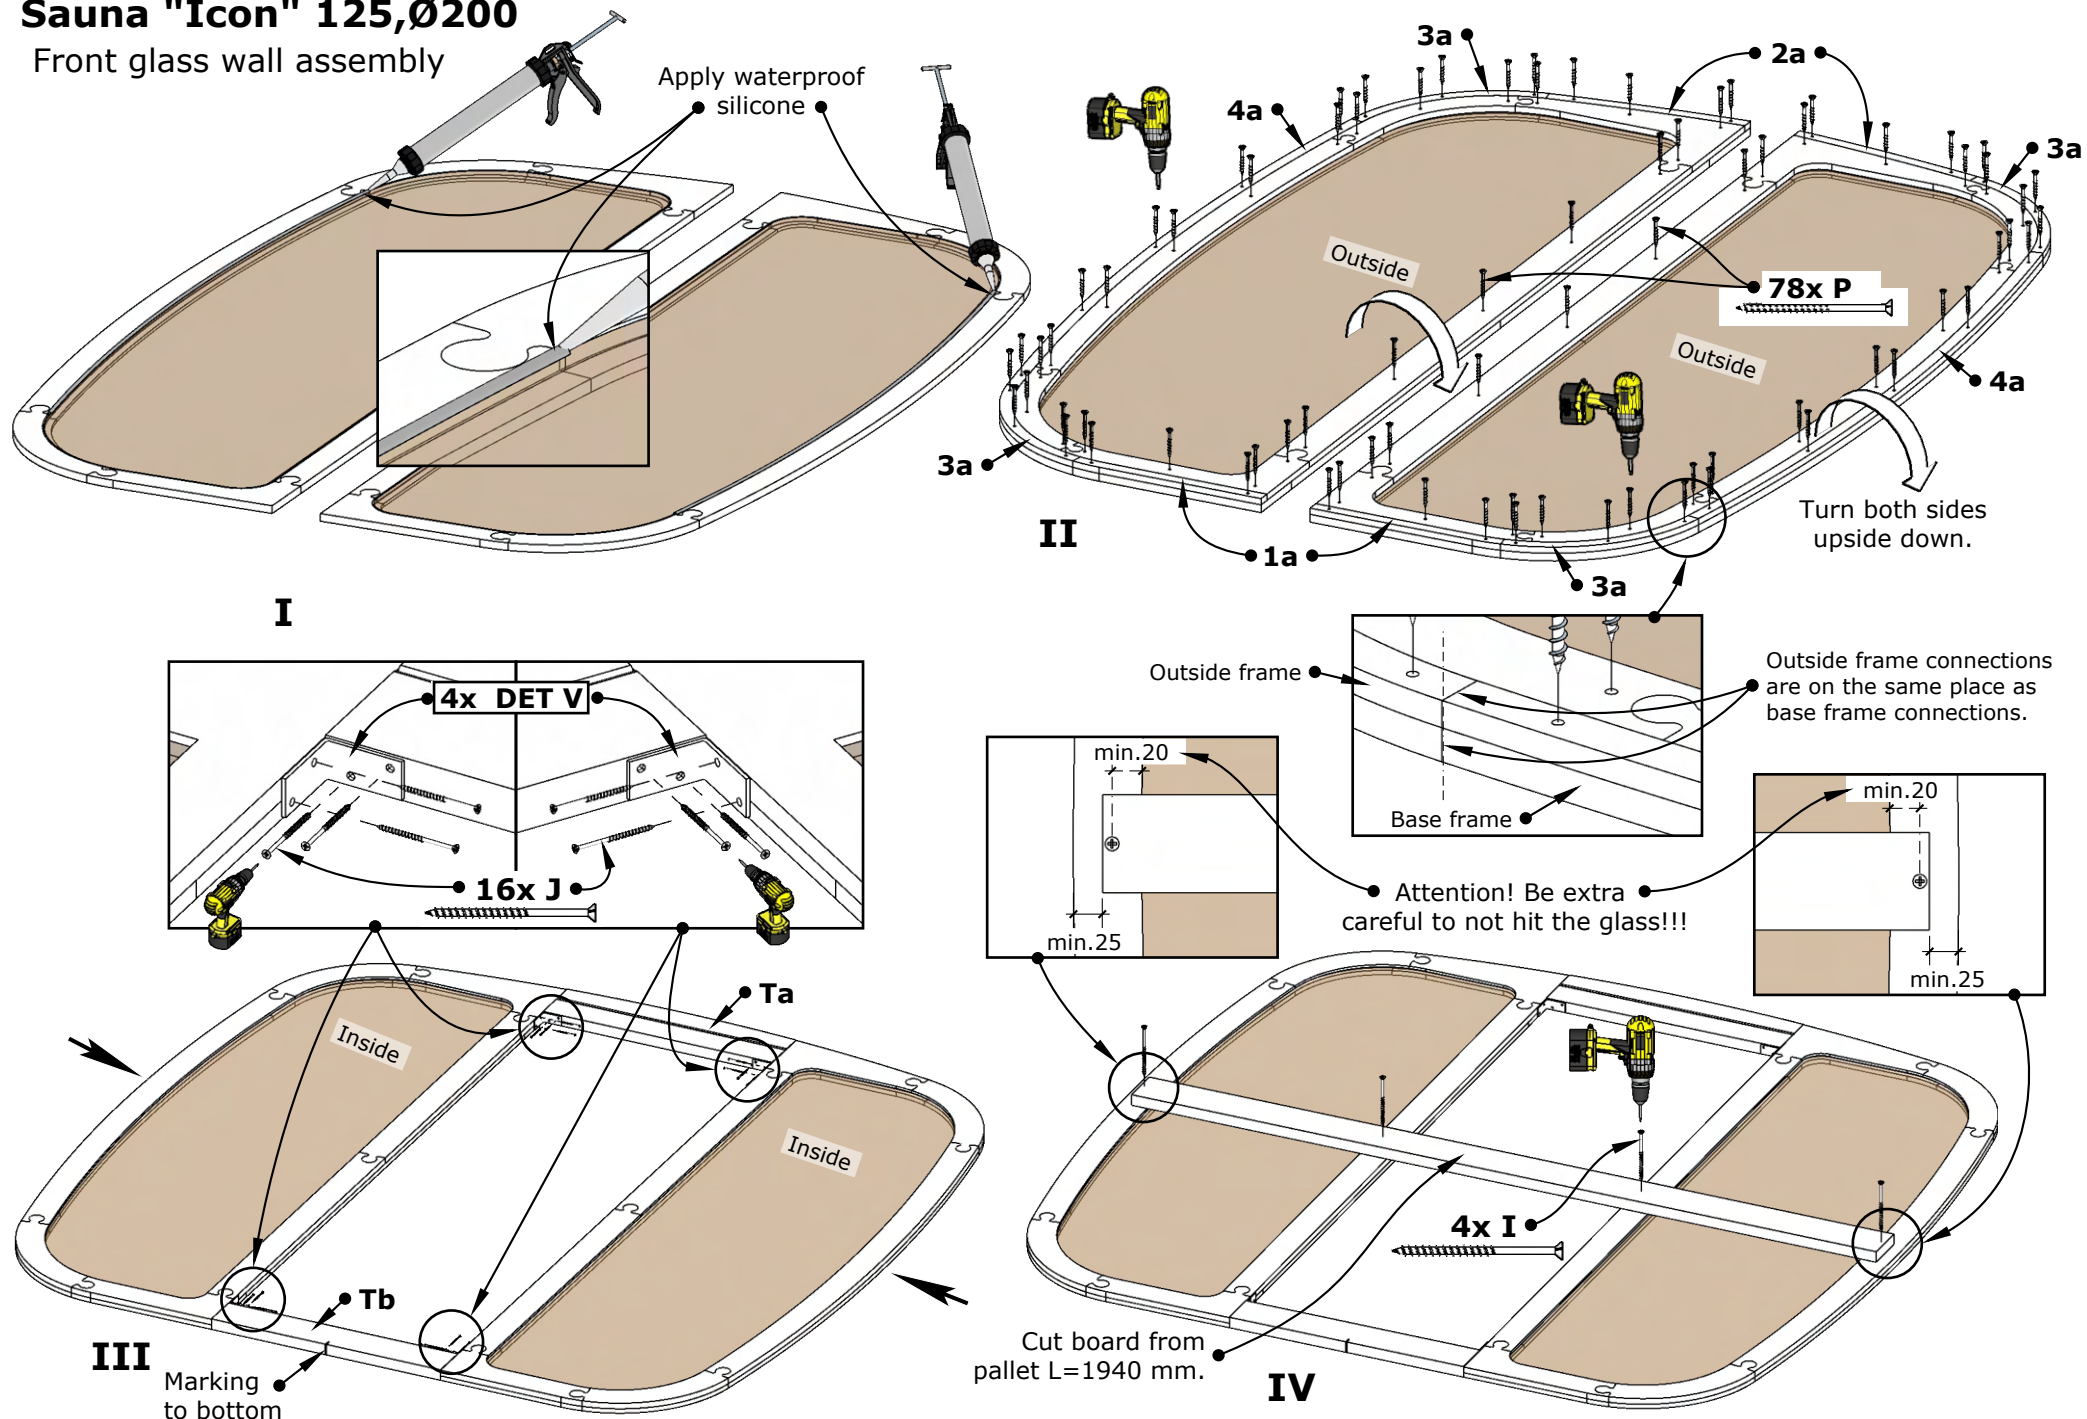



Sauna "Icon" 125,Ø200

Wooden back wall assembly


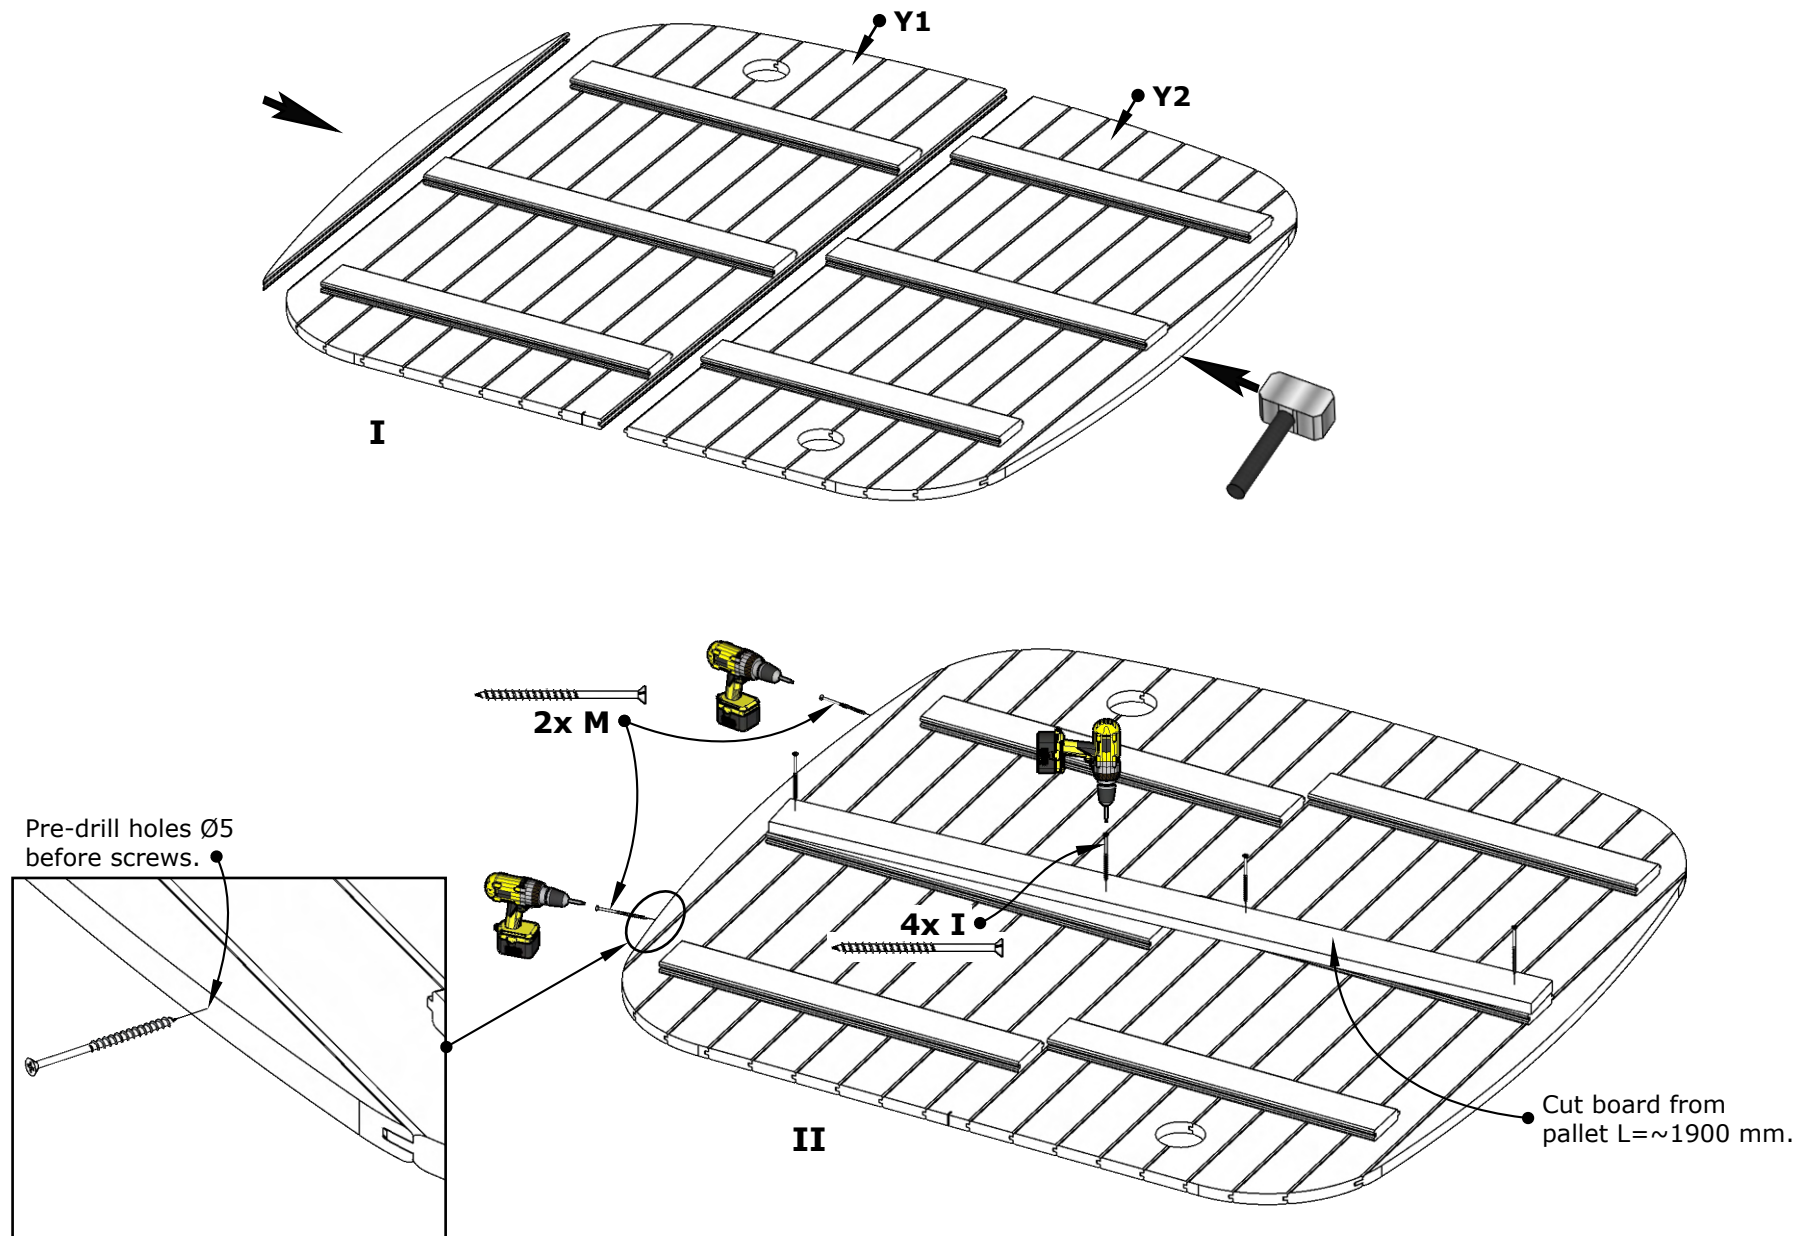


Sauna "Icon" 125,Ø200

Use waterlevel

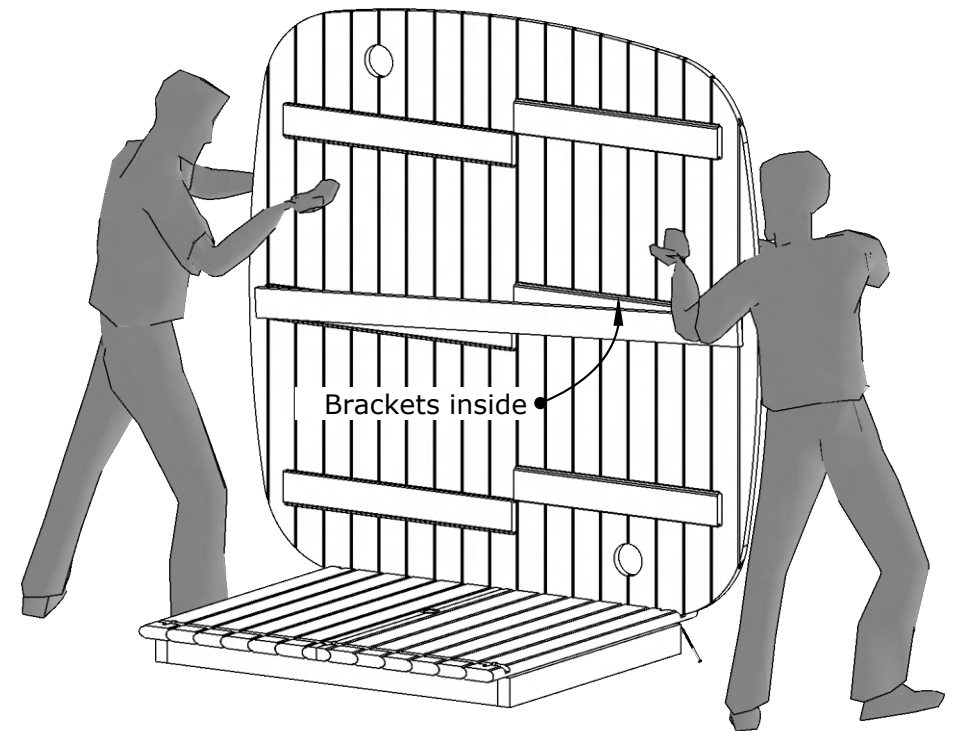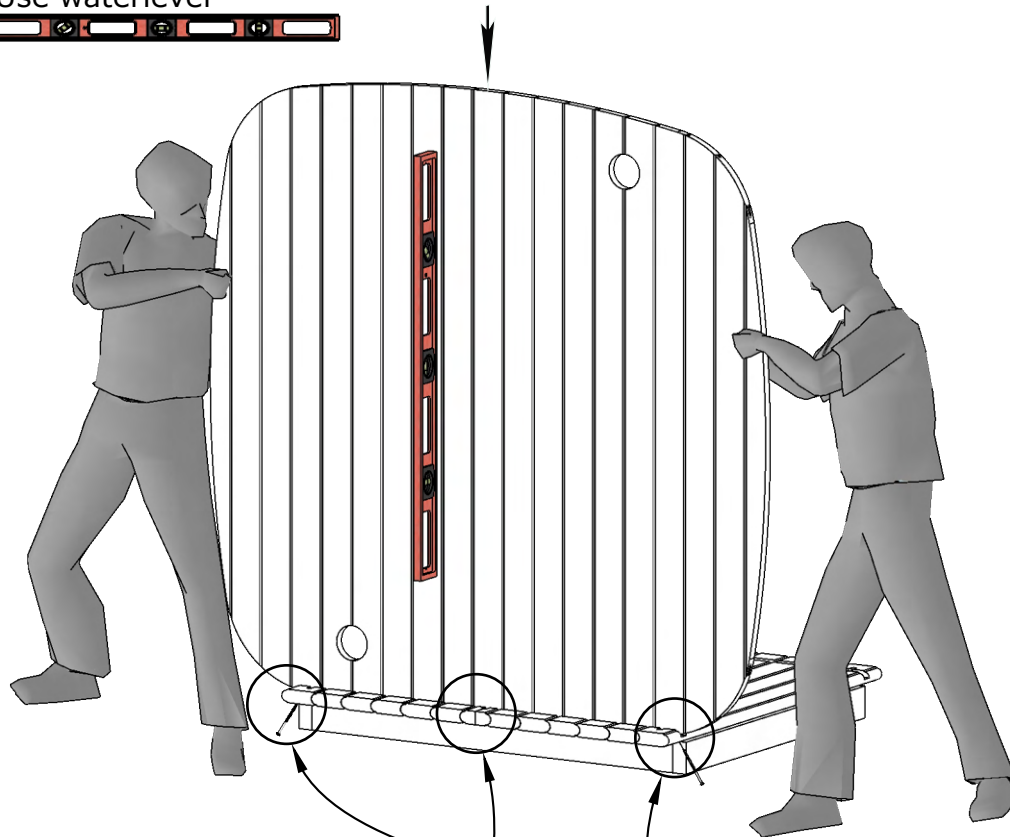

Make sure the marking on the wall is centered in the notch.

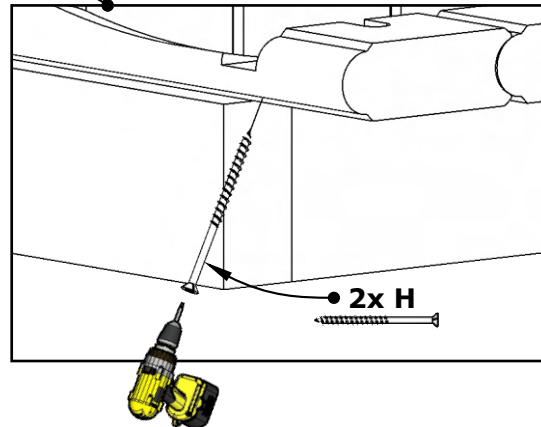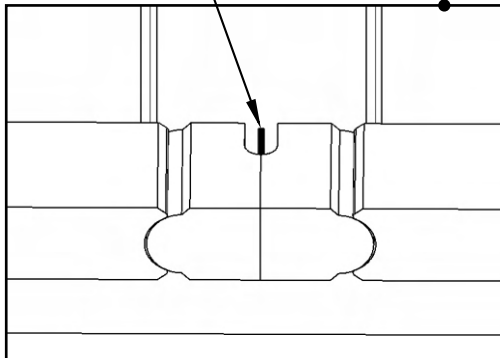


6.

(TIC20/125KE-PT01)

Sauna "Icon" 125,Ø200



Use waterlevel

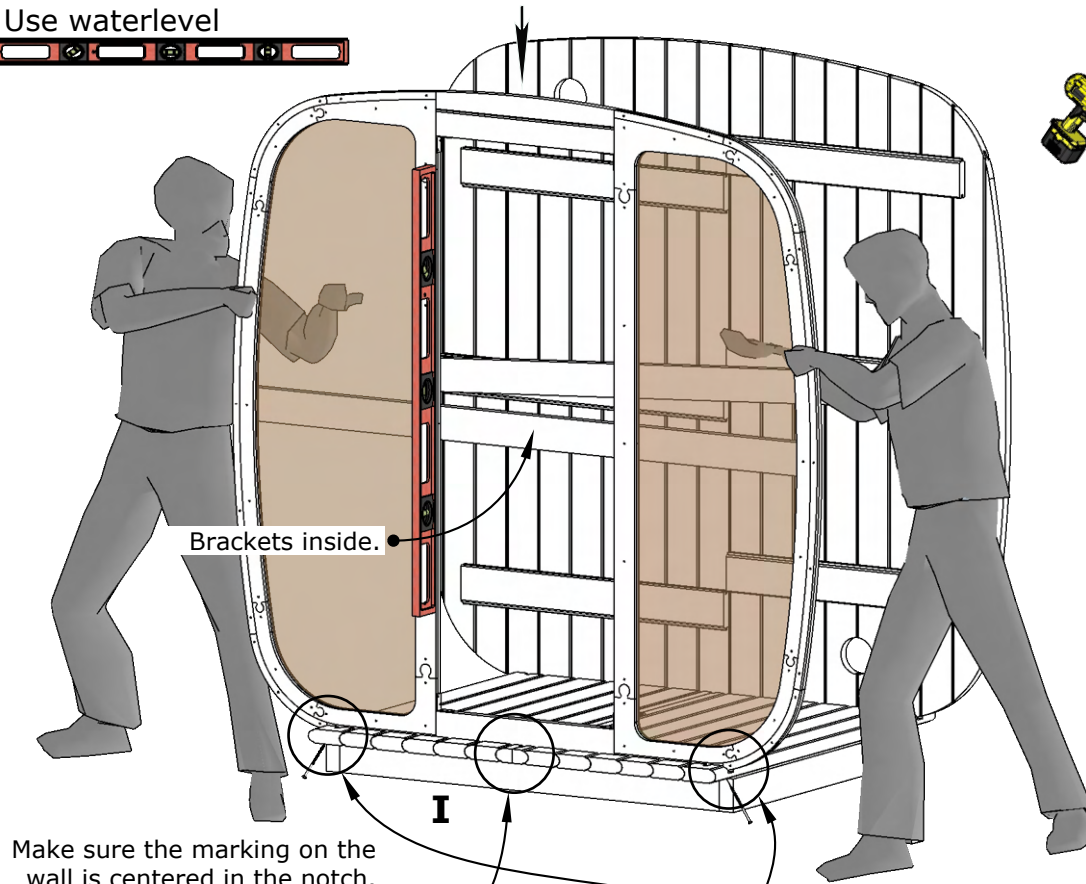


Brackets inside.

Make sure the marking on the wall is centered in the notch.

I

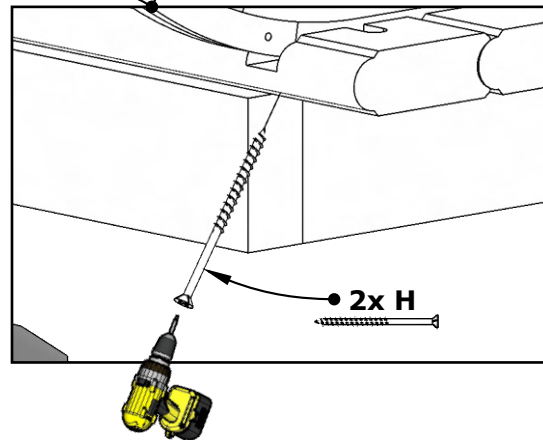
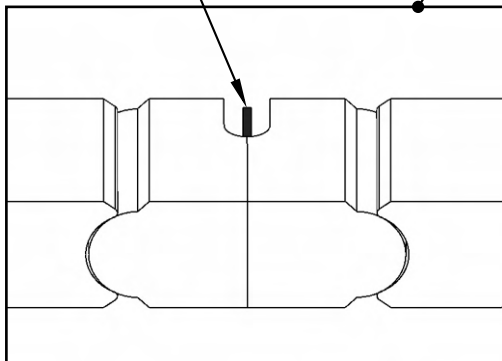


• 2x H •



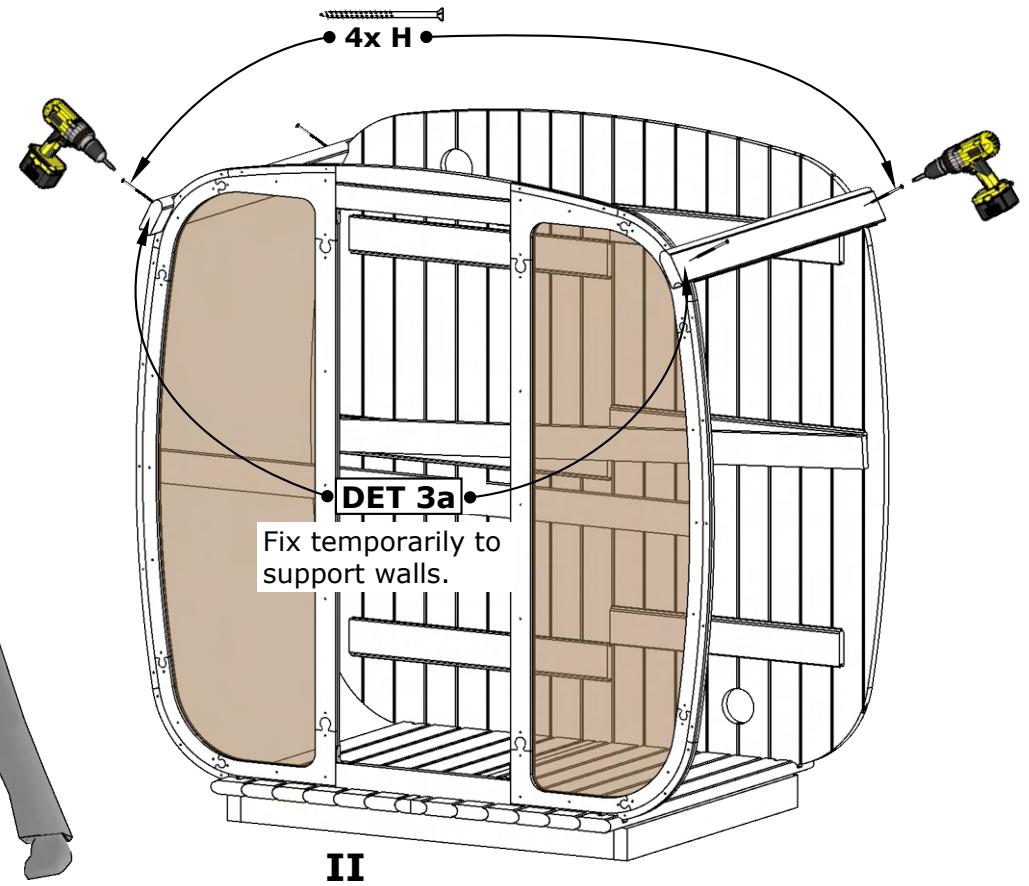


II

Sauna "Icon" 125,Ø200

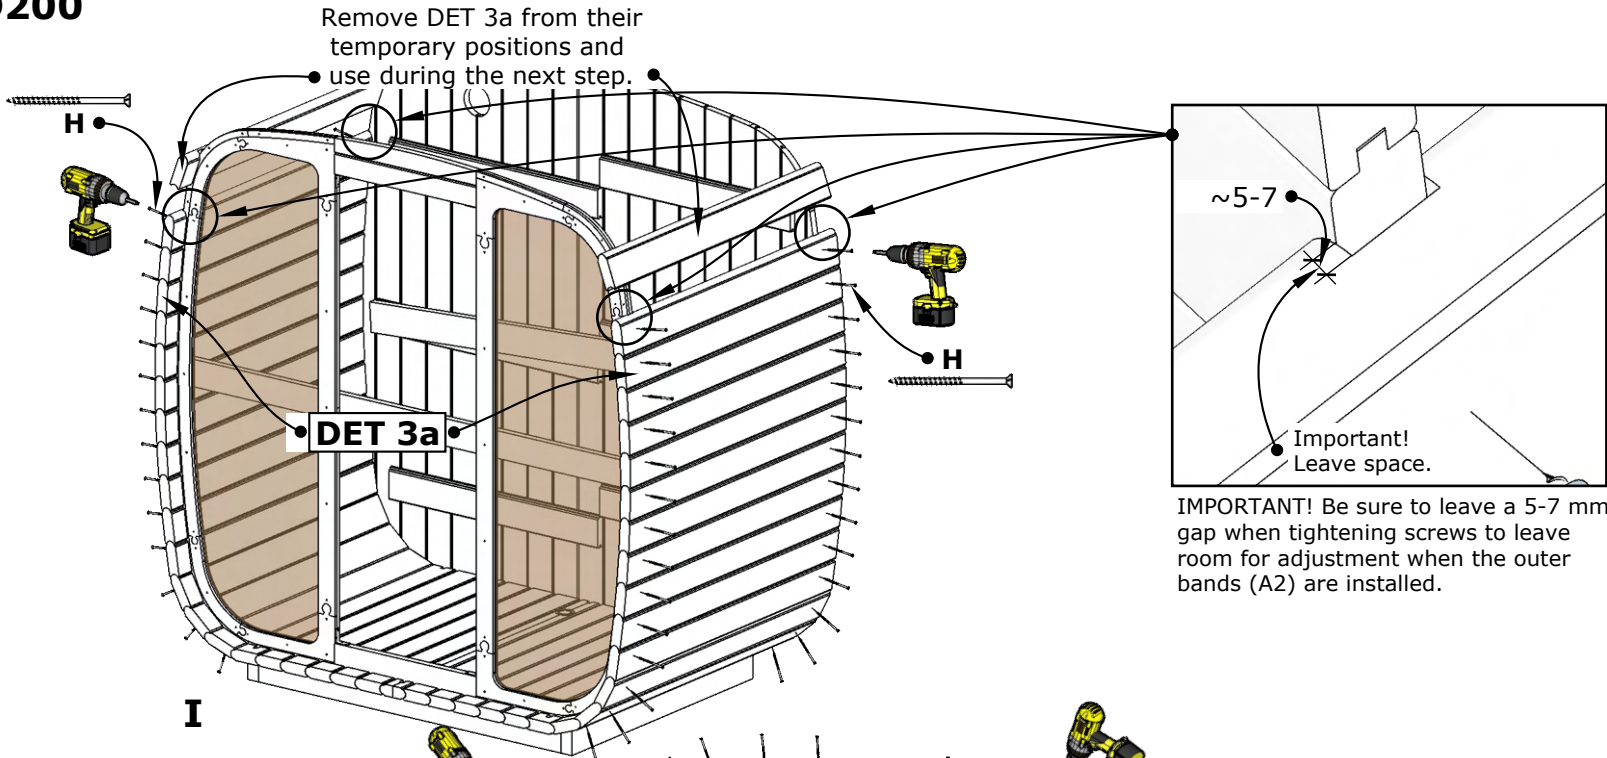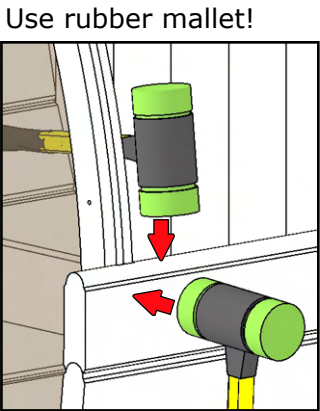


IMPORTANT! Be sure to leave a 5-7 mm. gap when tightening screws to leave room for adjustment when the outer bands (A2) are installed.


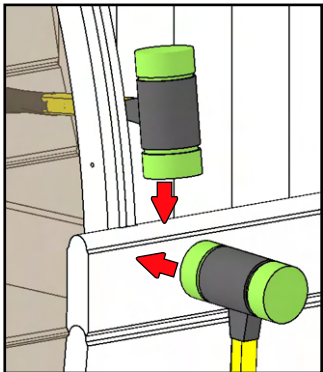
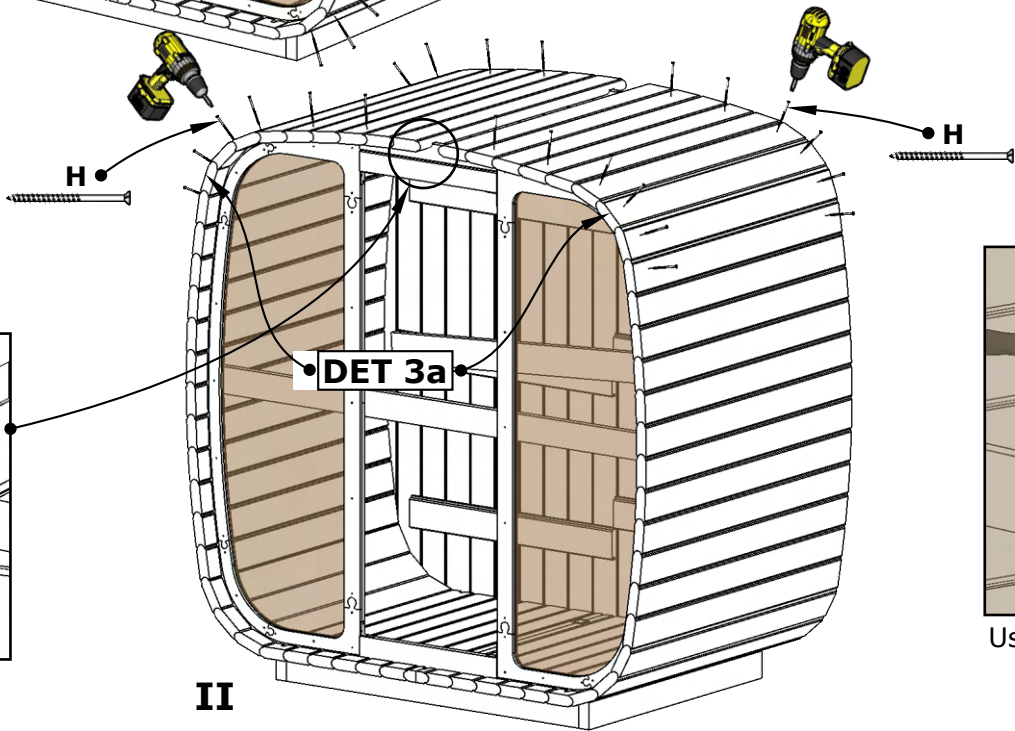
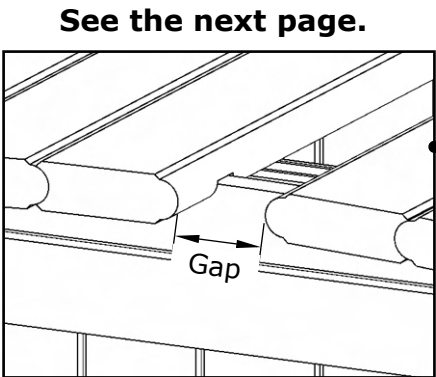


Use rubber mallet!




Sauna "Icon" 125,Ø200

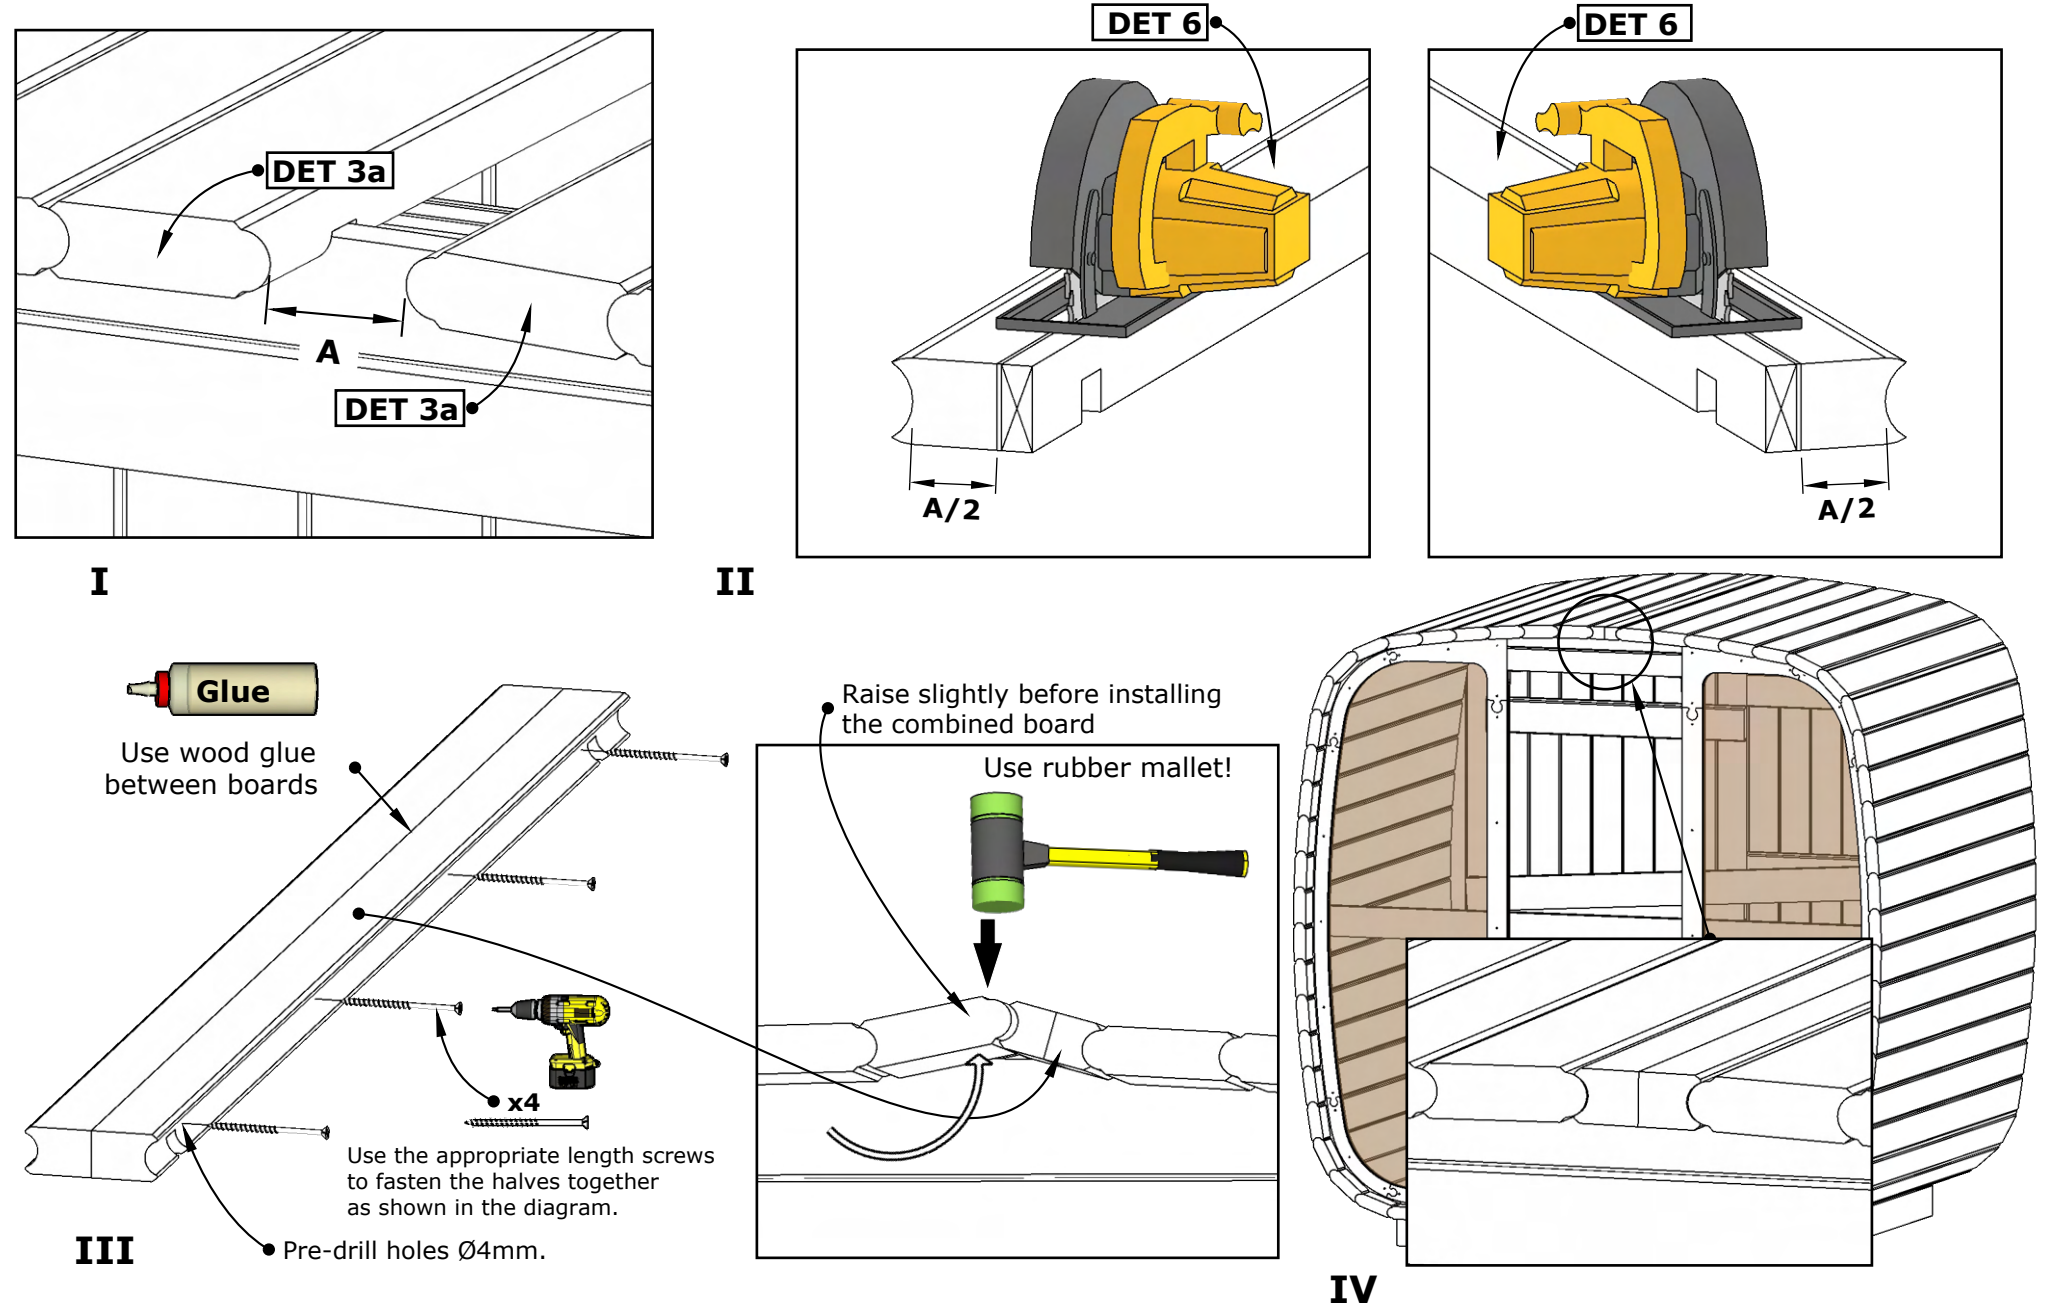

Sauna "Icon" 125,Ø200

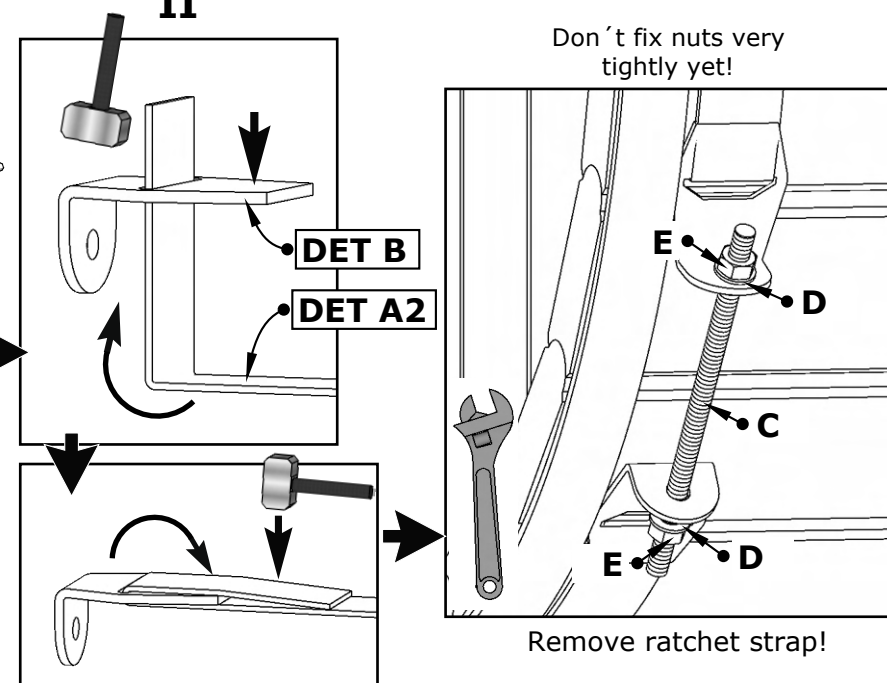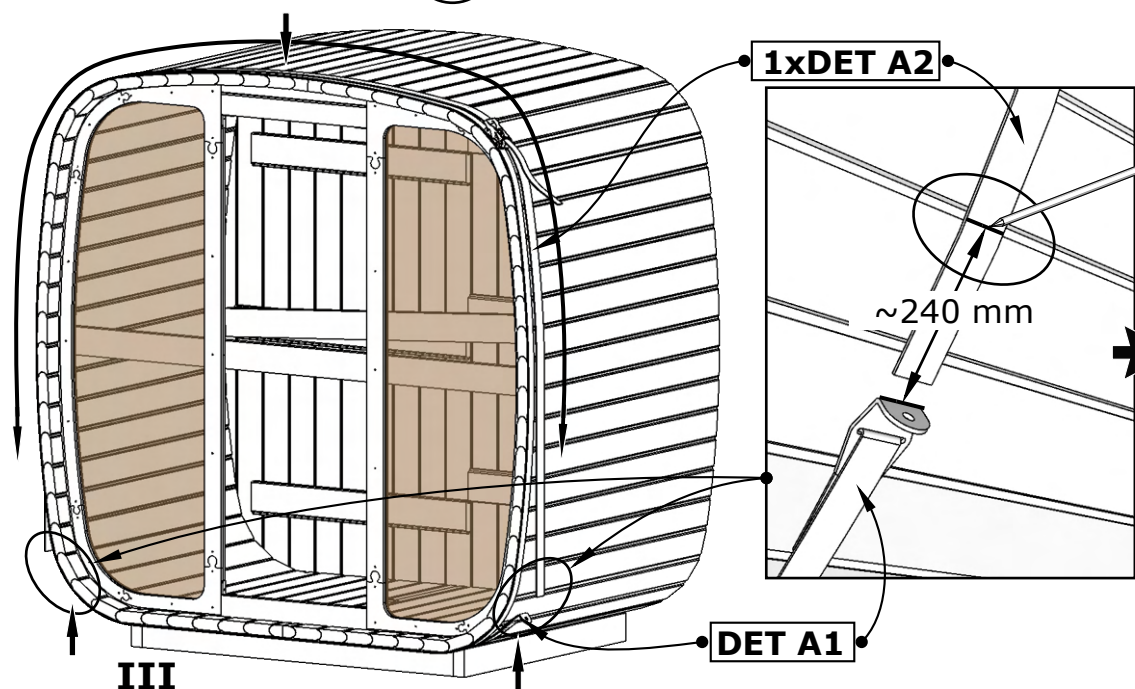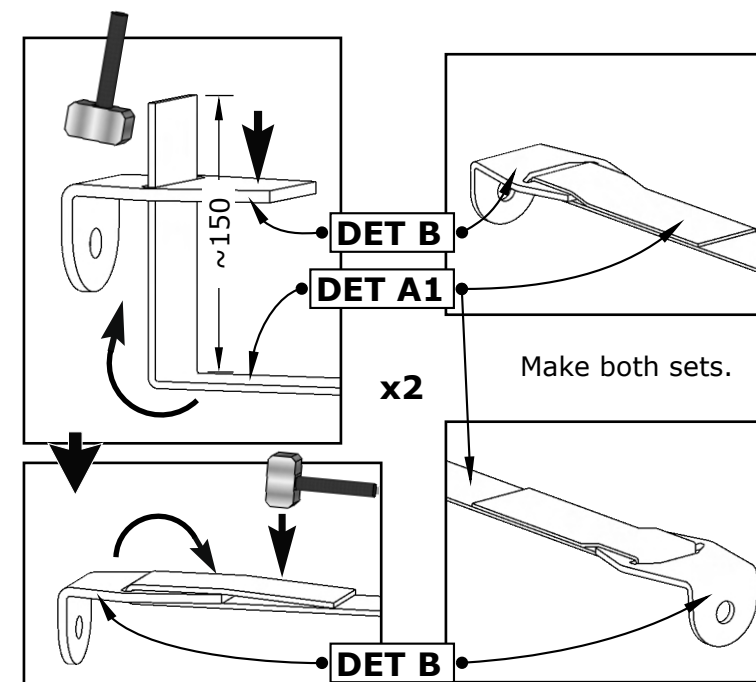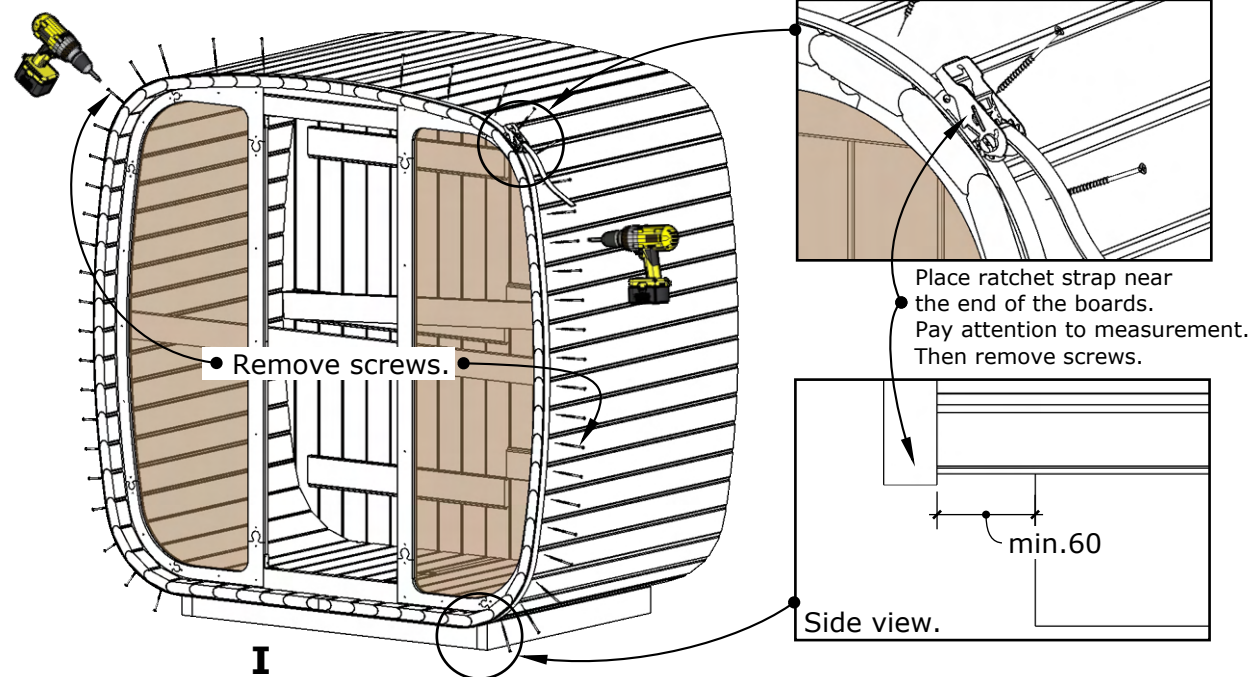


Sauna "Icon" 125,Ø200

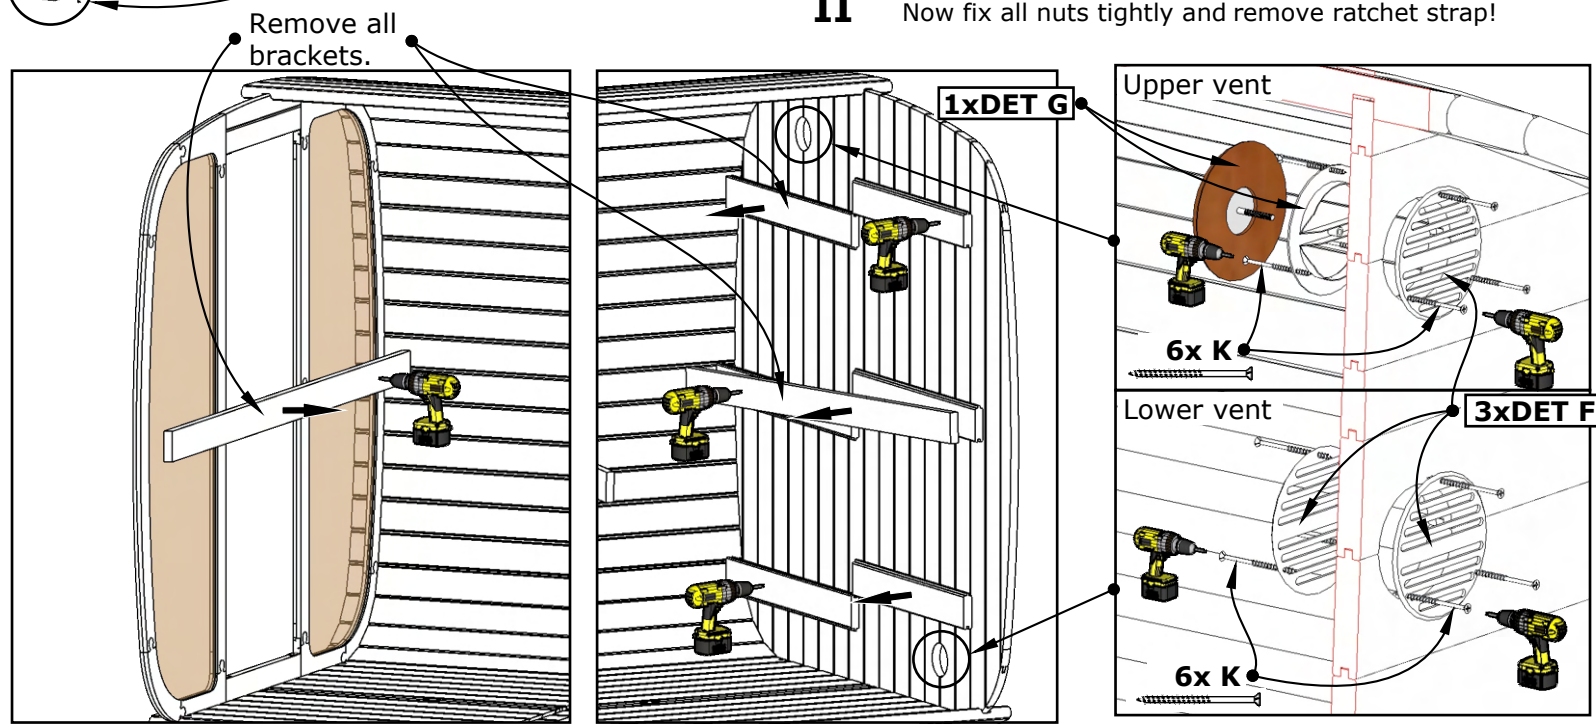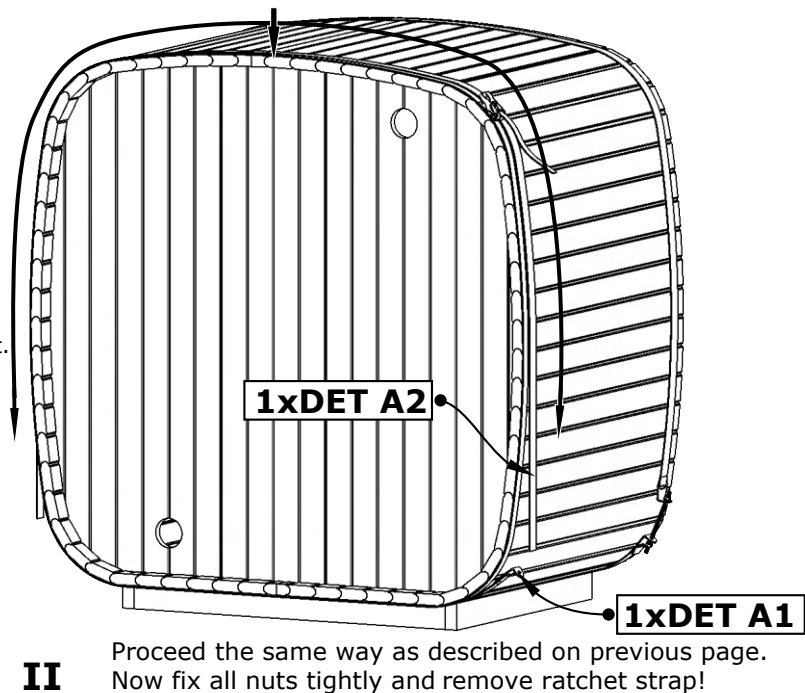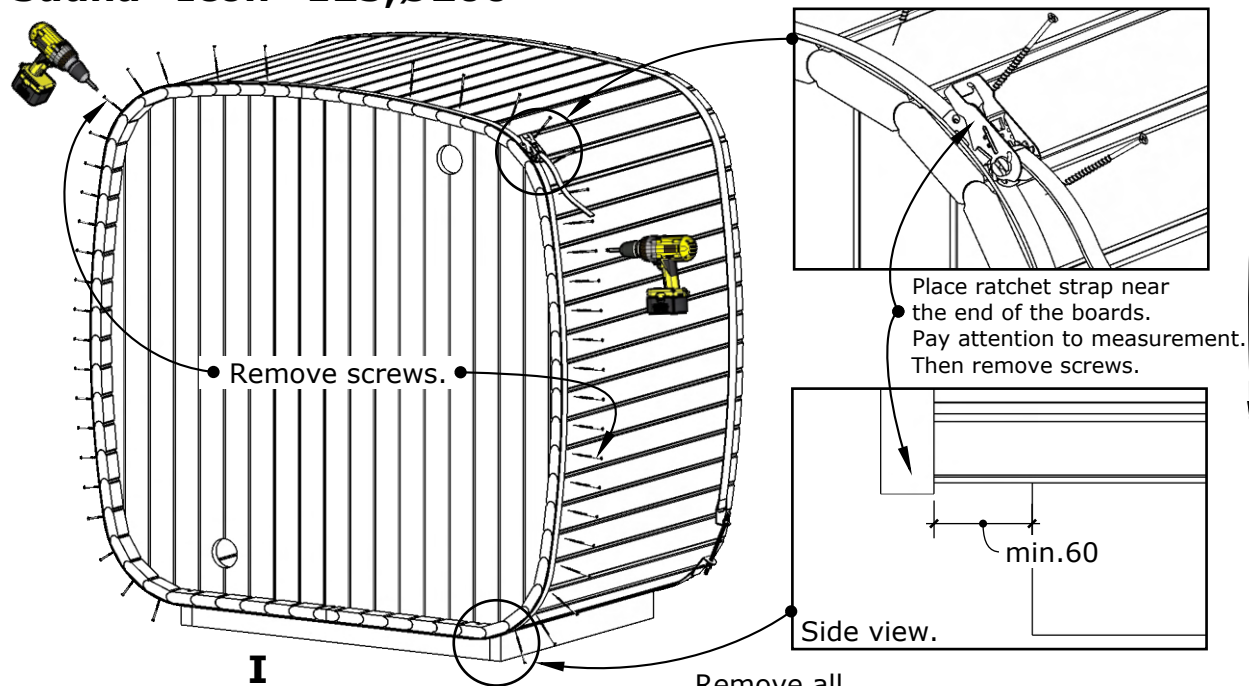


Sauna "Icon" 125,Ø200


Use waterlevel for installation!

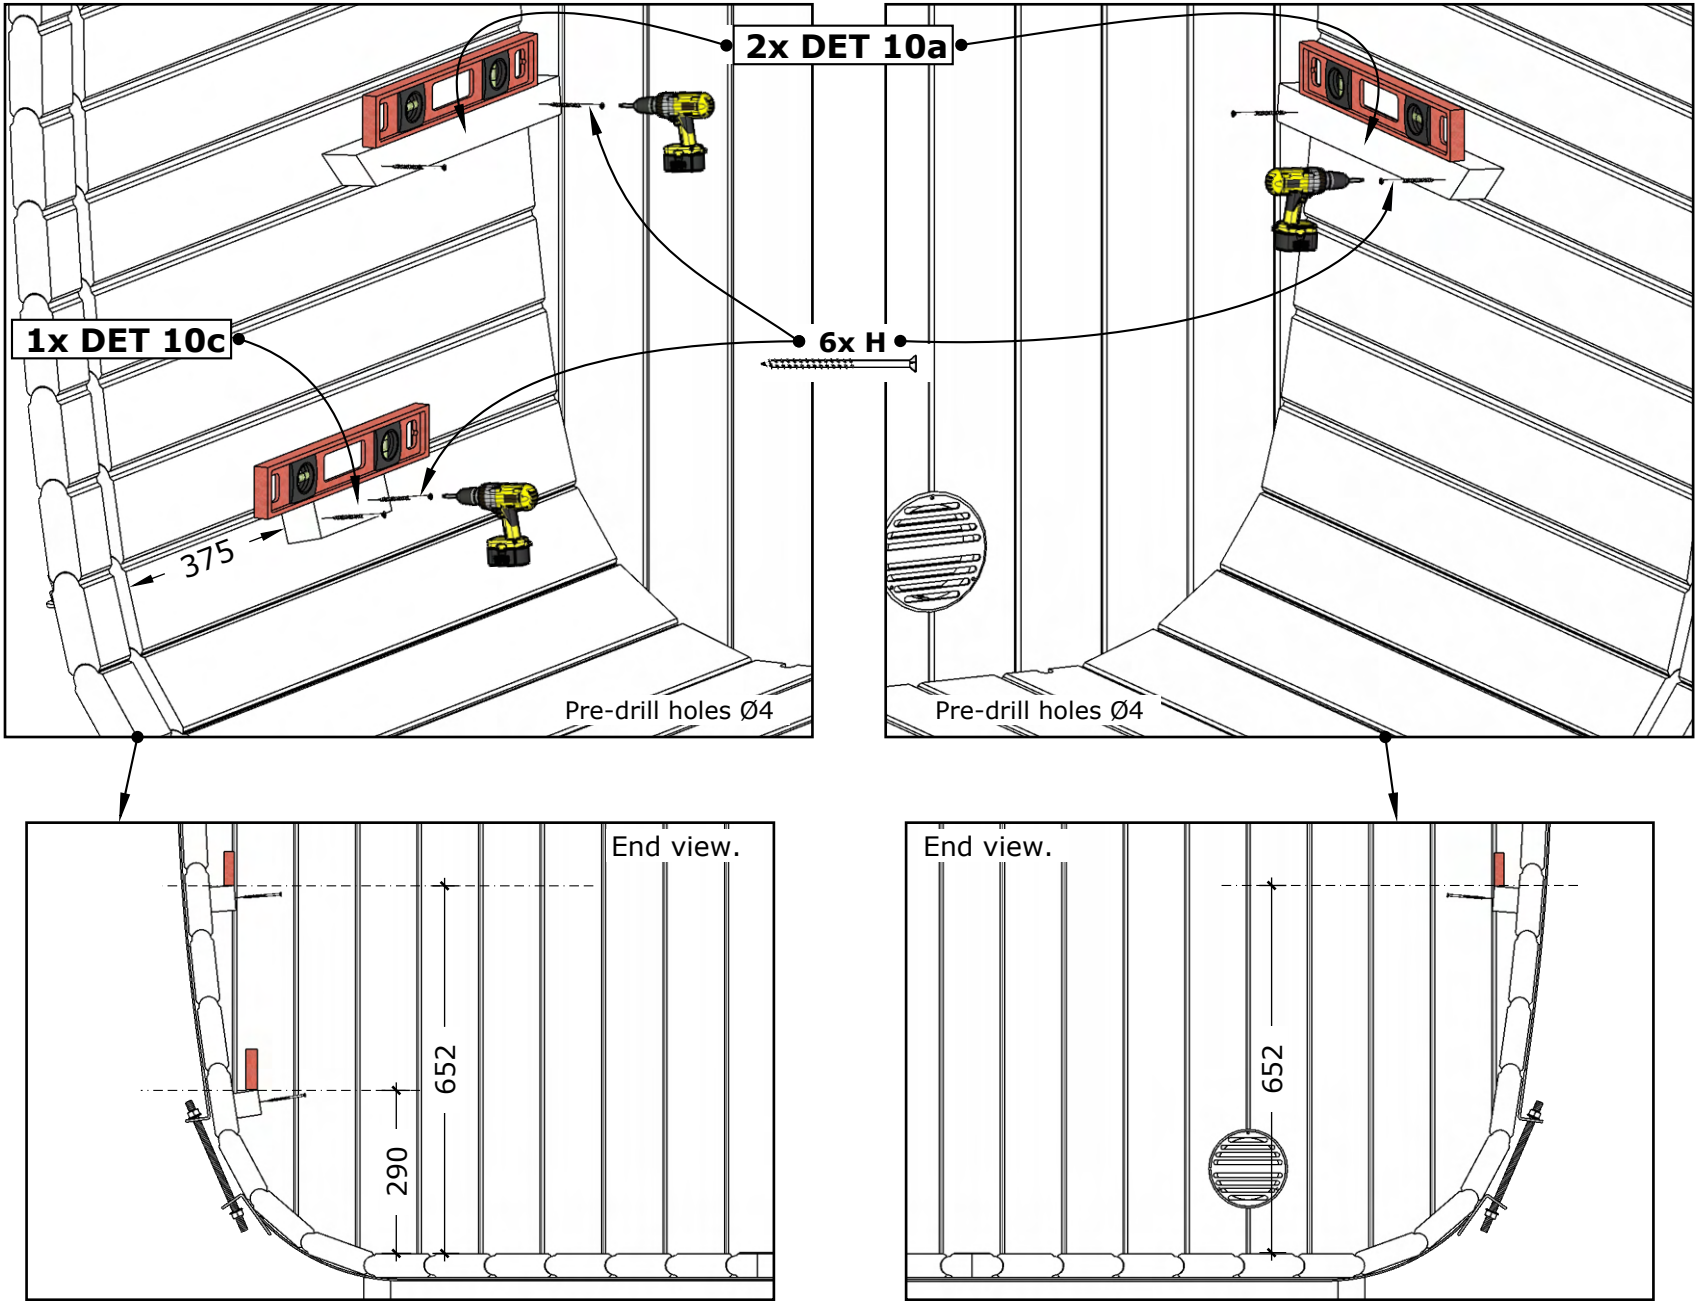


Sauna "Icon" 125,Ø200

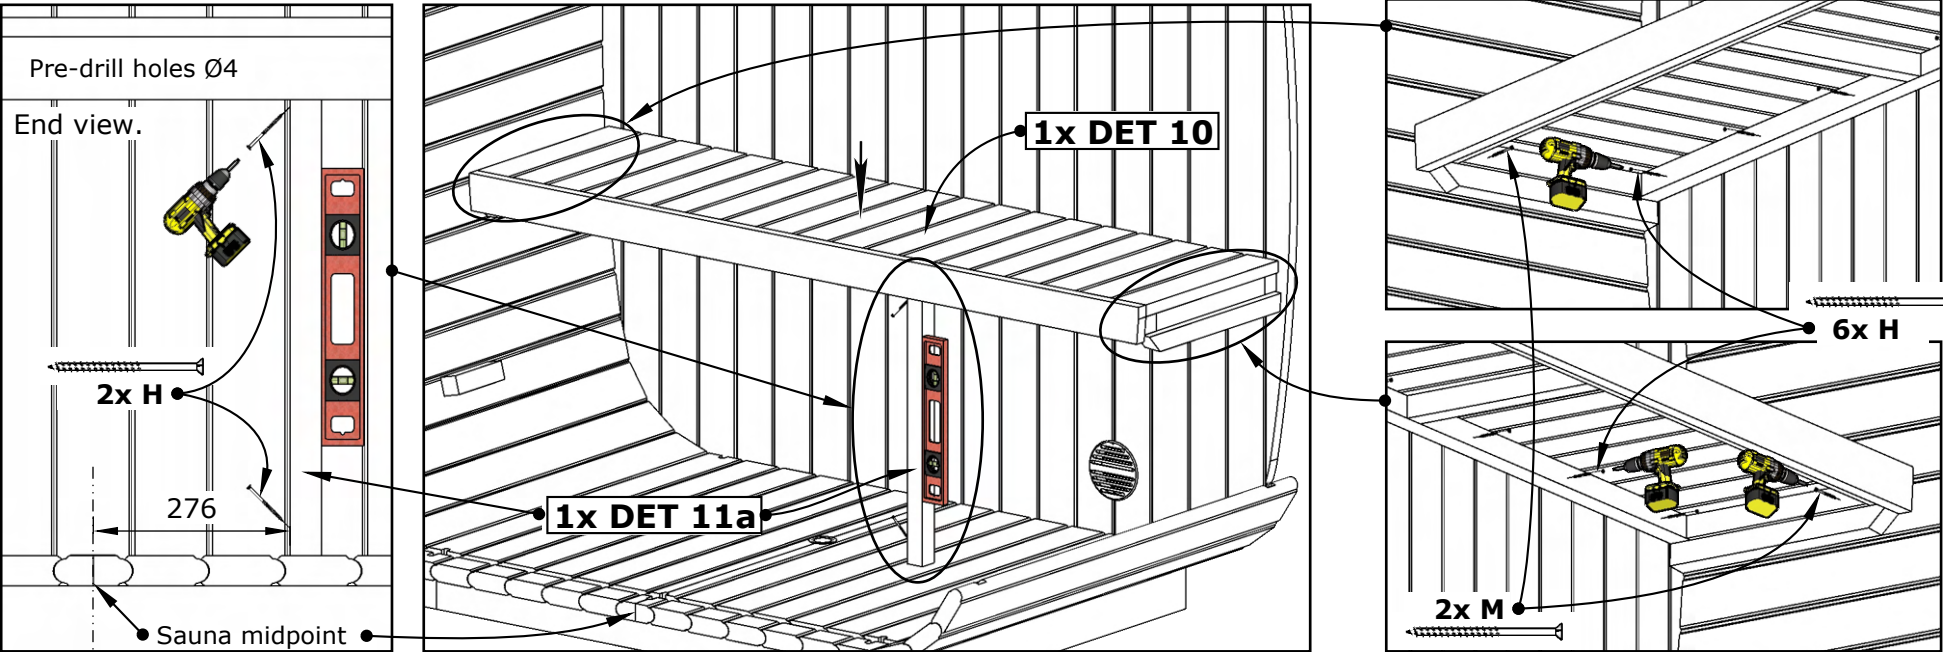

I

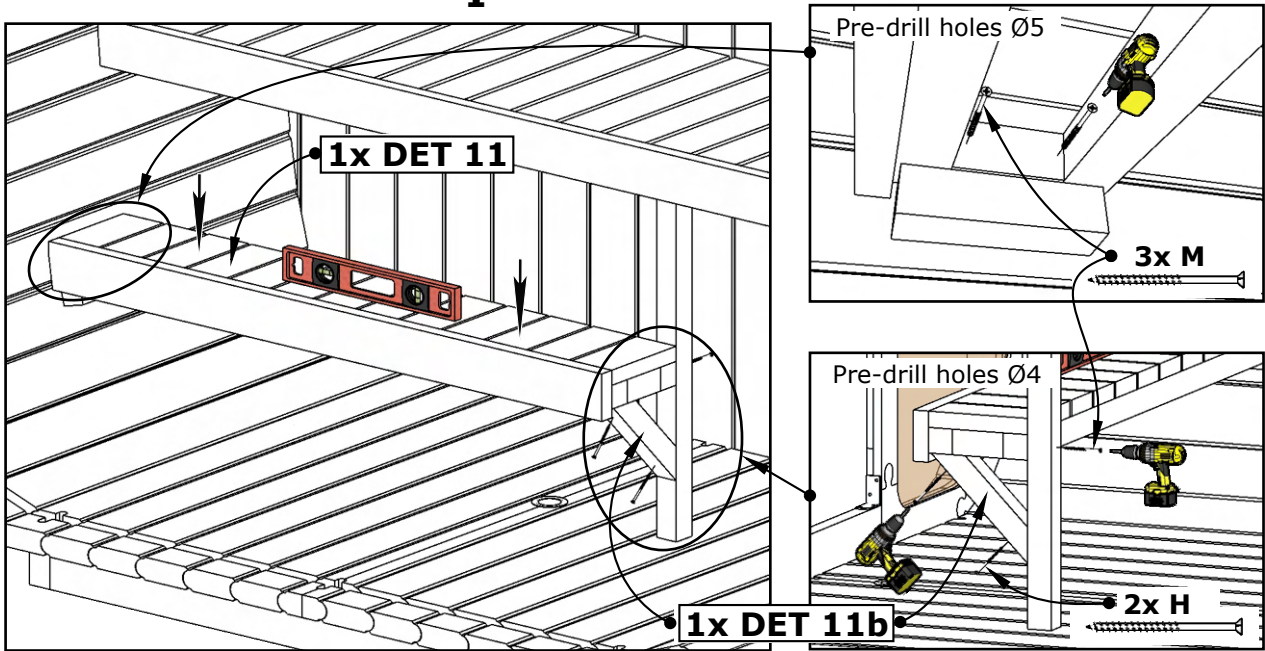


II

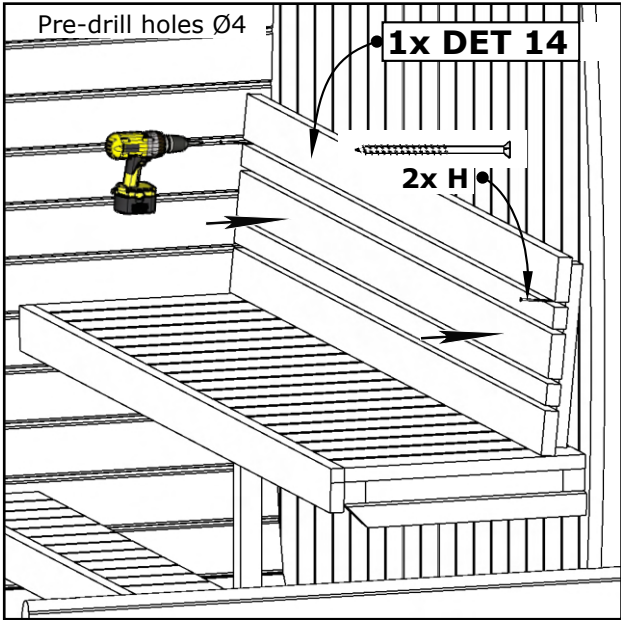


III


Sauna "Icon" 125,Ø200

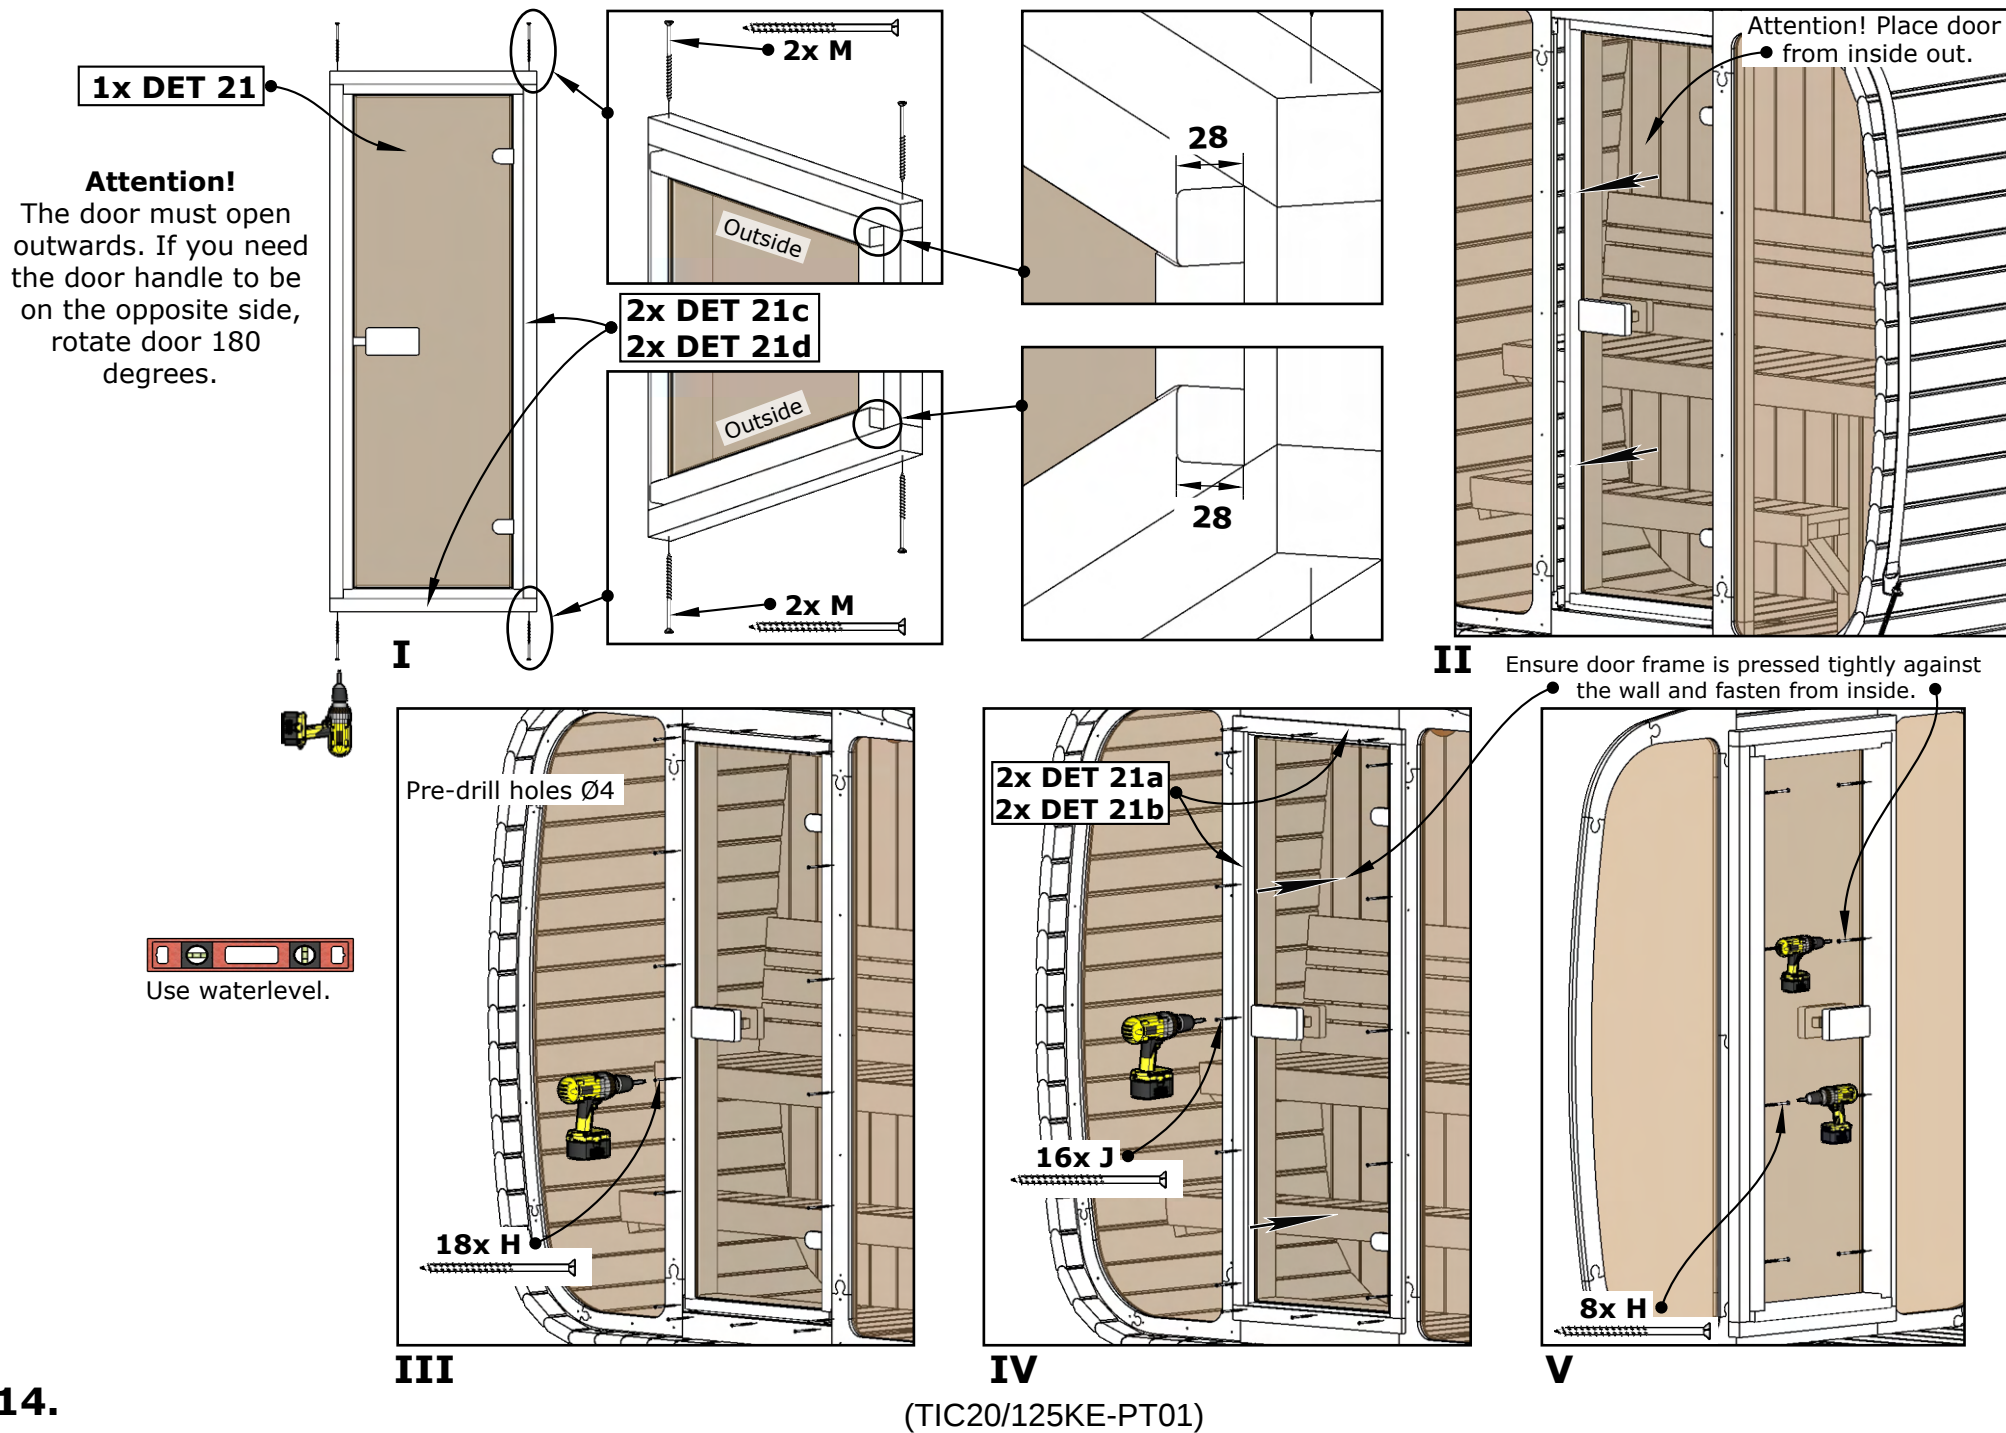



Sauna "Icon" 125,Ø200

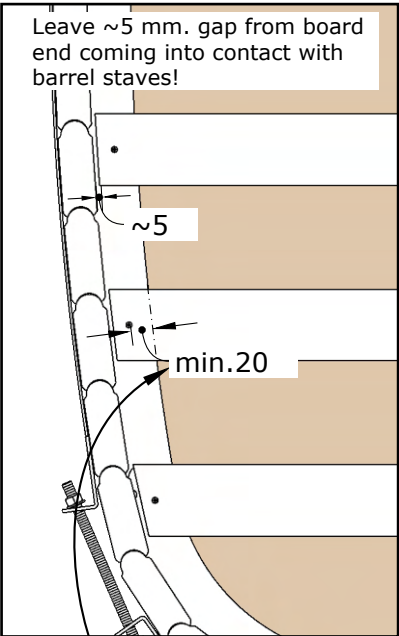



Please be careful!!! Do not hit the glass with the screw.

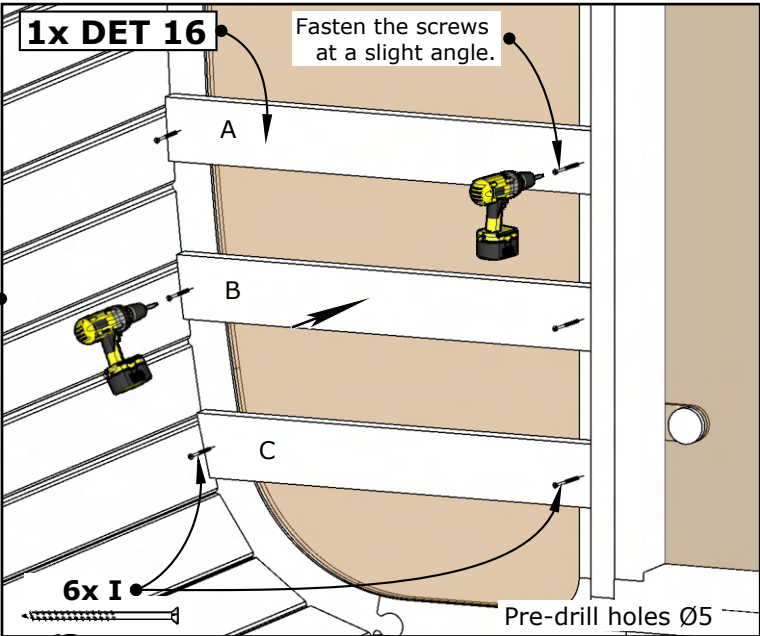


I

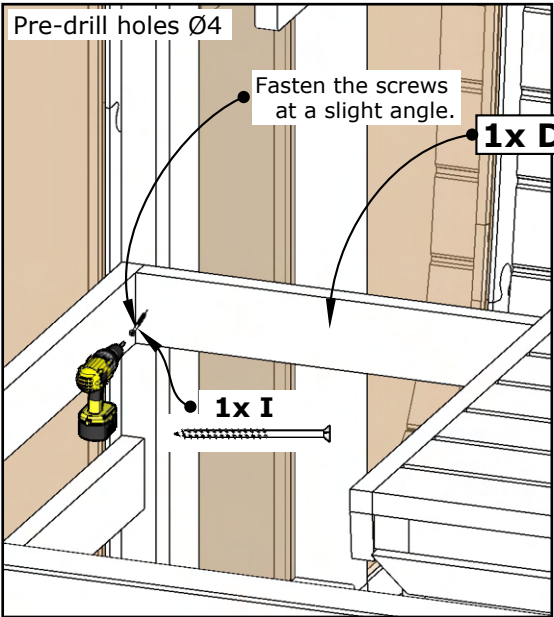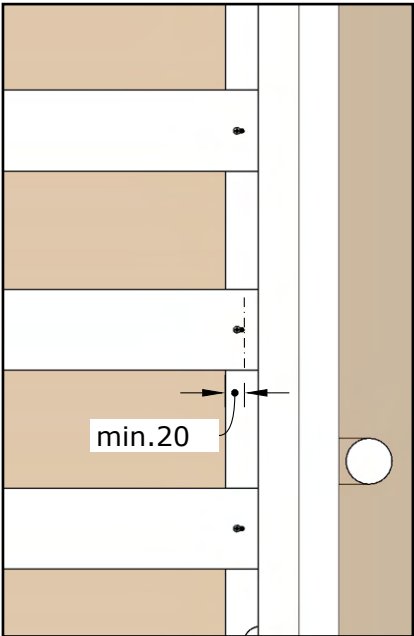

II

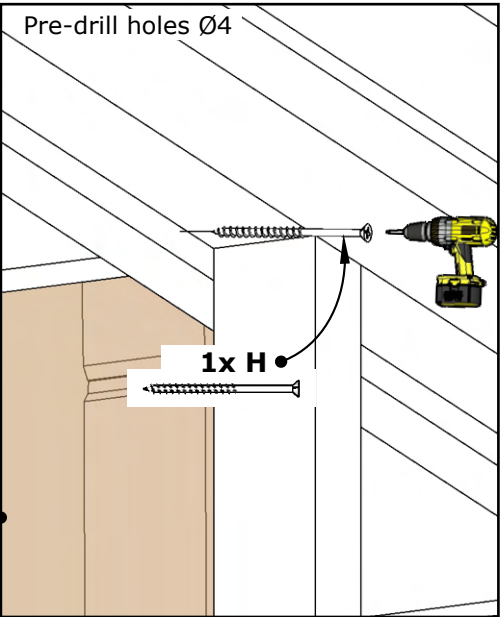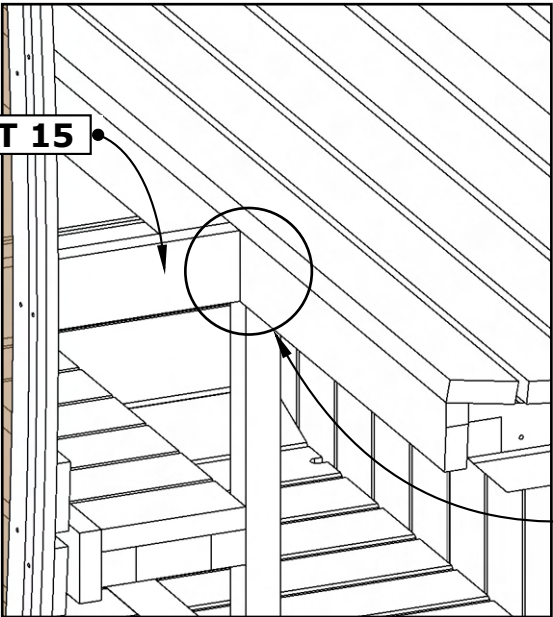



Sauna "Icon" 125,Ø200

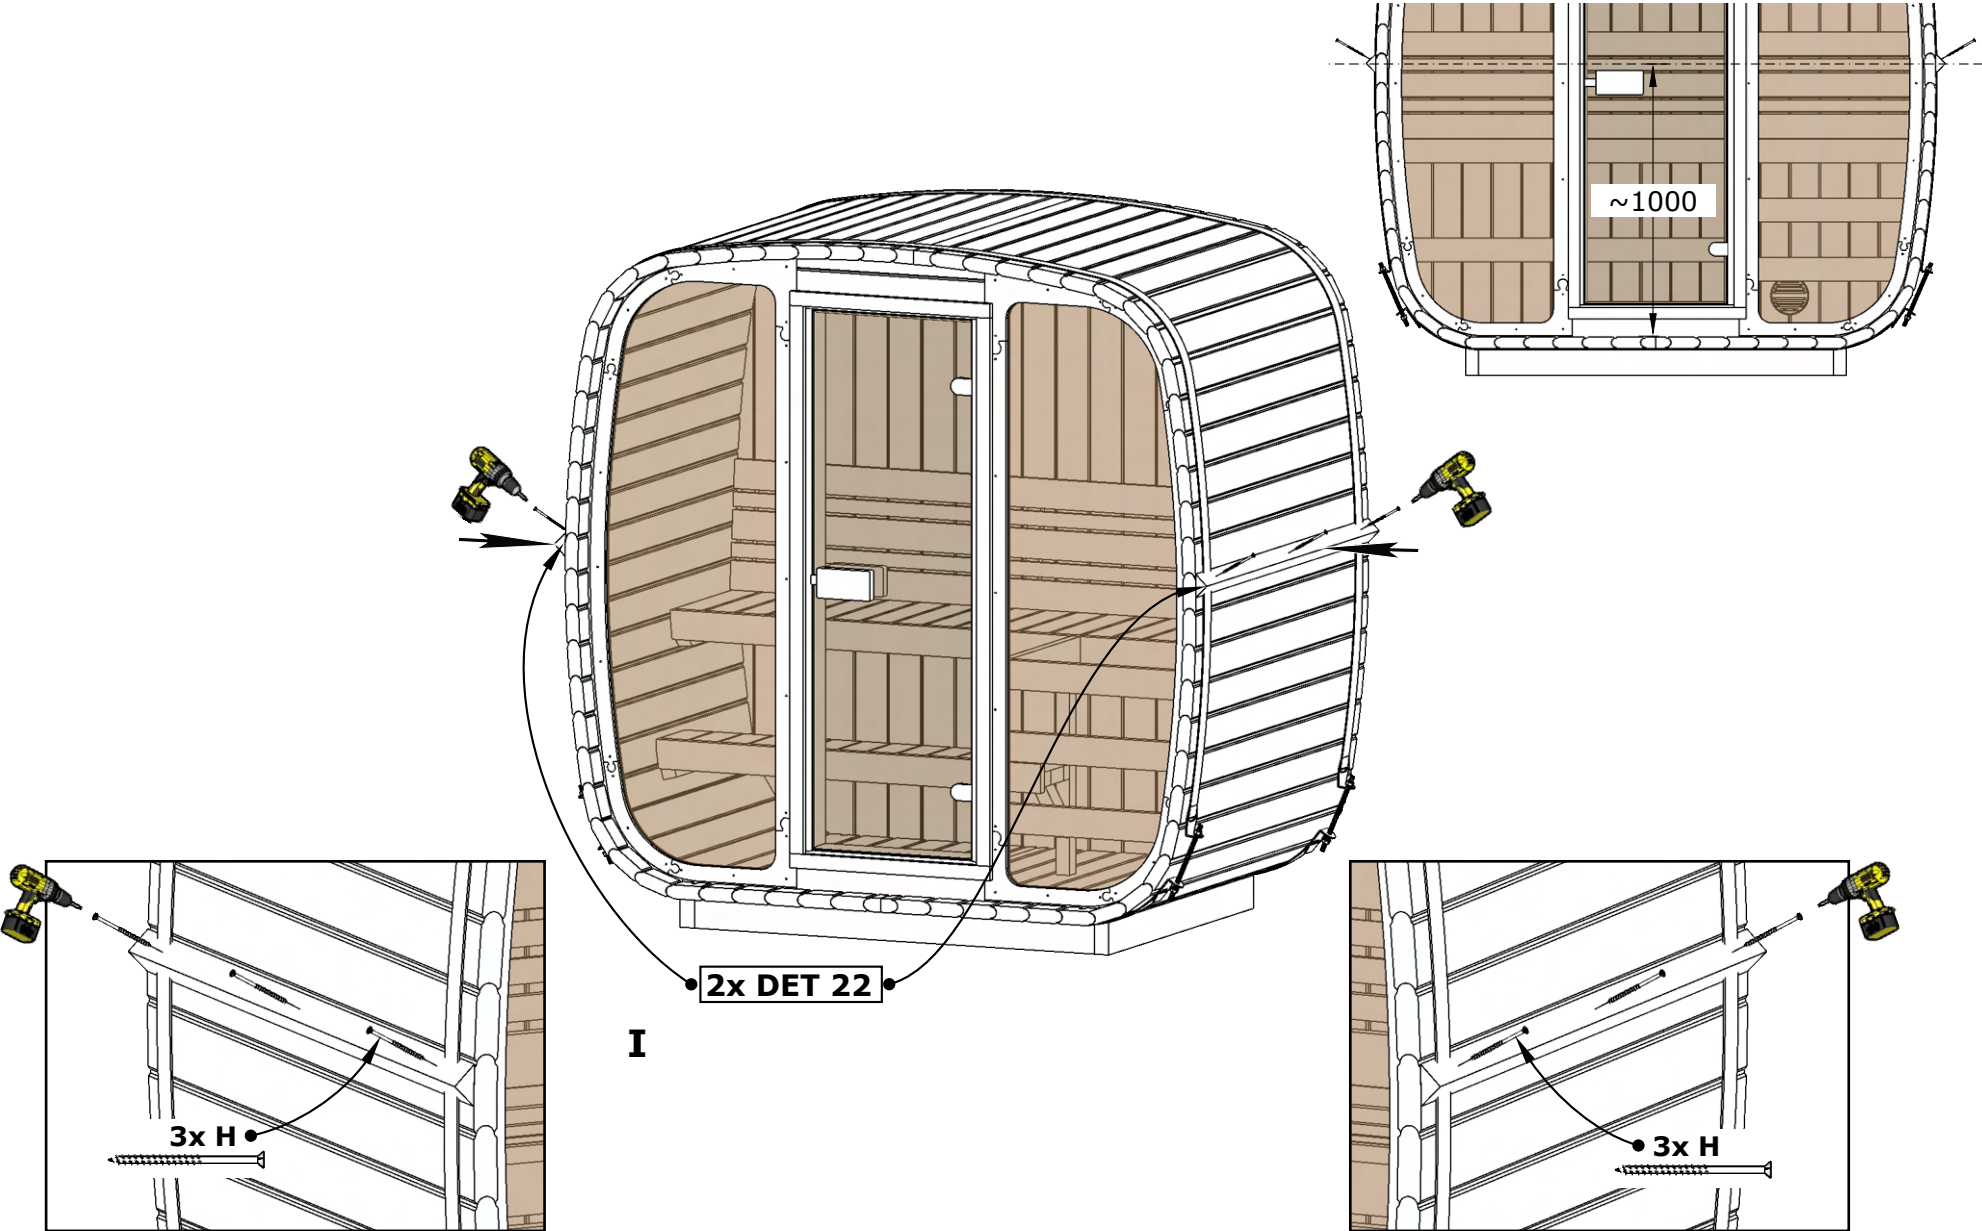

Sauna "Icon" 125,Ø200


Underlay felt installation manual.

Attention! Refer to underlay installation manual provided in package.

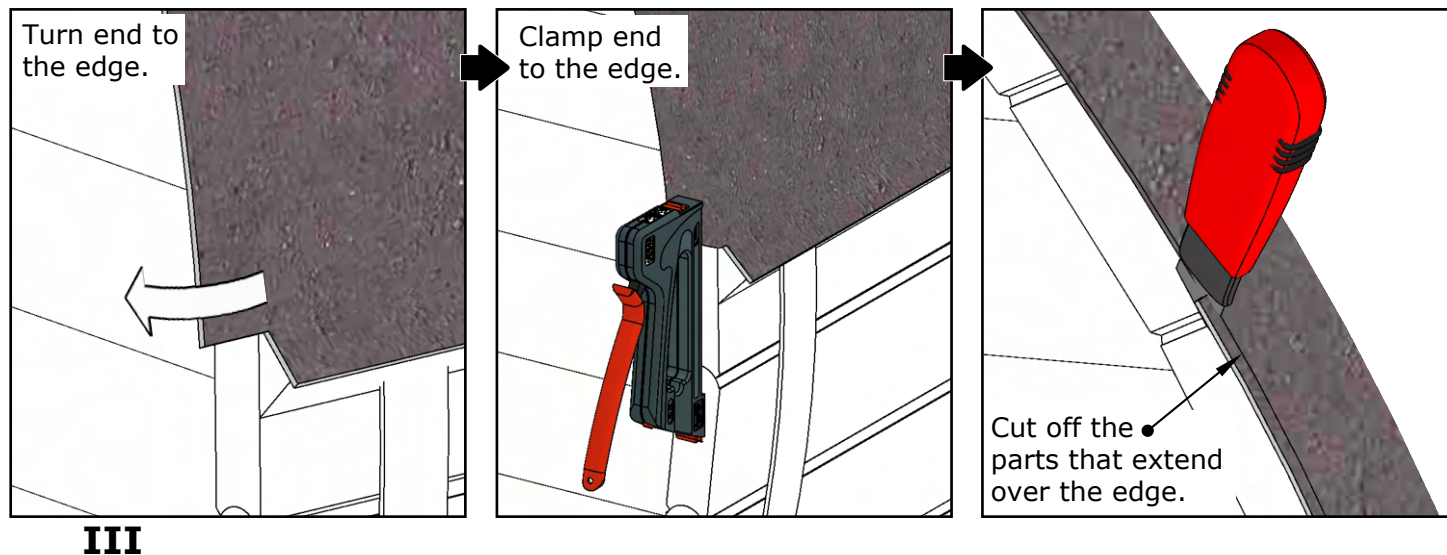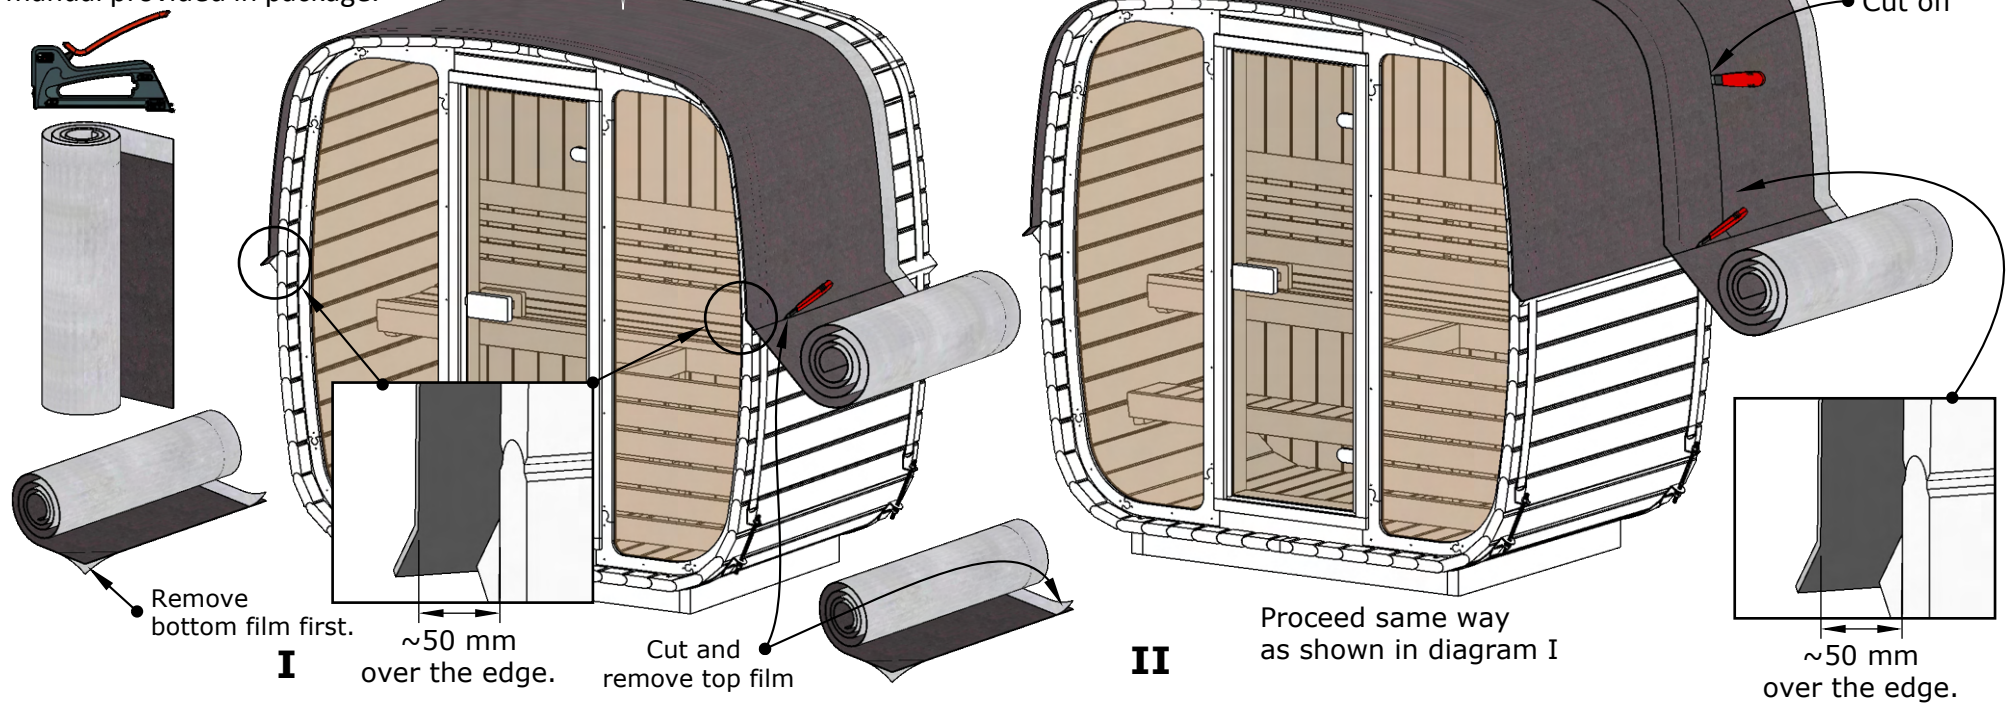


Sauna "Icon" 125,Ø200


Attention! Refer to shingle installation manual provided in package.

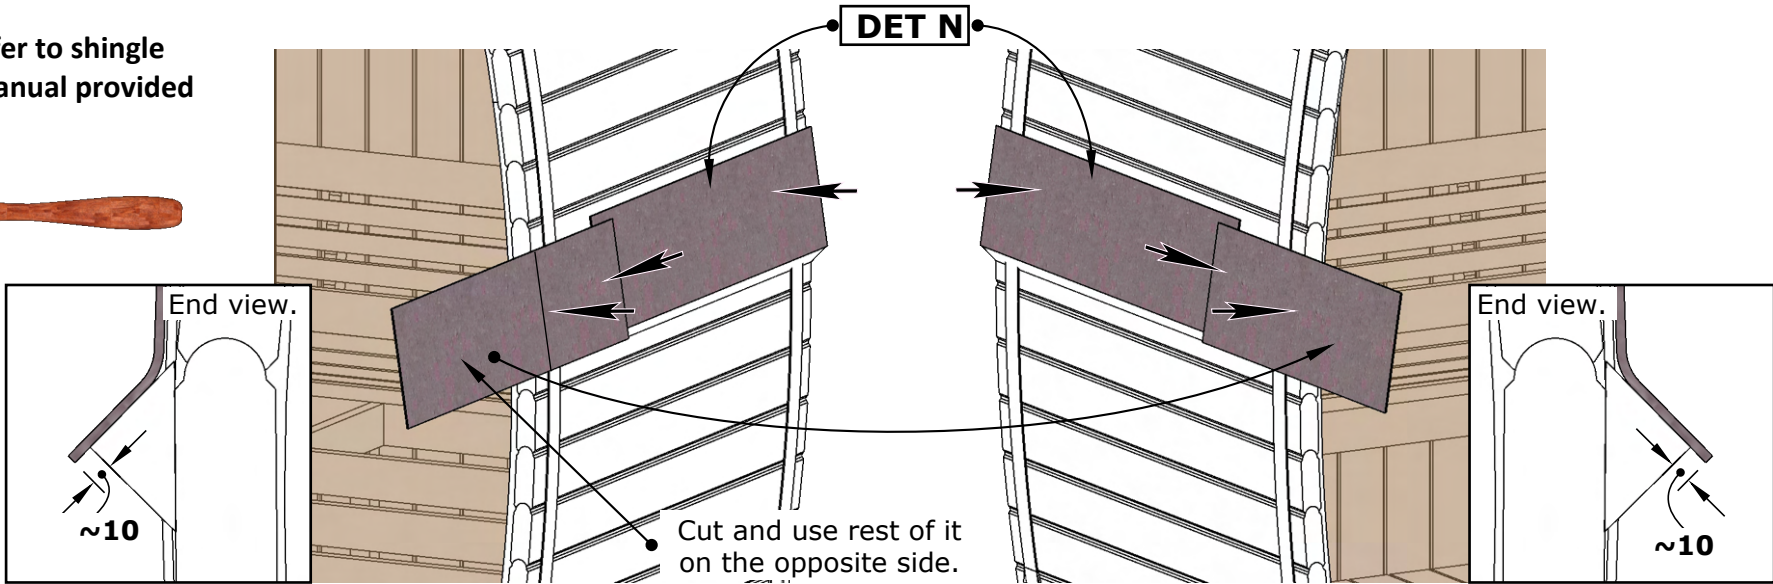

I

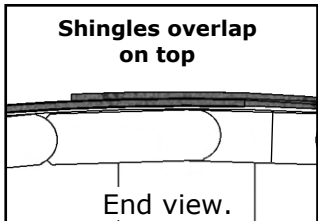


Attention! Refer to shingle installation manual provided in package.

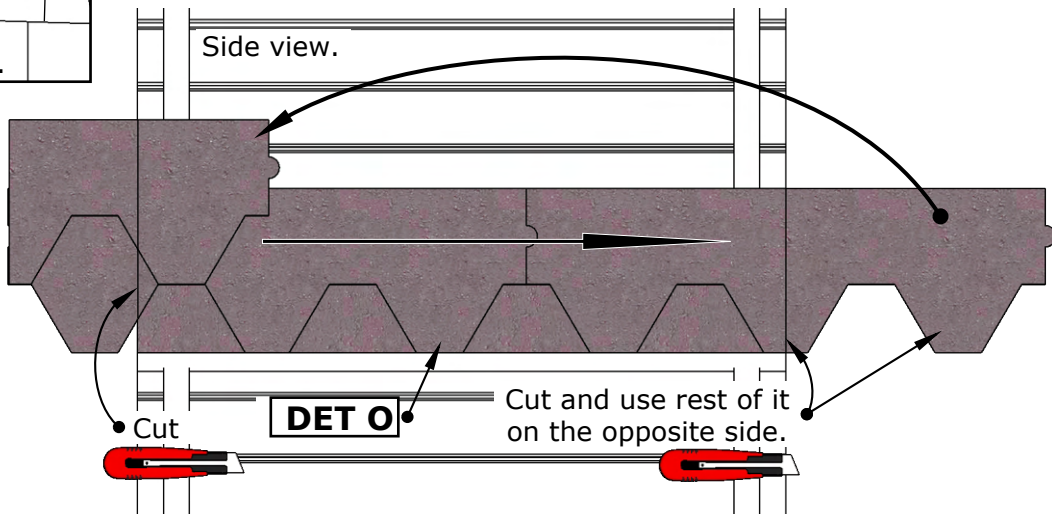



II

Attention! Refer to shingle installation manual provided in package.


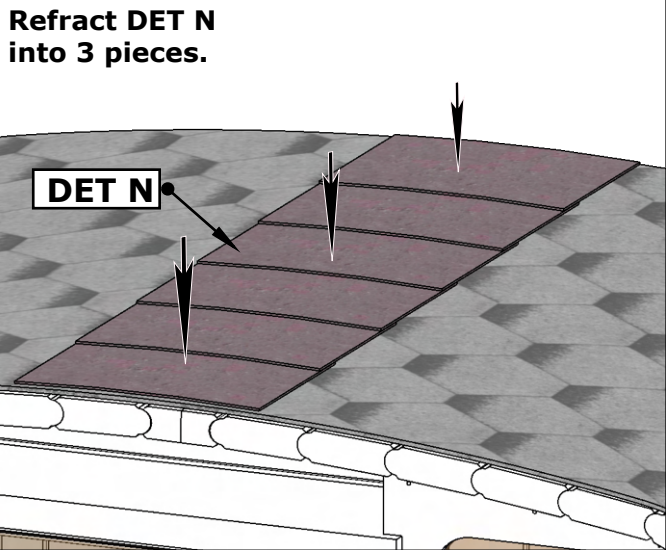


III

Sauna "Icon" 125,Ø200

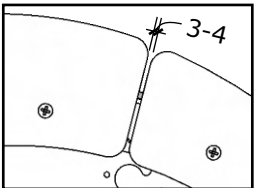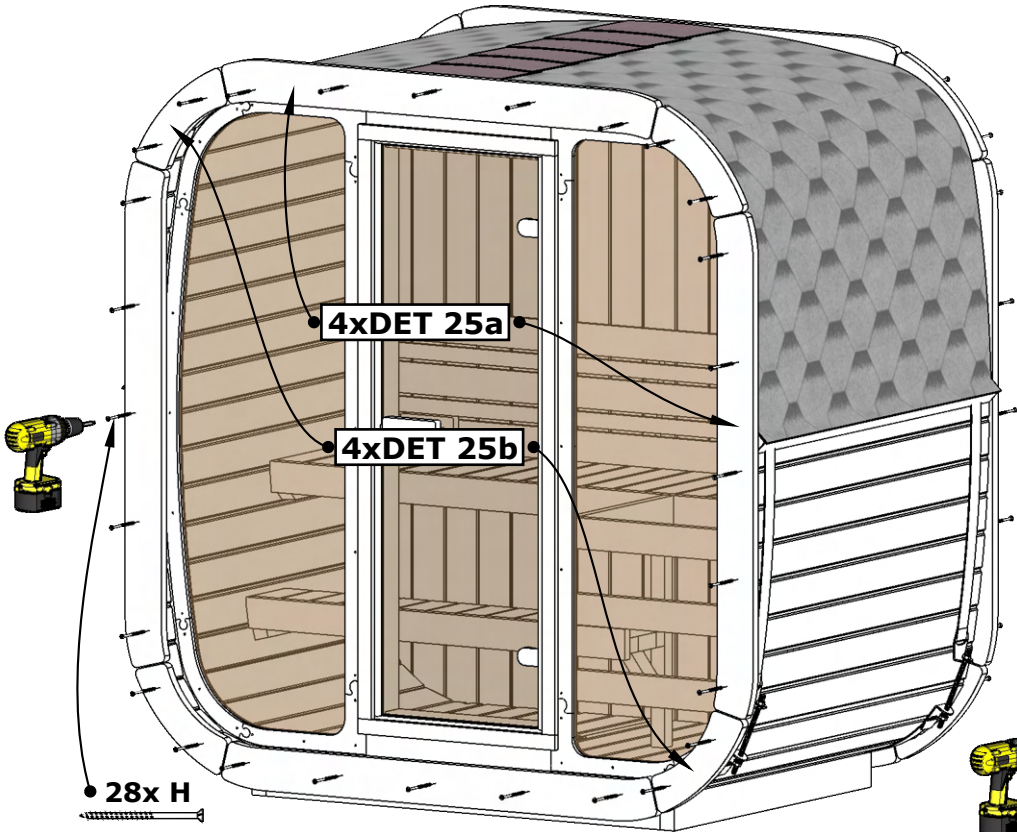

Leave small gap between boards.

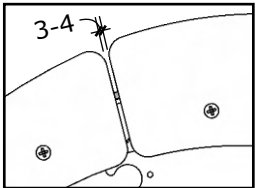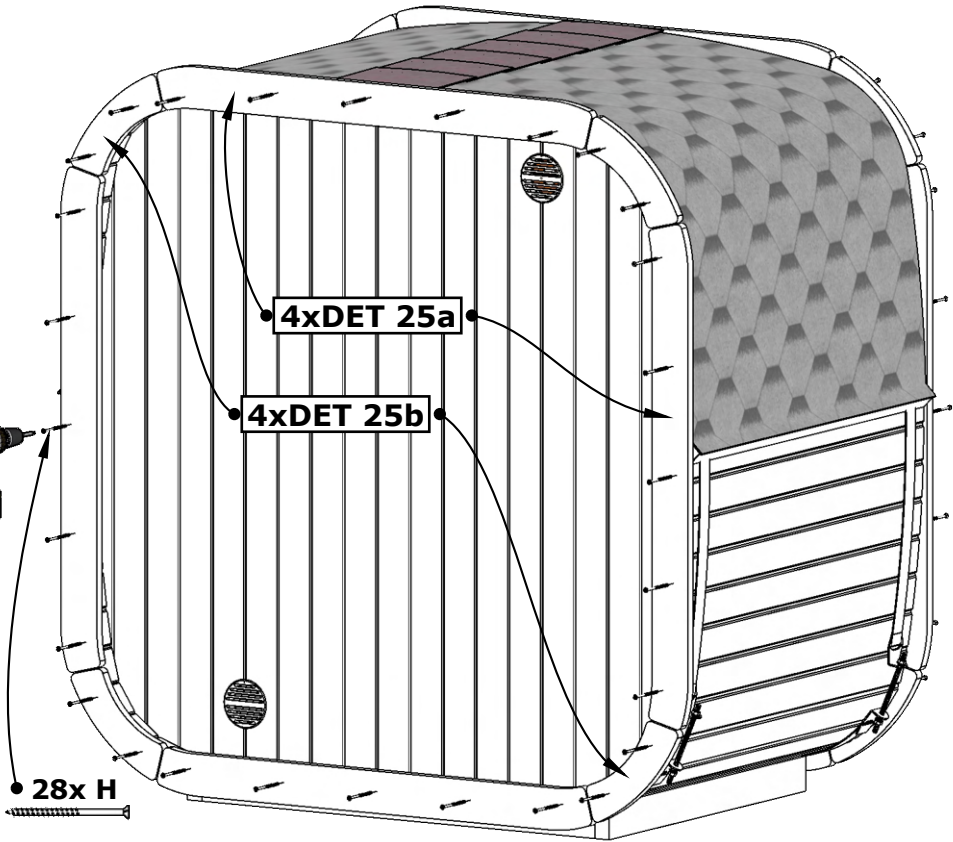

Leave small gap between boards.