


Sauna 280, Ø226


**NB! Please read whole manual
before start.**

**All given measurements
are in millimeters!**

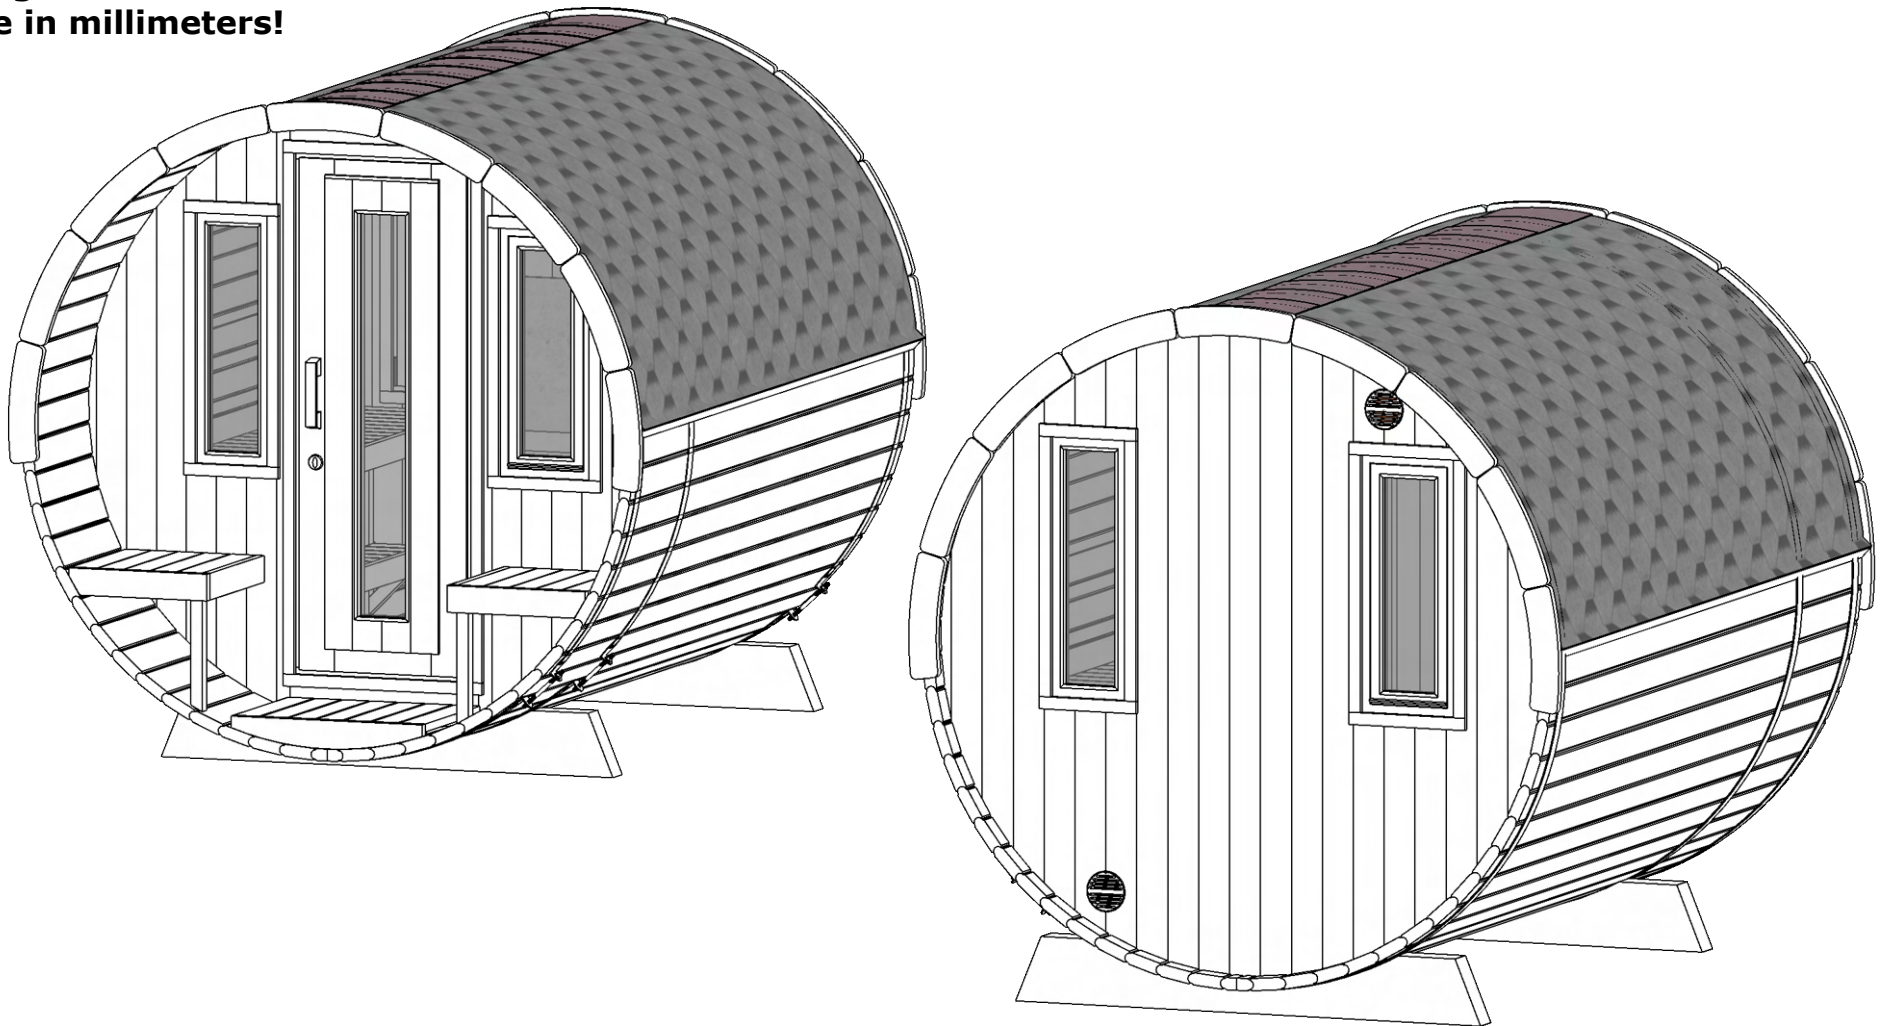


Wall configuration.

Windows are optional!


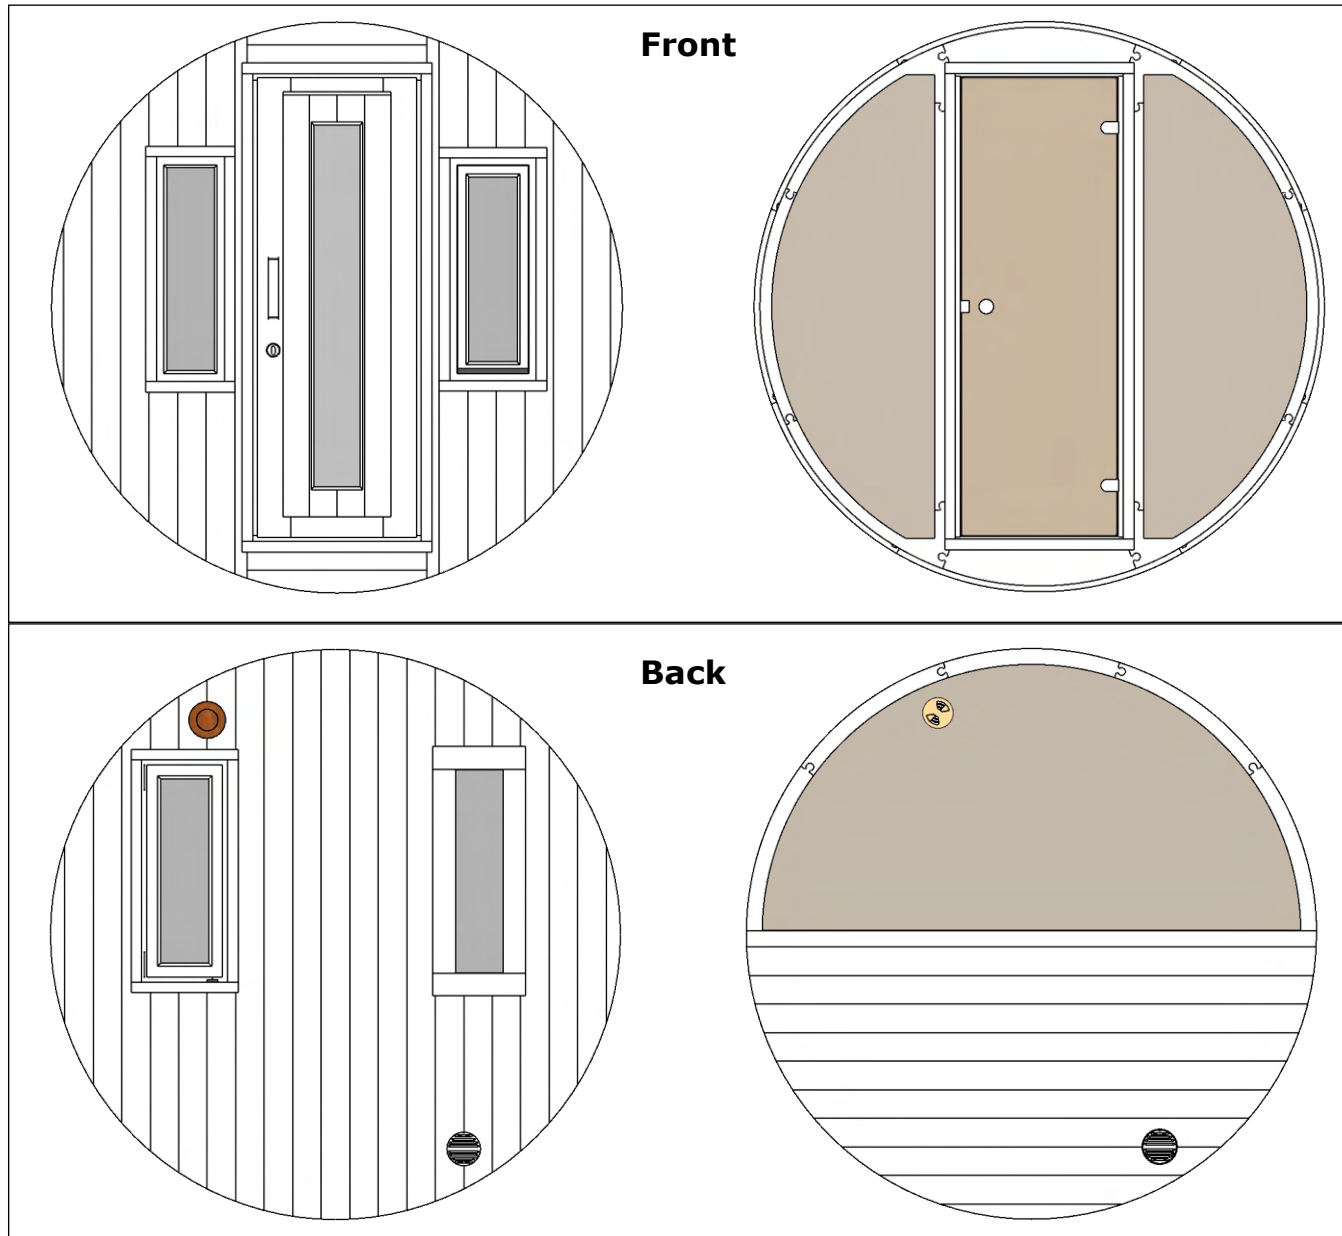


(I26-TKE-PTS-018)



Glass Wall mounting Ø226

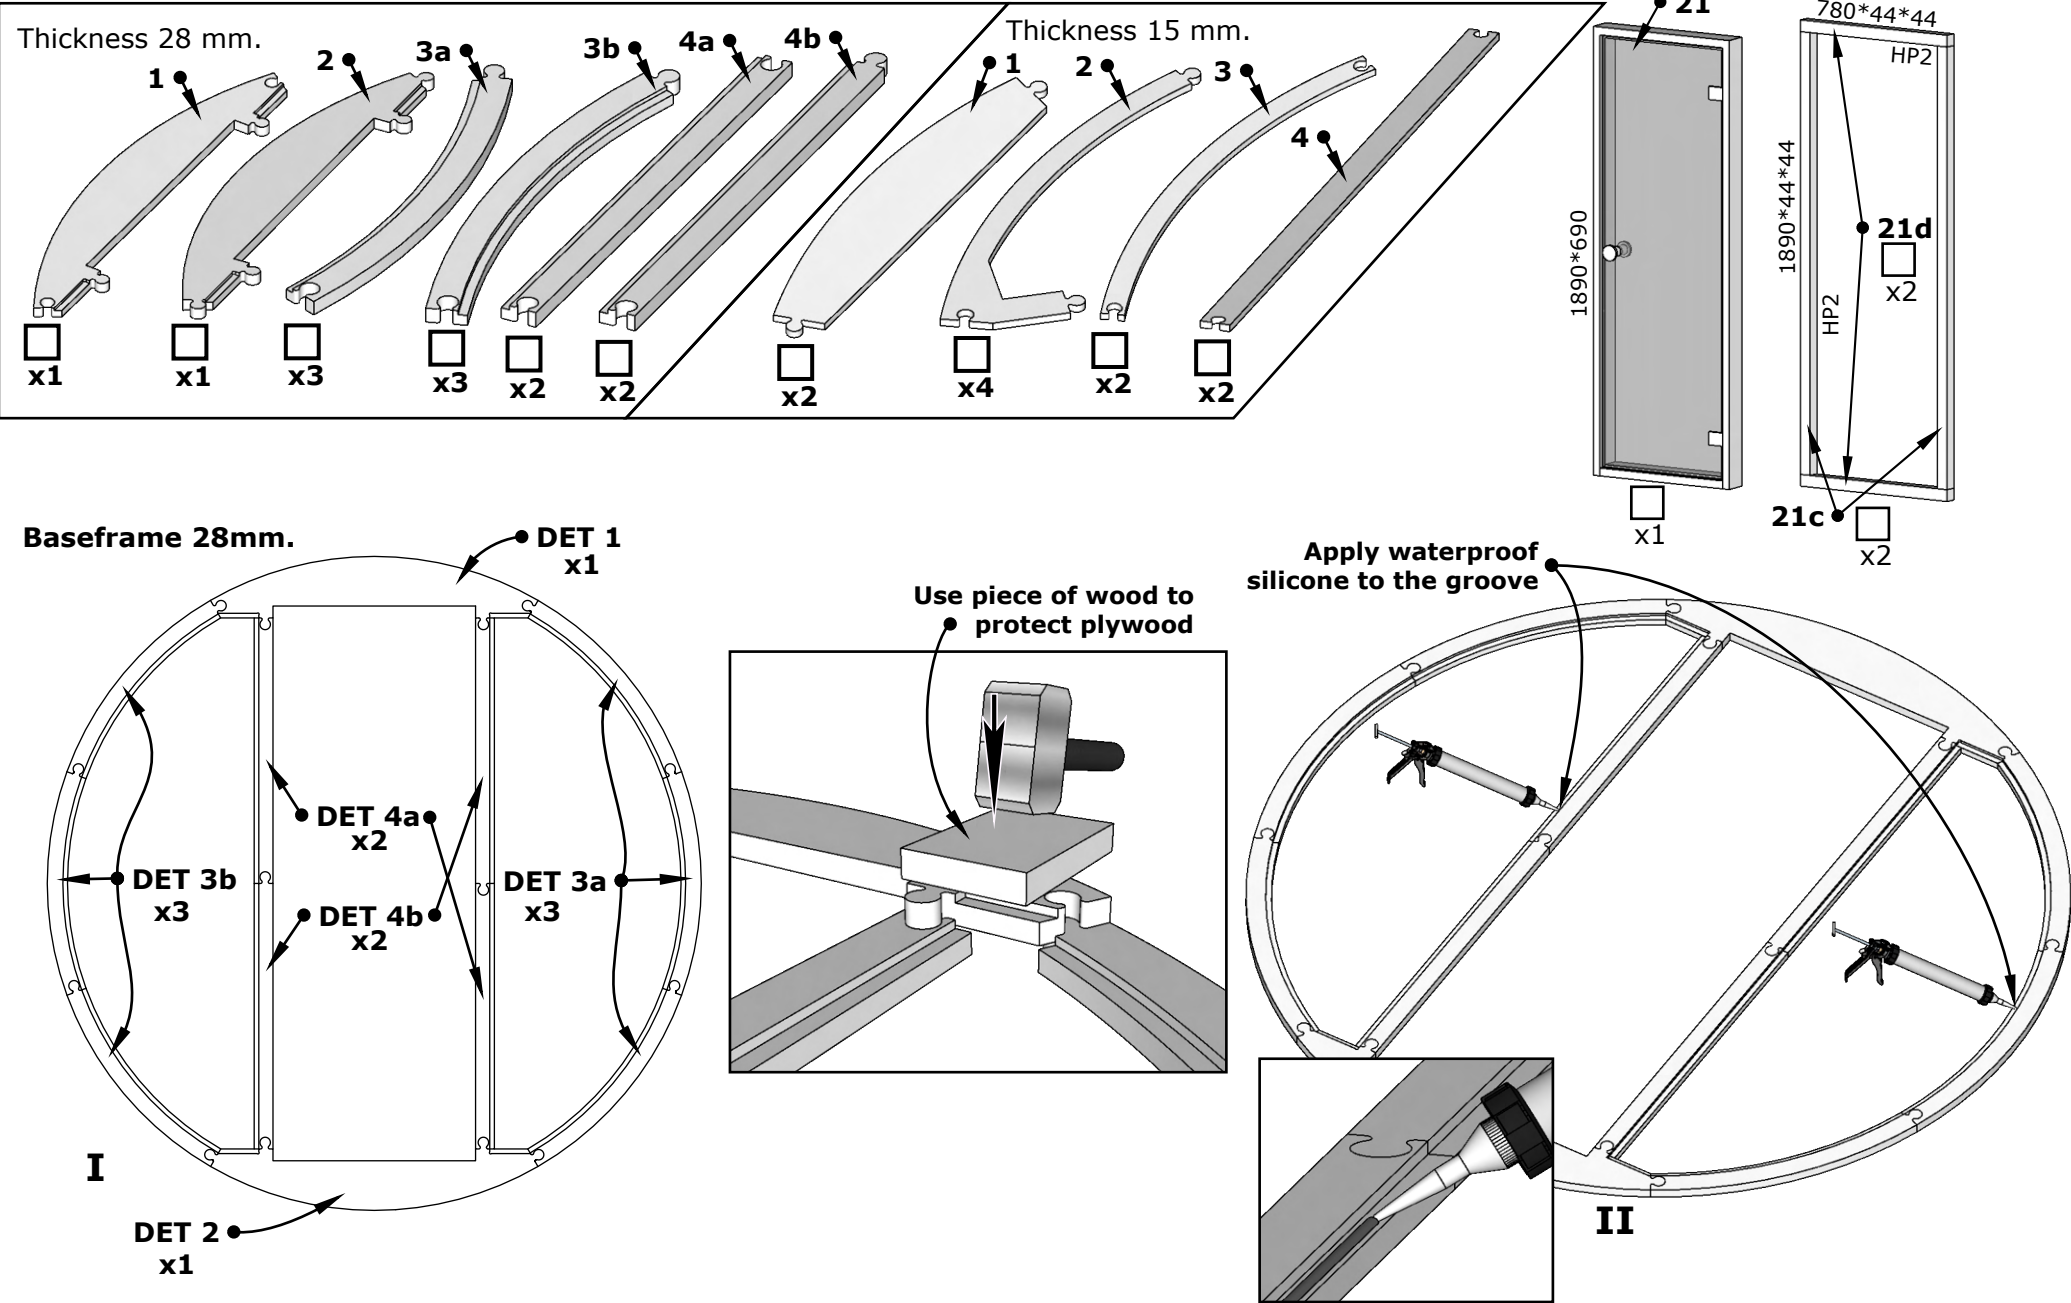


Glass Wall mounting Ø226

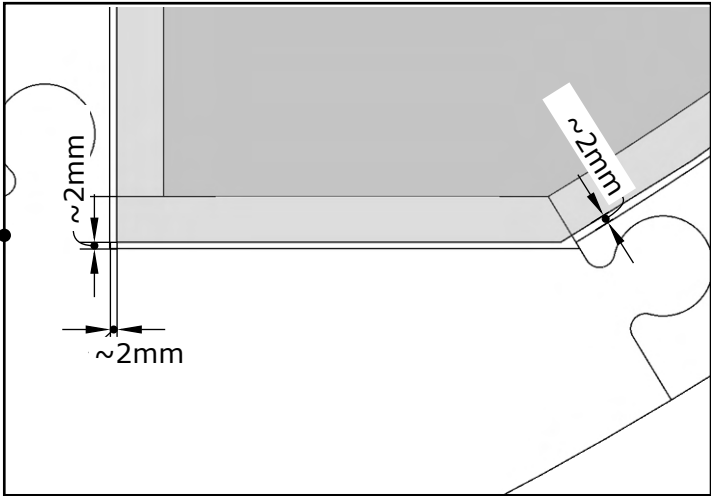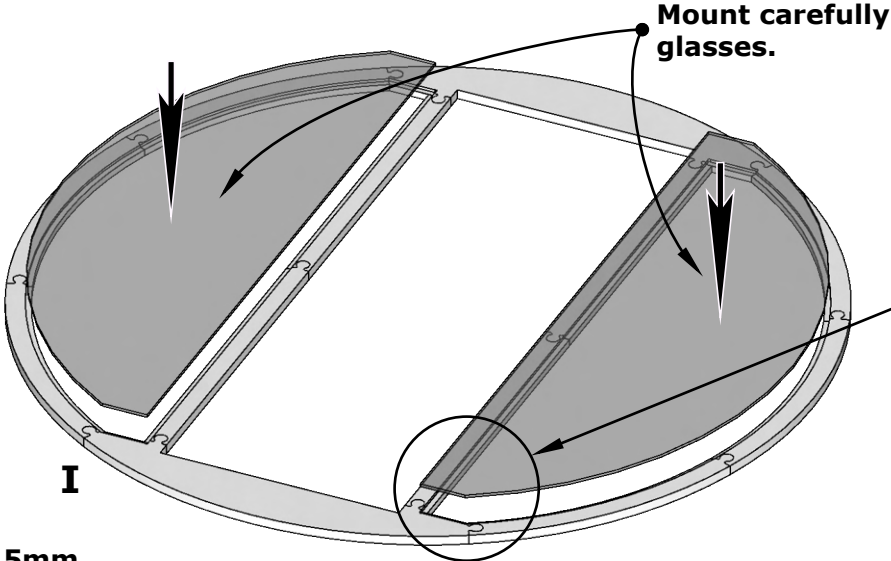


Coverframe 15mm.

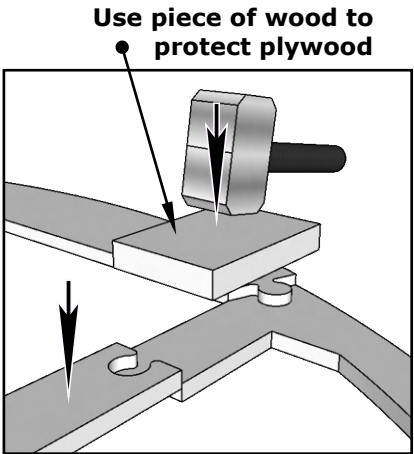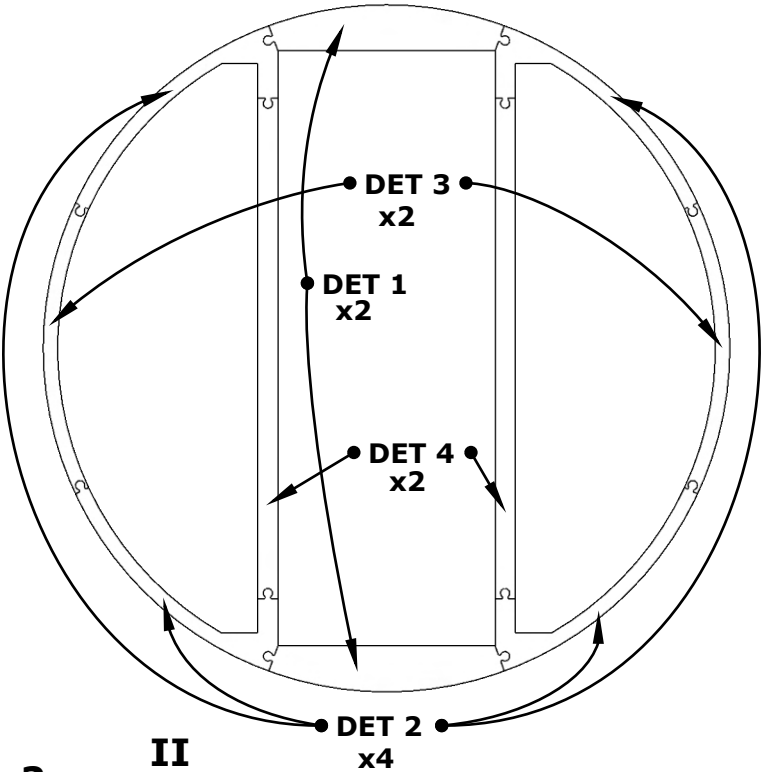

Apply waterproof silicone

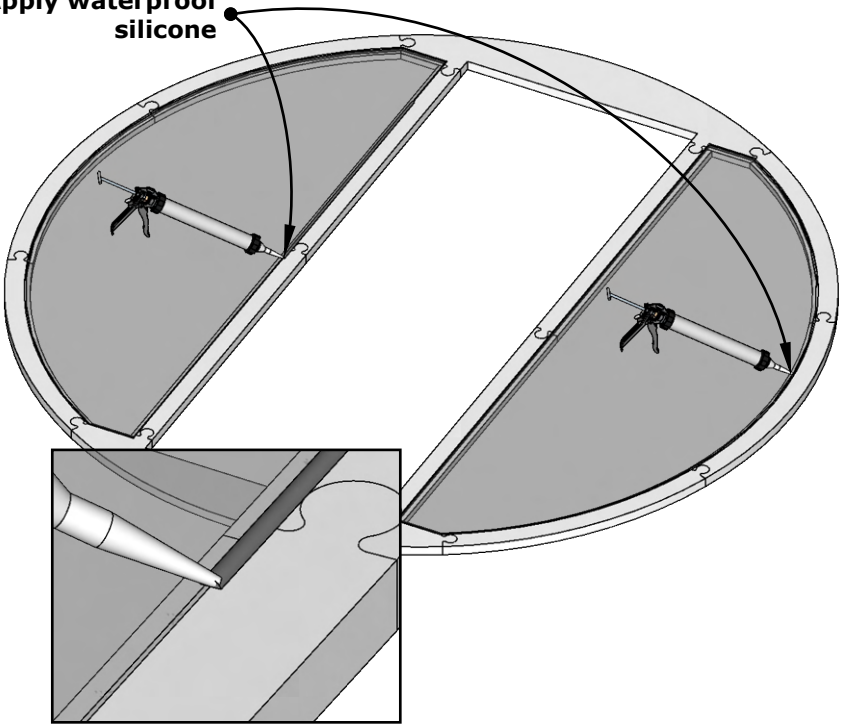


Glass Wall mounting Ø226

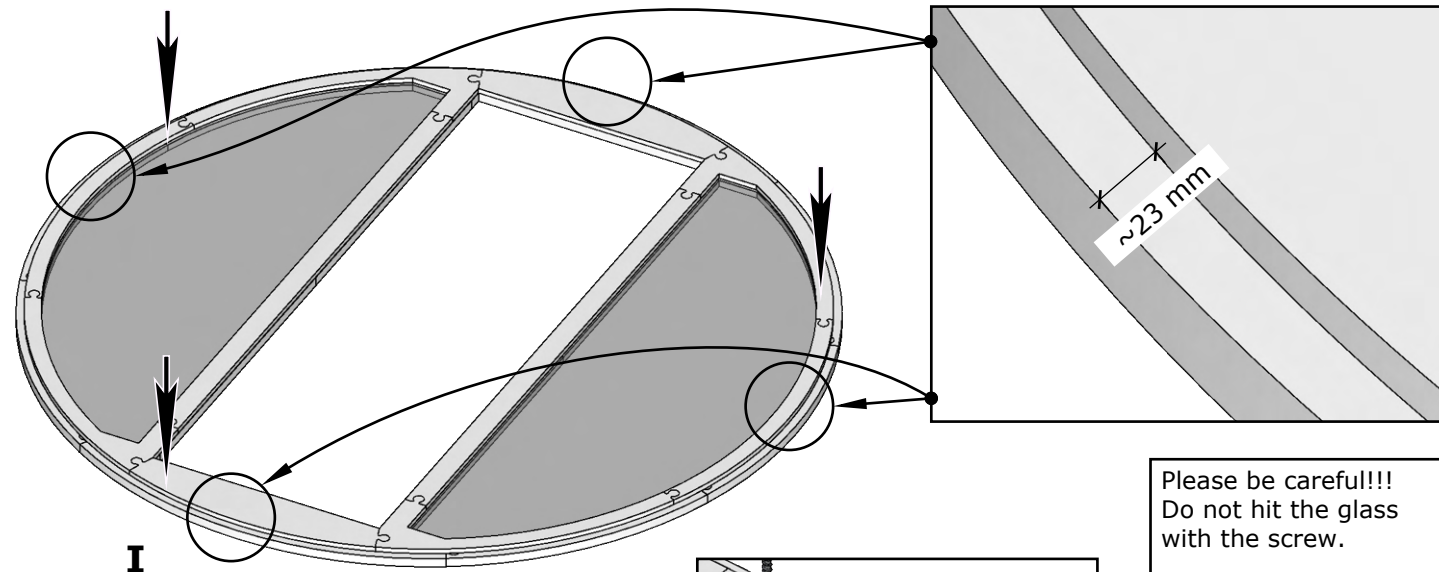


Cut board from pallet L= $\sim 2200 \text{ mm}$.
Fix it diagonally to make wall more rigid during the installation.

Please be careful!!!
Do not hit the glass with the screw.

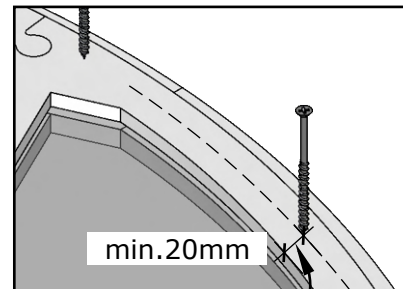

Please be careful!!!
Do not hit the glass with the screw.

Attention!
Place cover frame outside

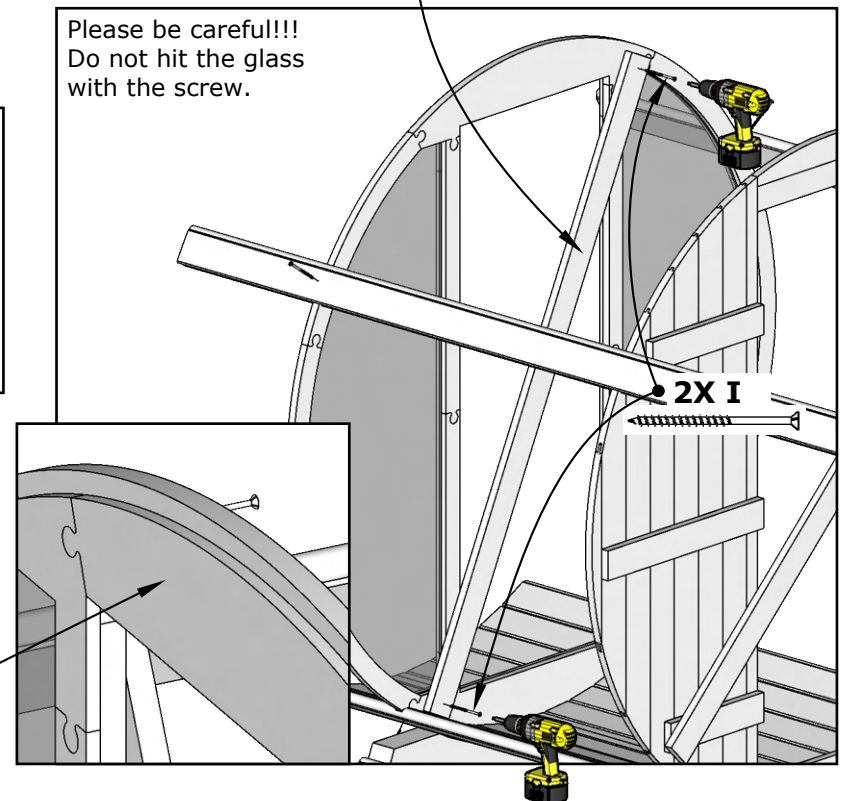


II

III





3.

(I26-TKE-PTS-018)





Glass Wall mounting Ø226

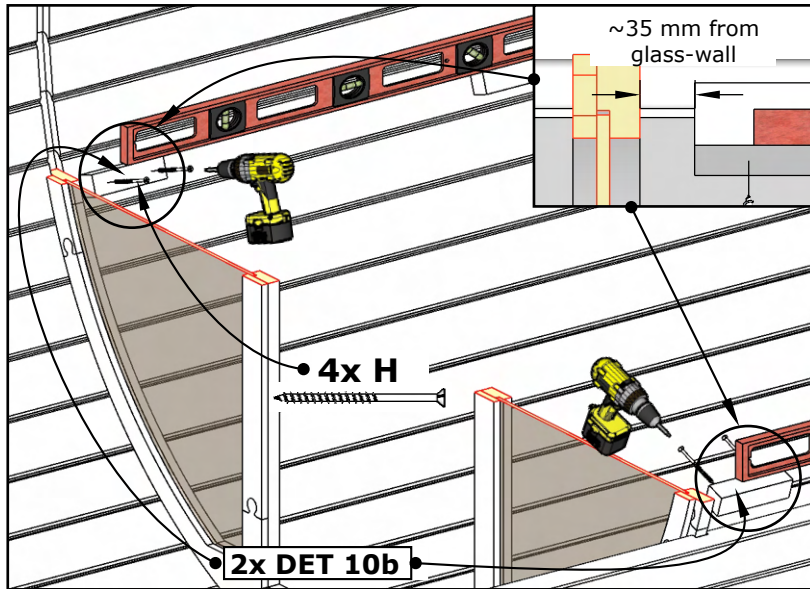





Benches installation

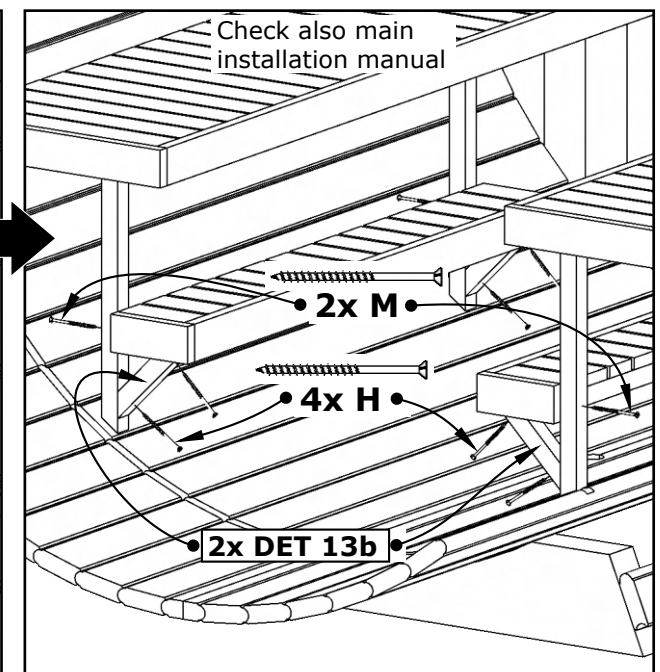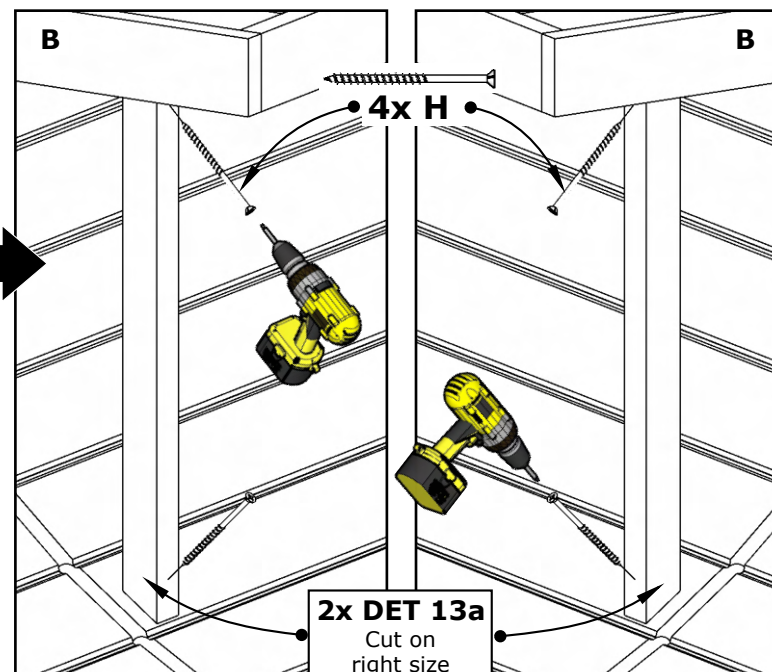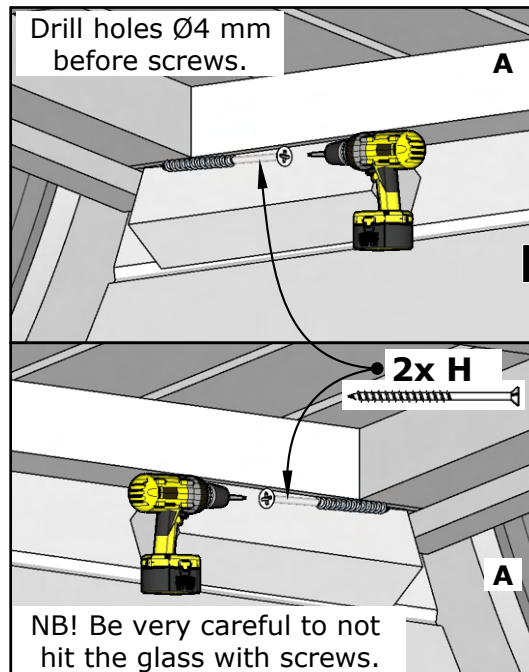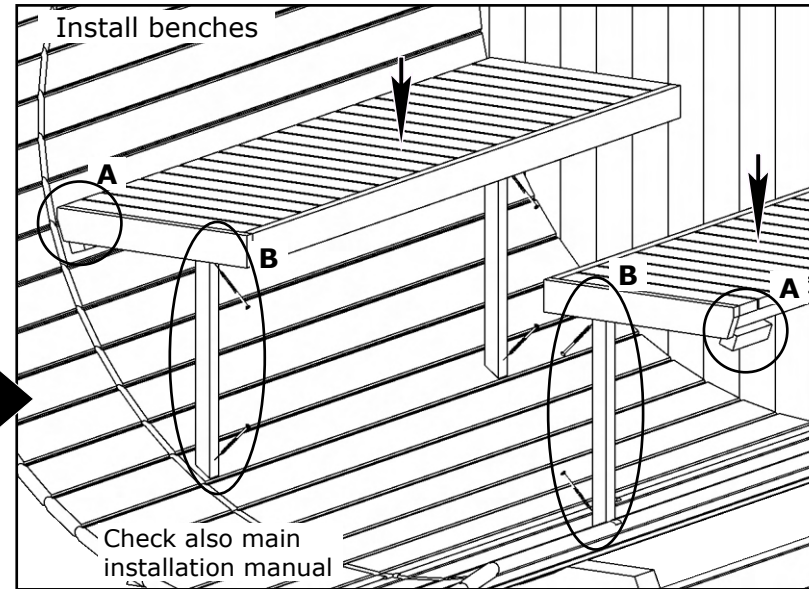



Glass Wall mounting Ø226

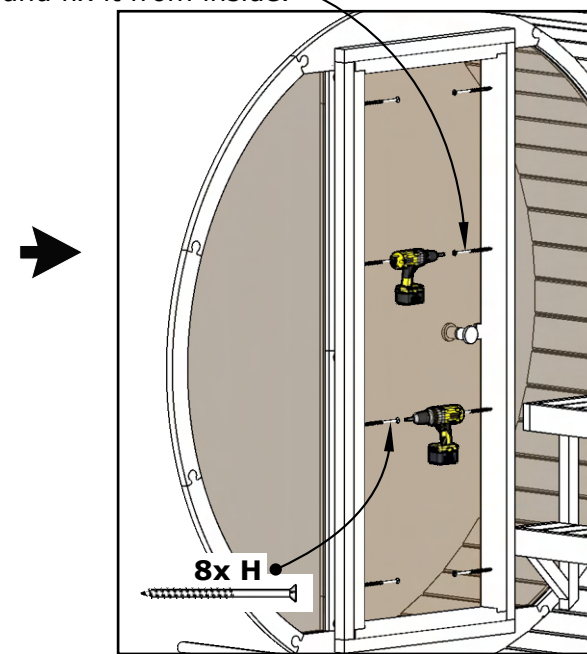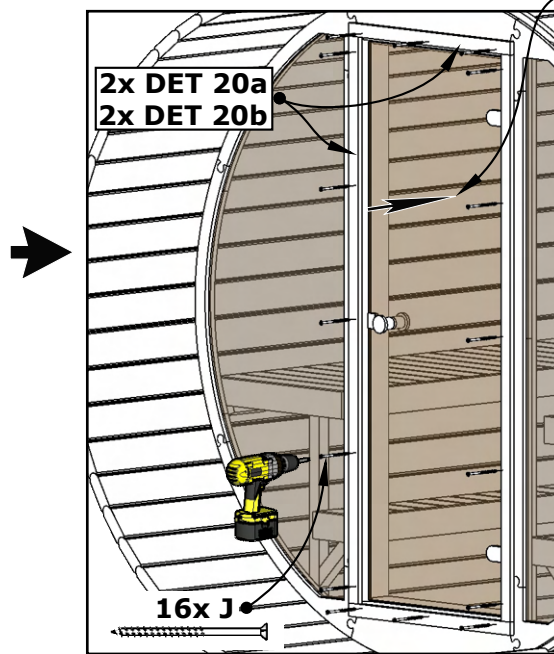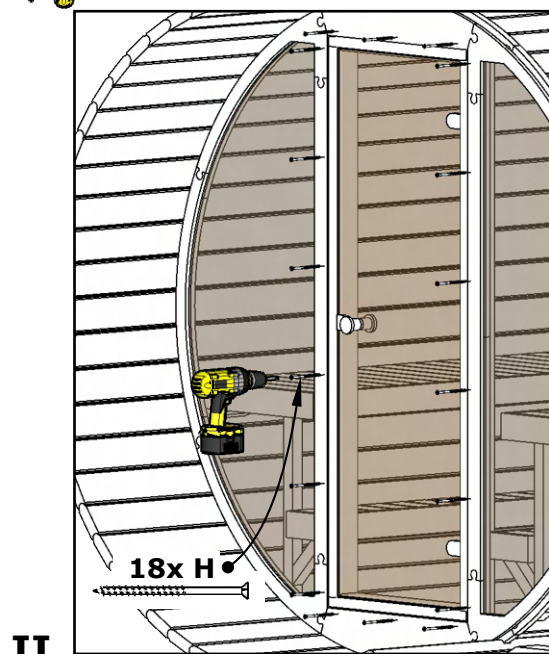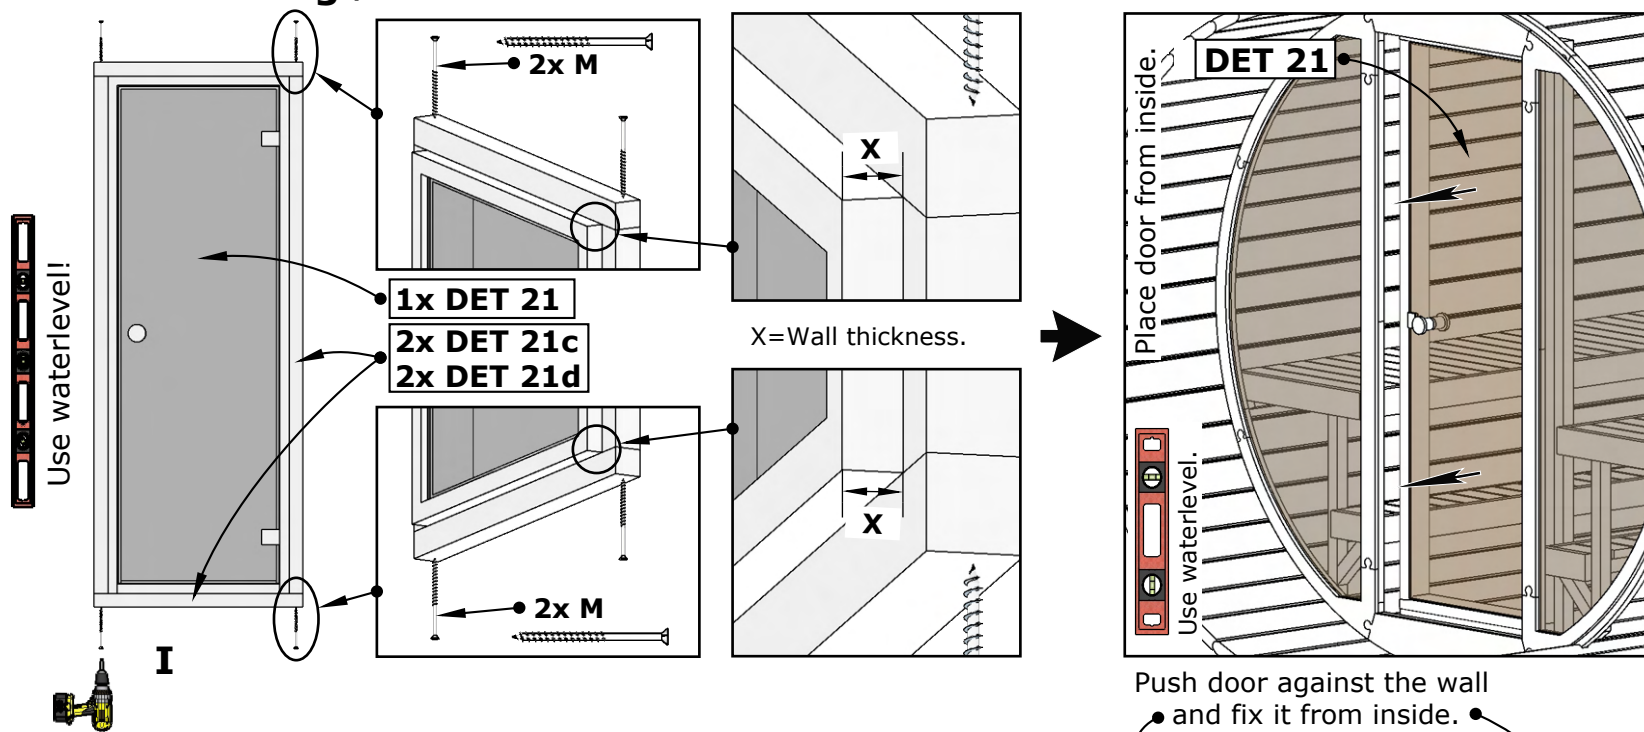



Glass Wall mounting Ø226

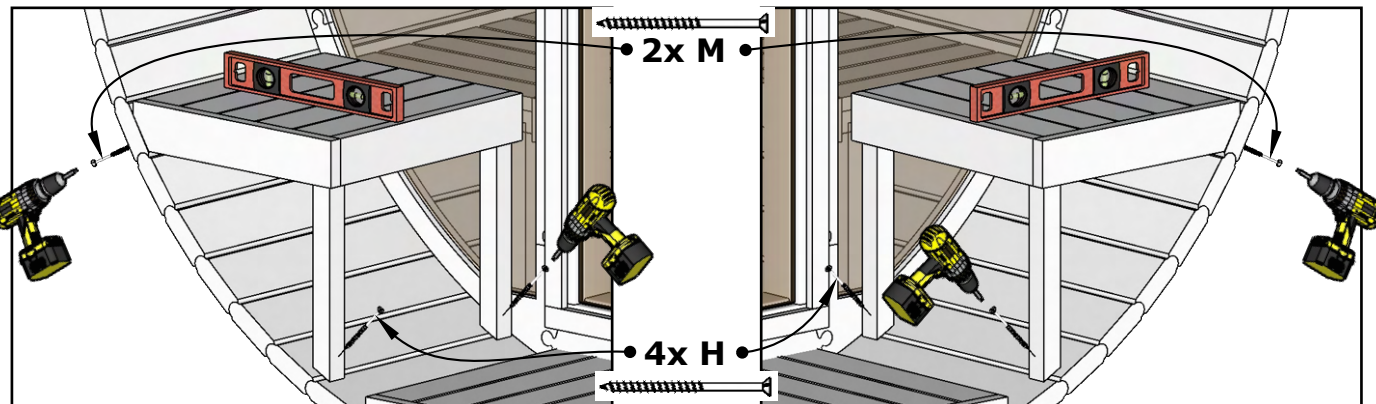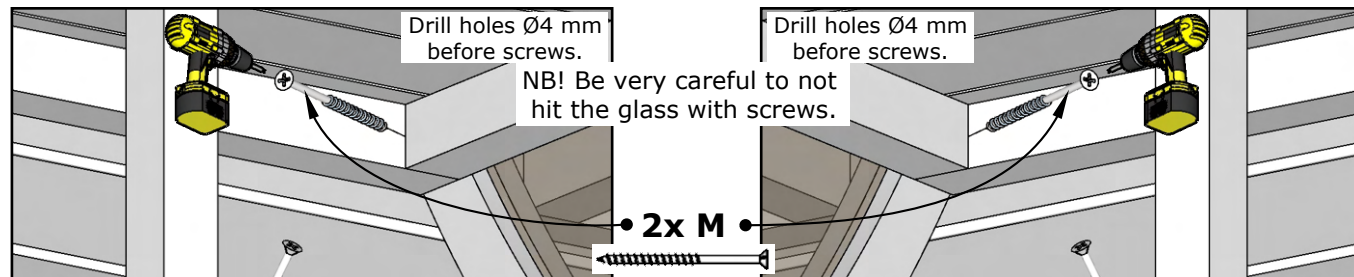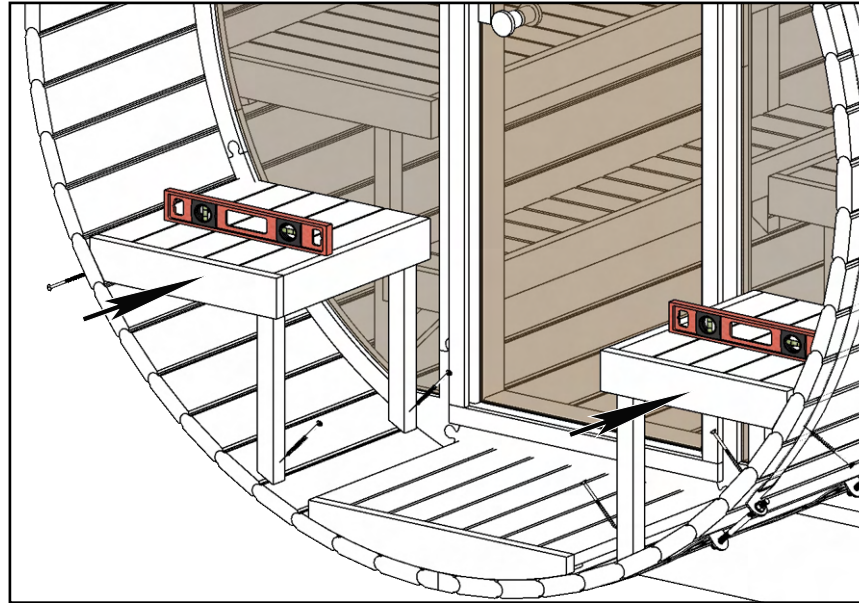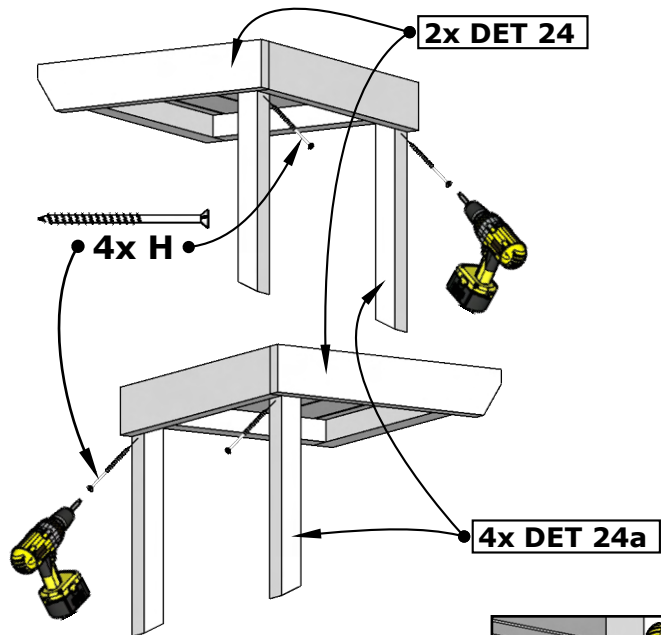

Wooden back wall assembly

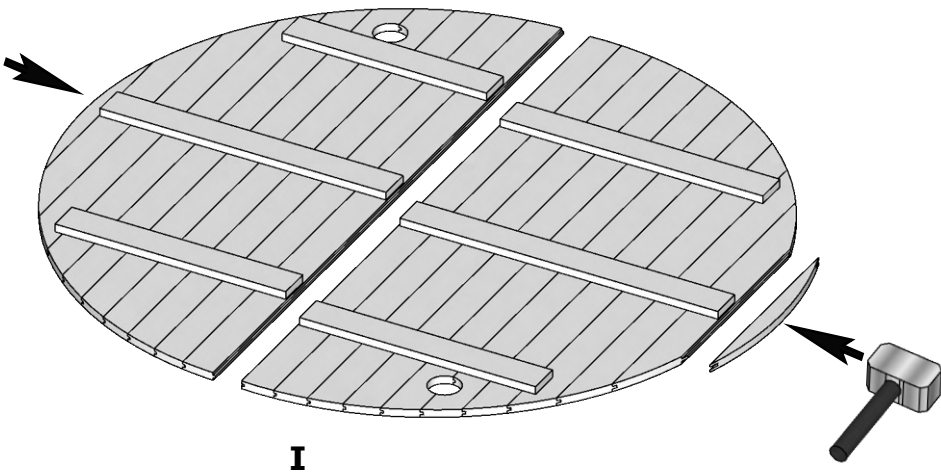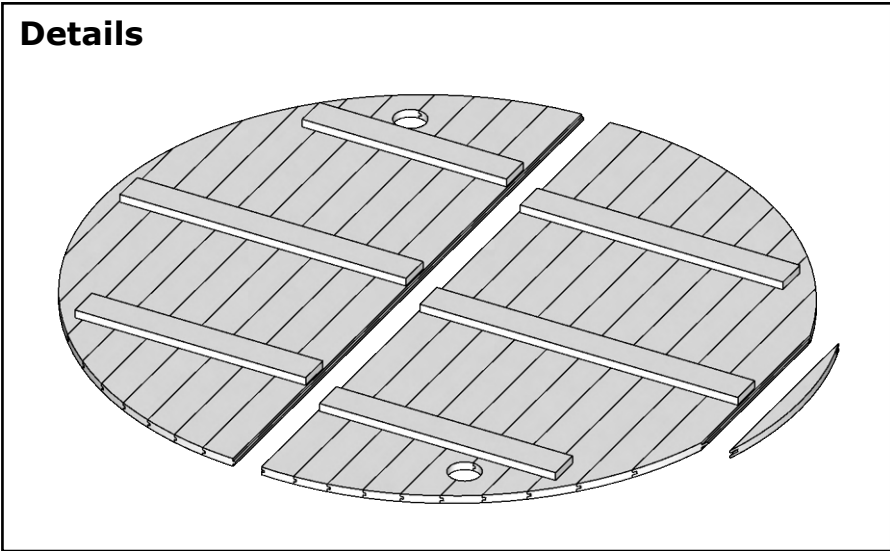

Cut board from pallet
L=~2100 mm.

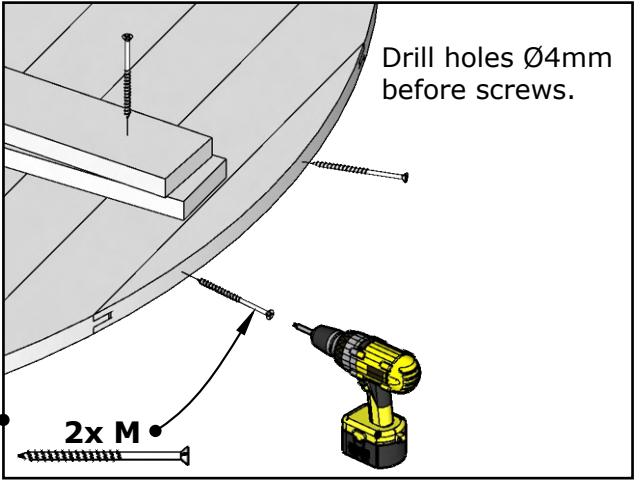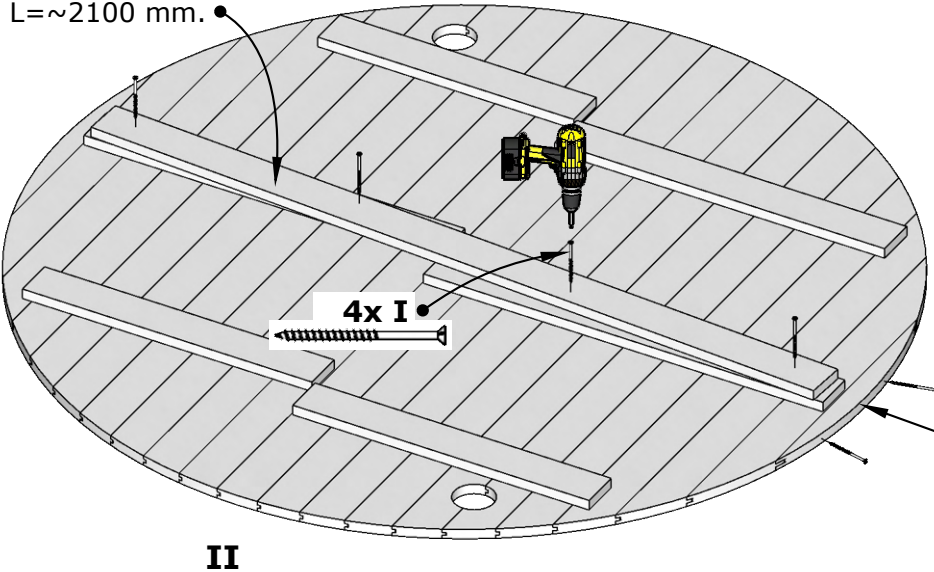


Details list 1.




Sauna 280, Ø226


Details list 2.

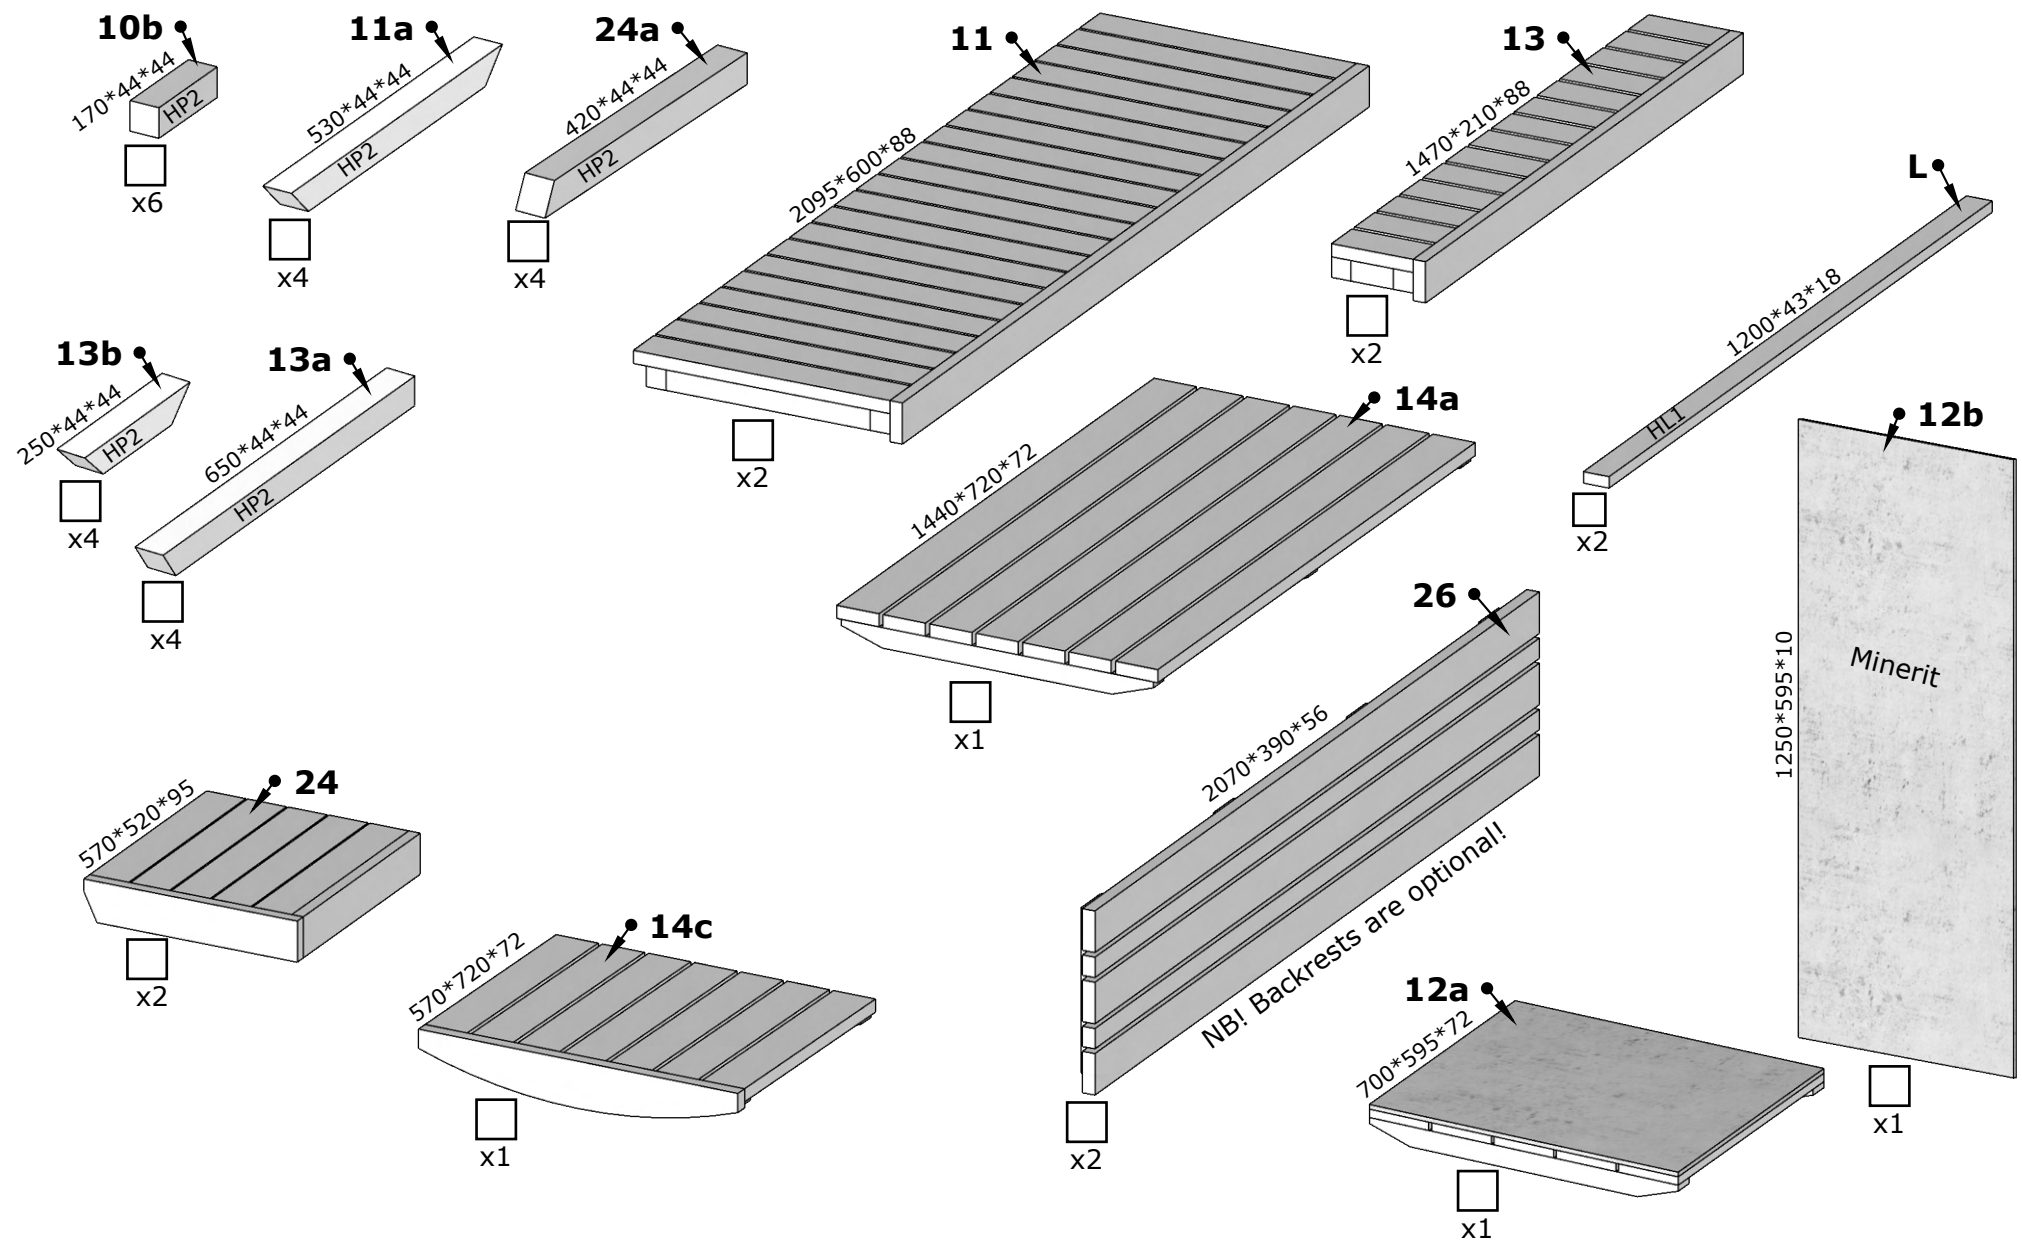


Sauna 280, Ø226

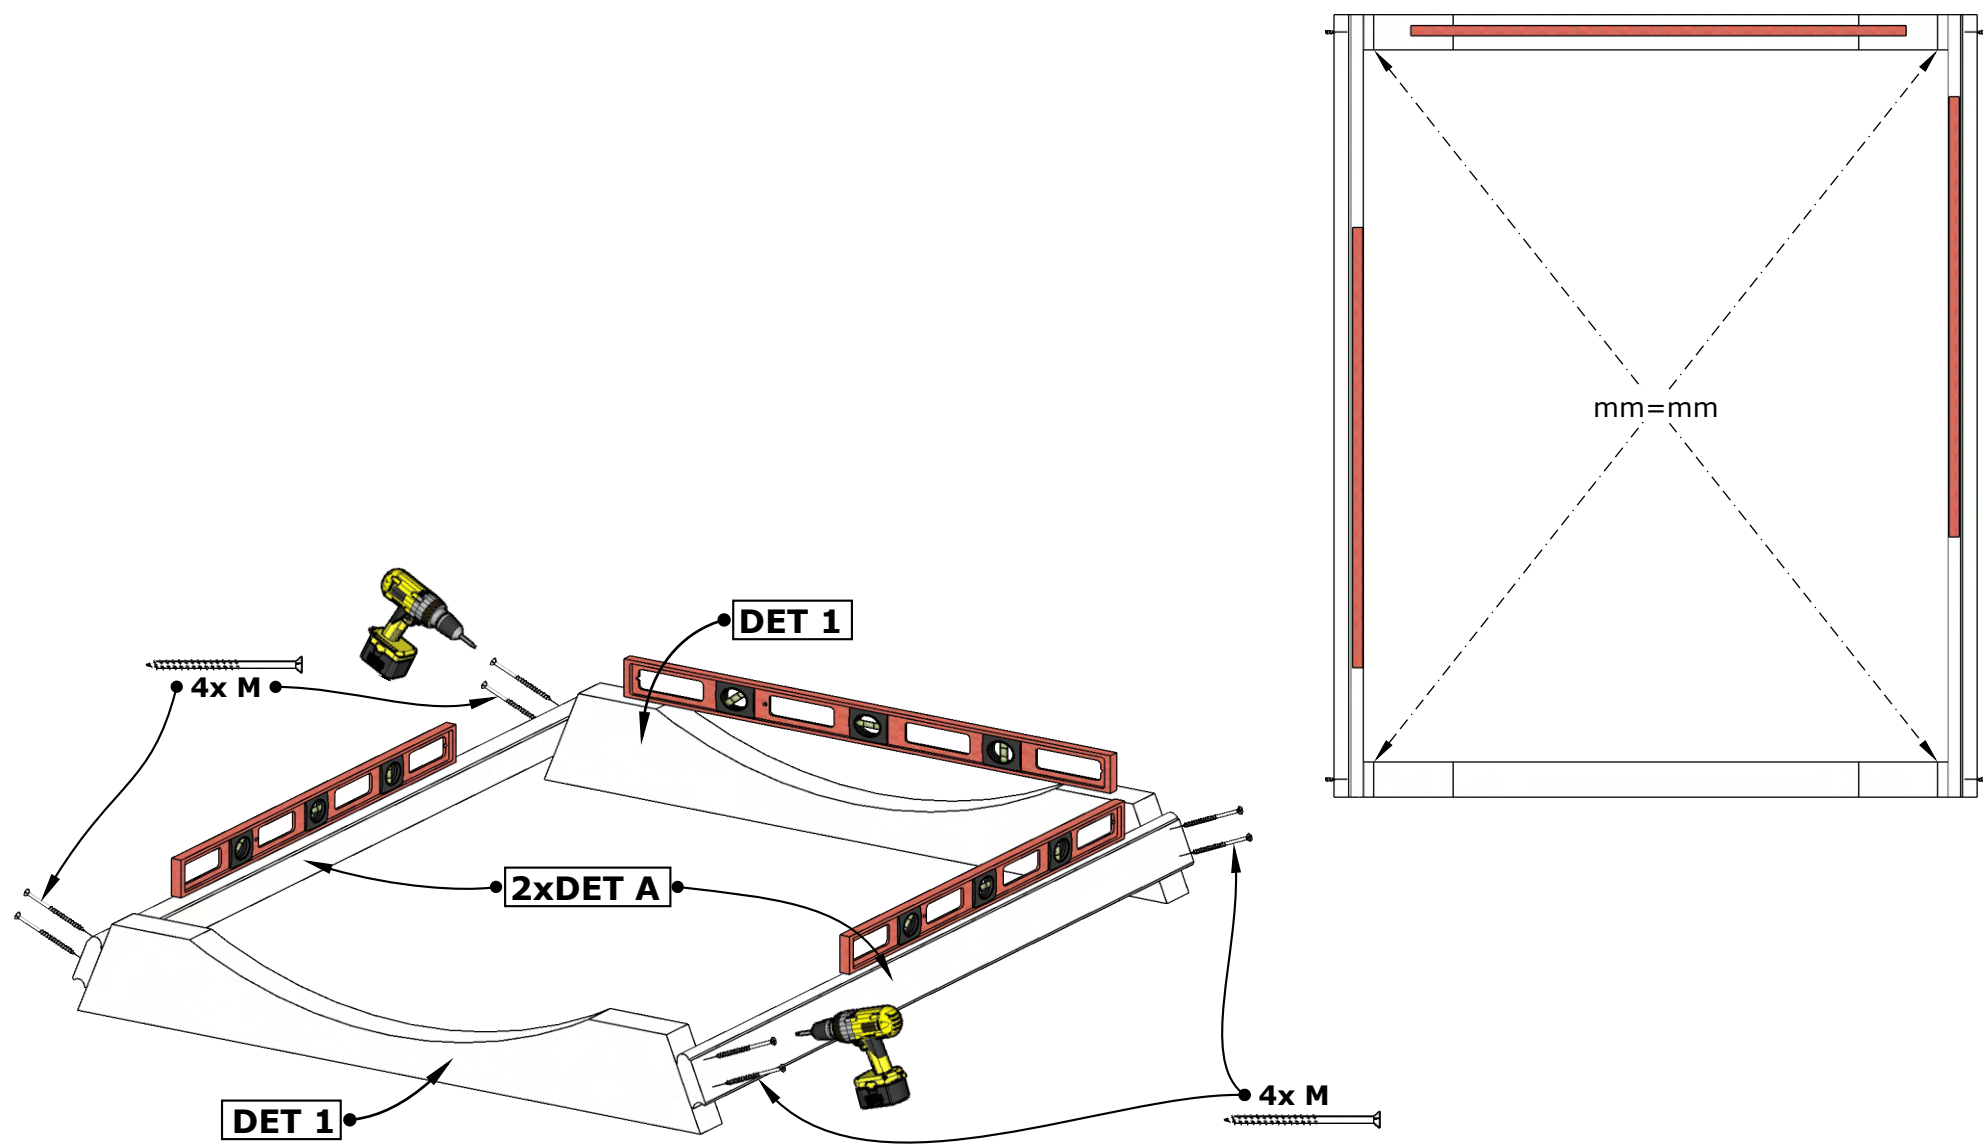

Sauna 280, Ø226

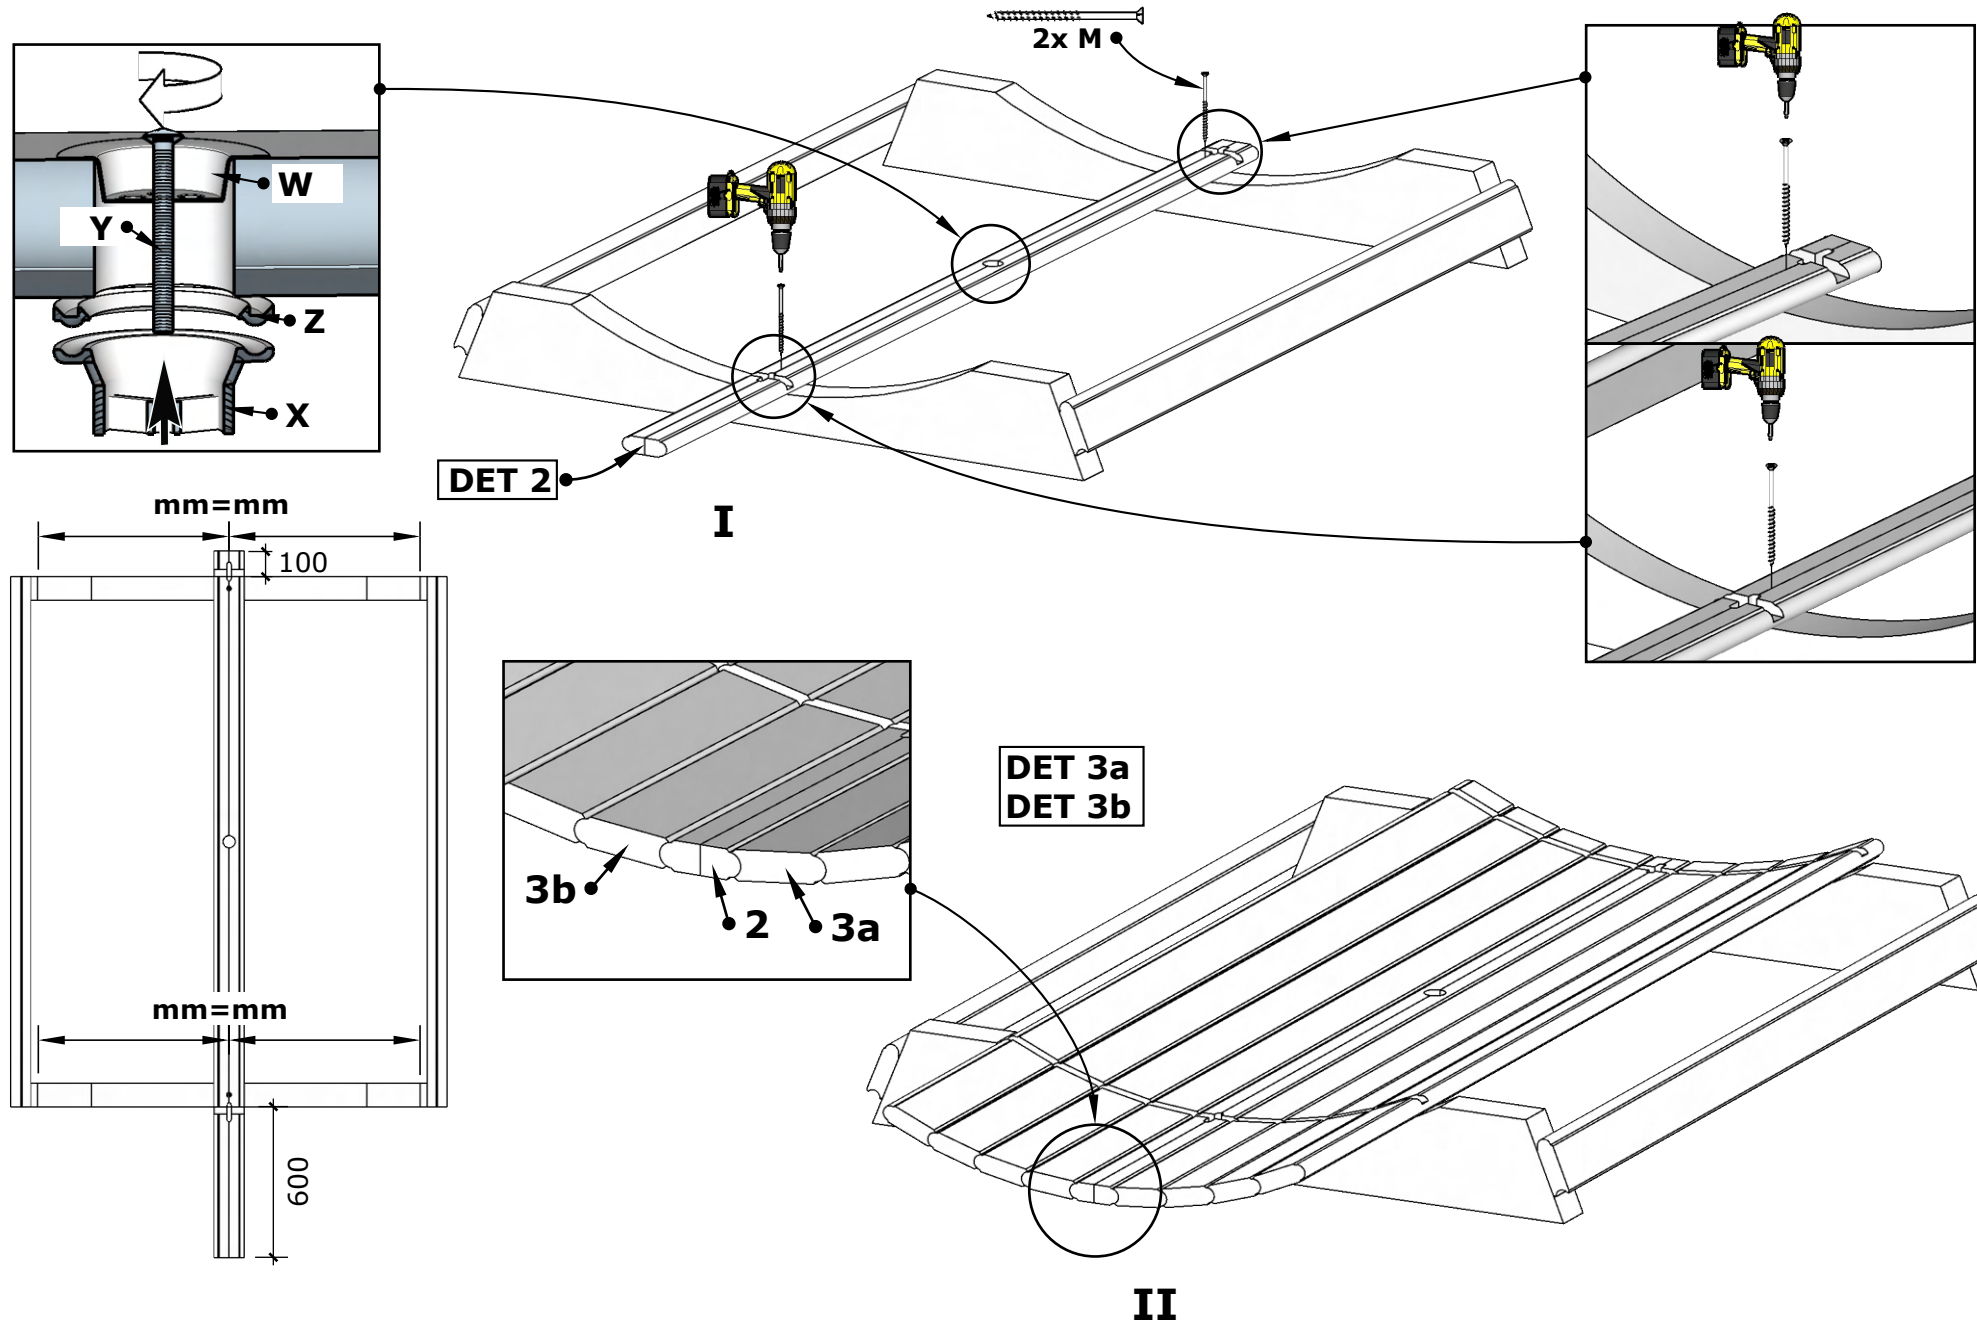

Sauna 280, Ø226

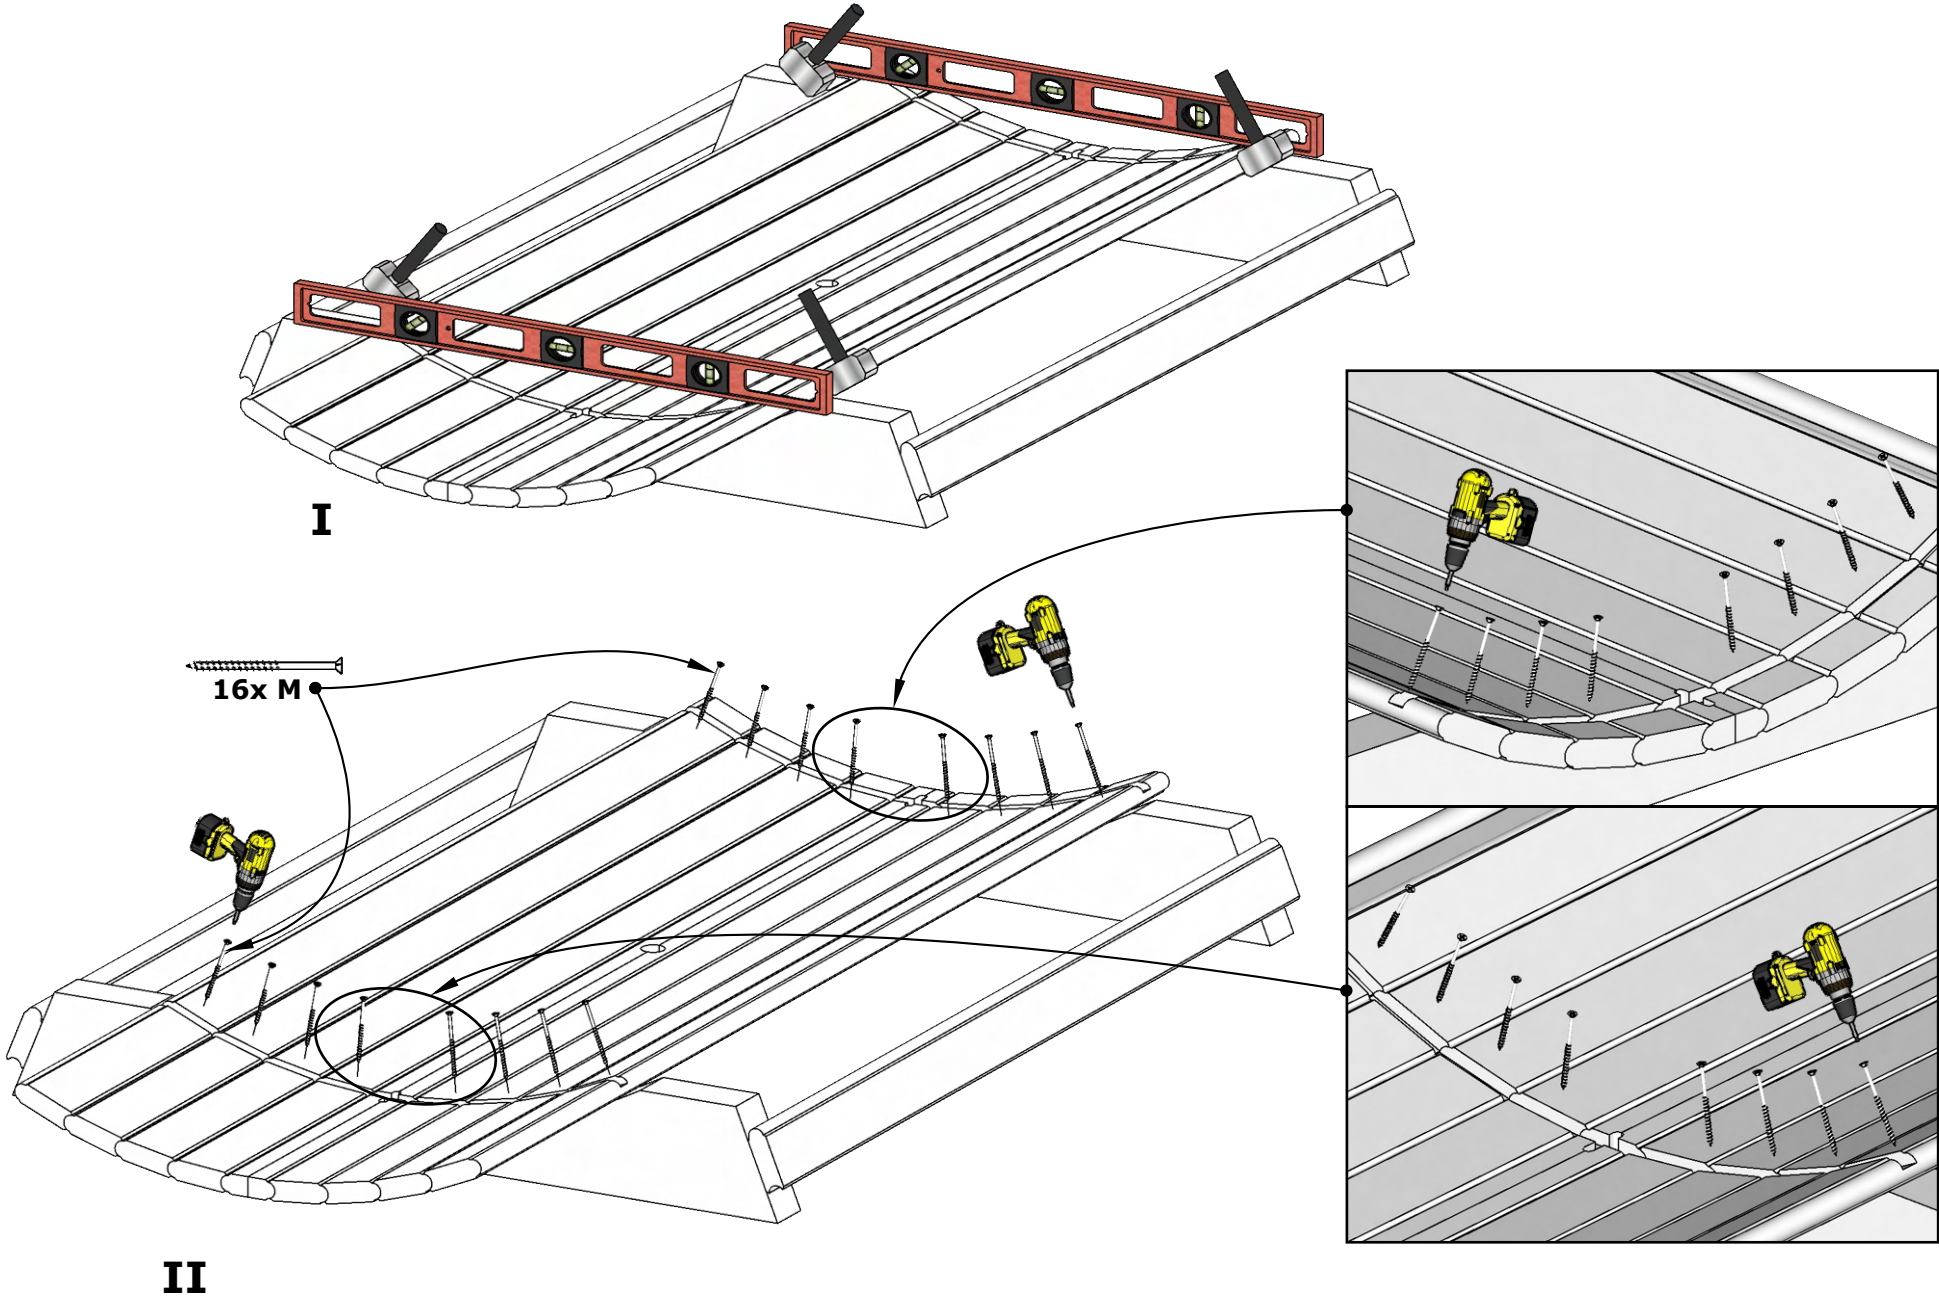

Sauna 280, Ø226




Check walls installation
manual on extra pages!


Sauna wall configuration
depends on Your model!

DET 3a
DET 3b


Fix temporarily to
support walls.

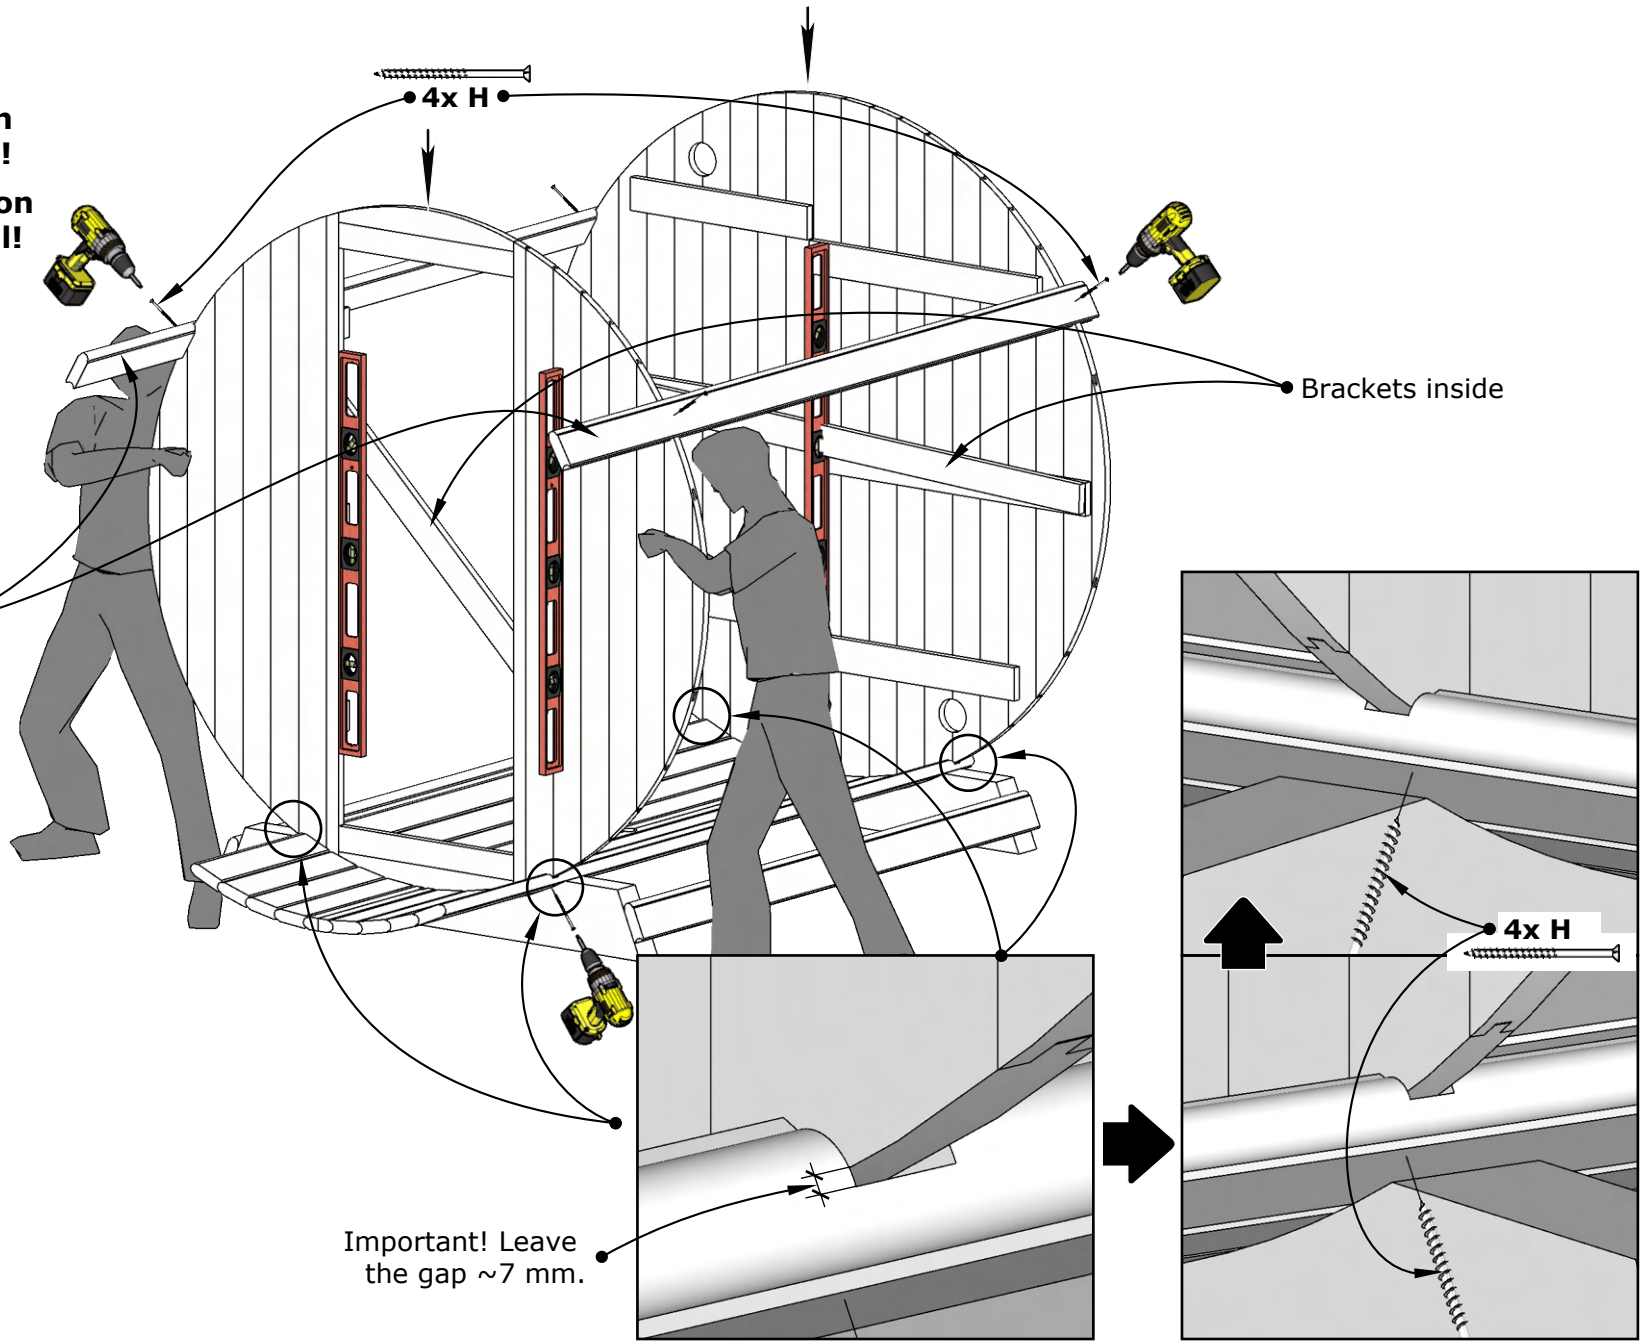



Sauna 280, Ø226

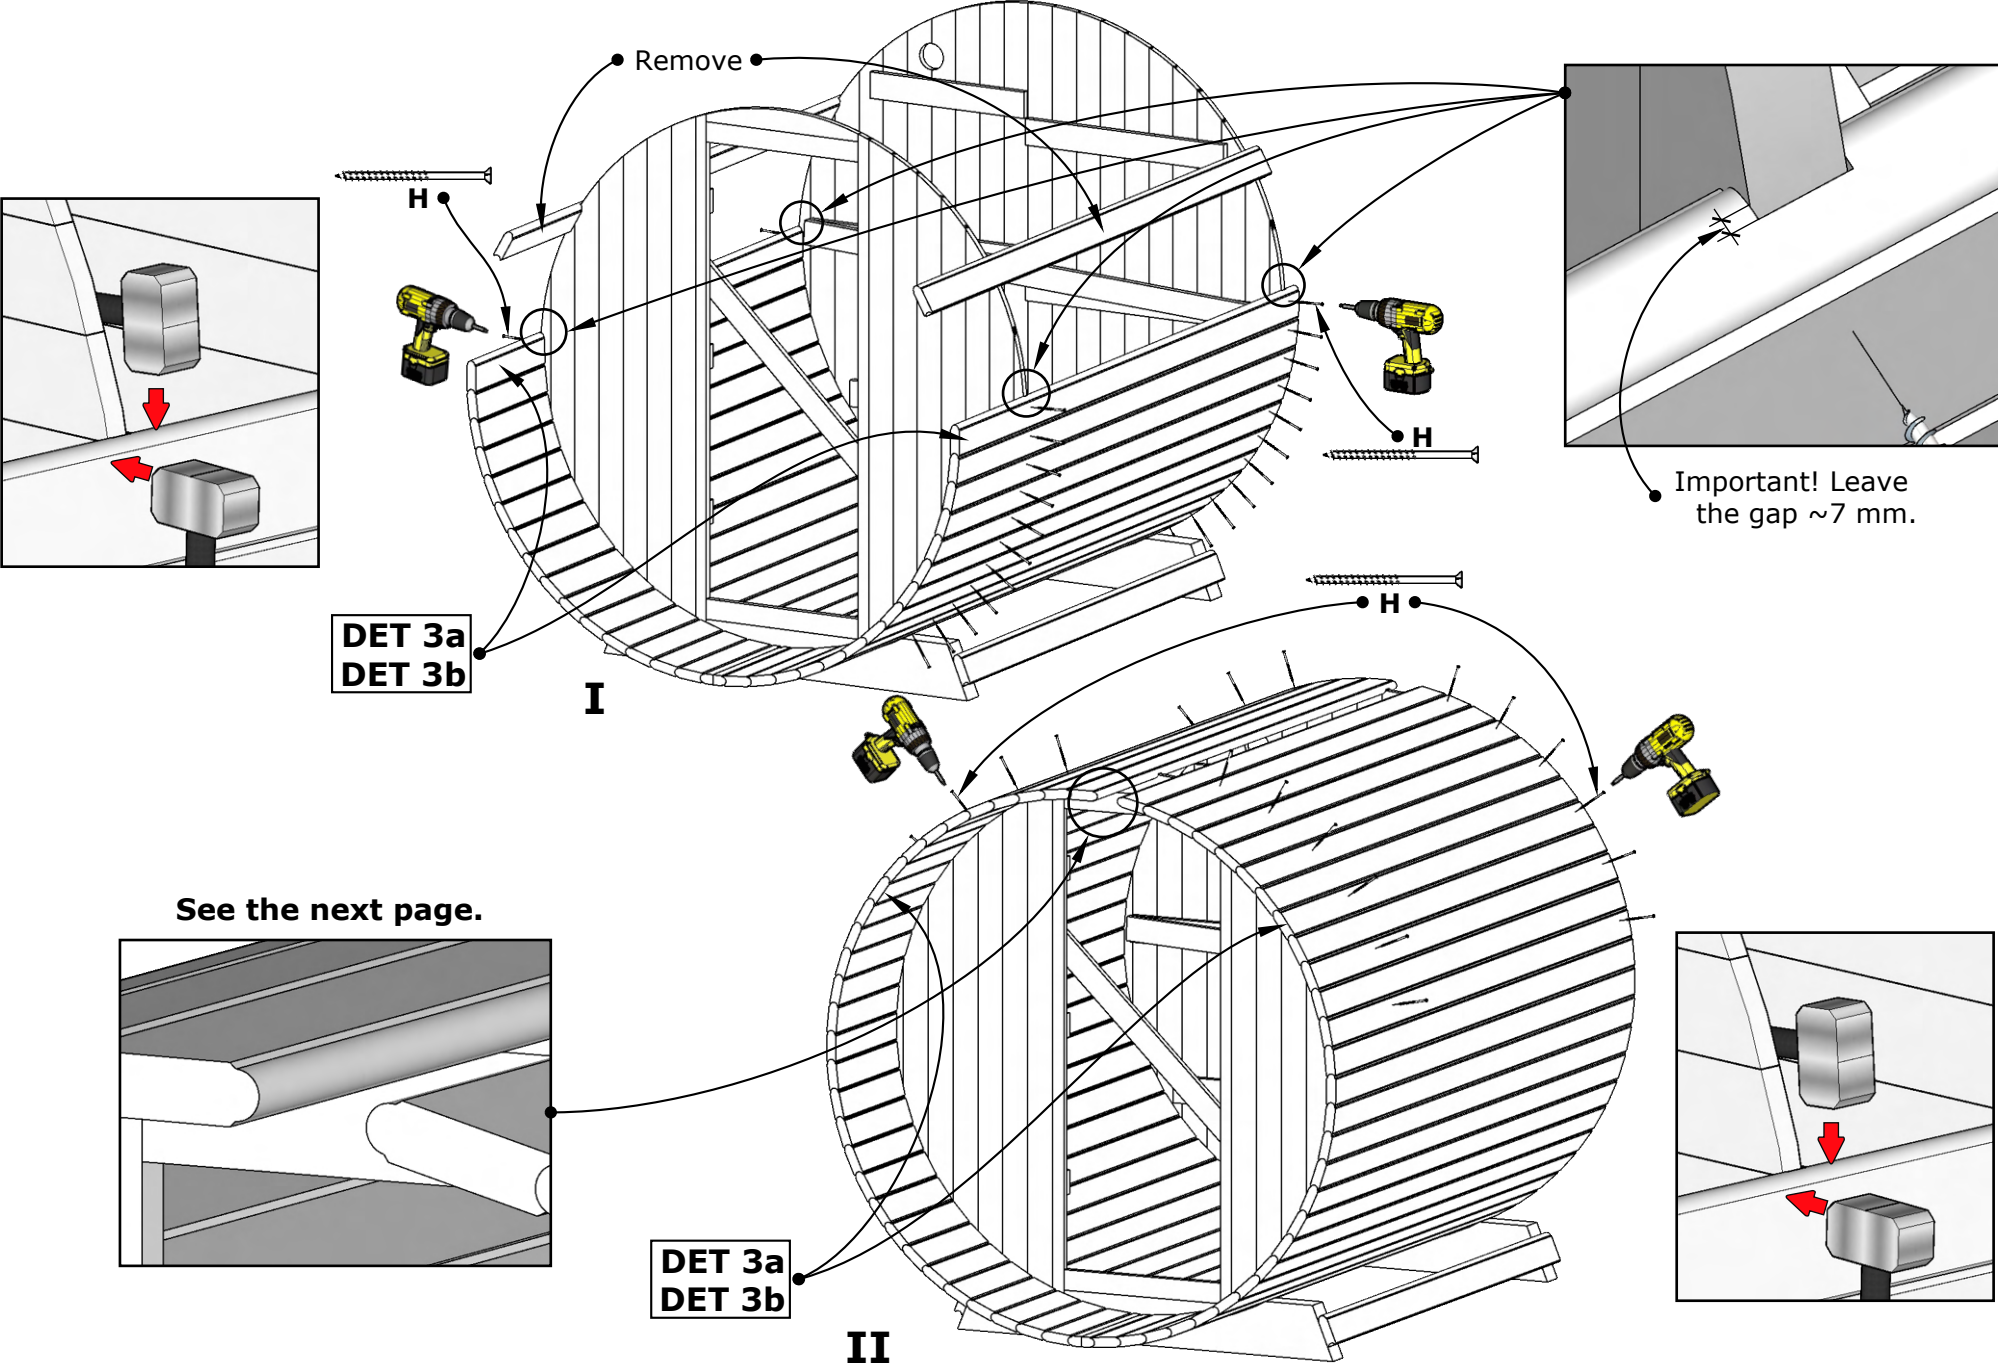


Sauna 280, Ø226

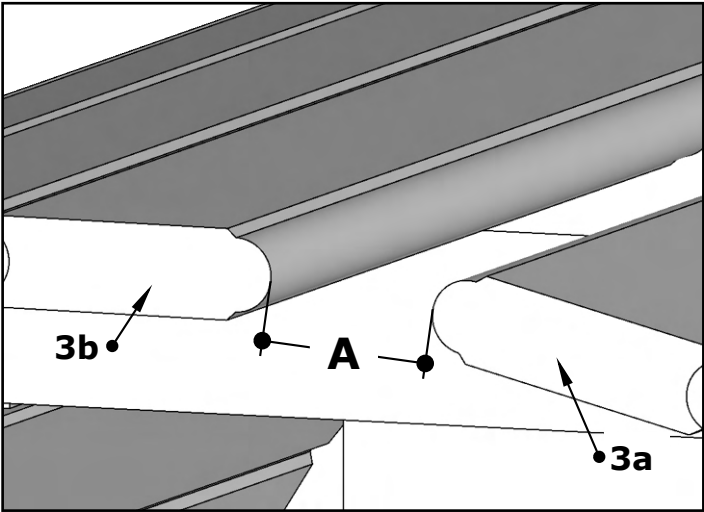


I

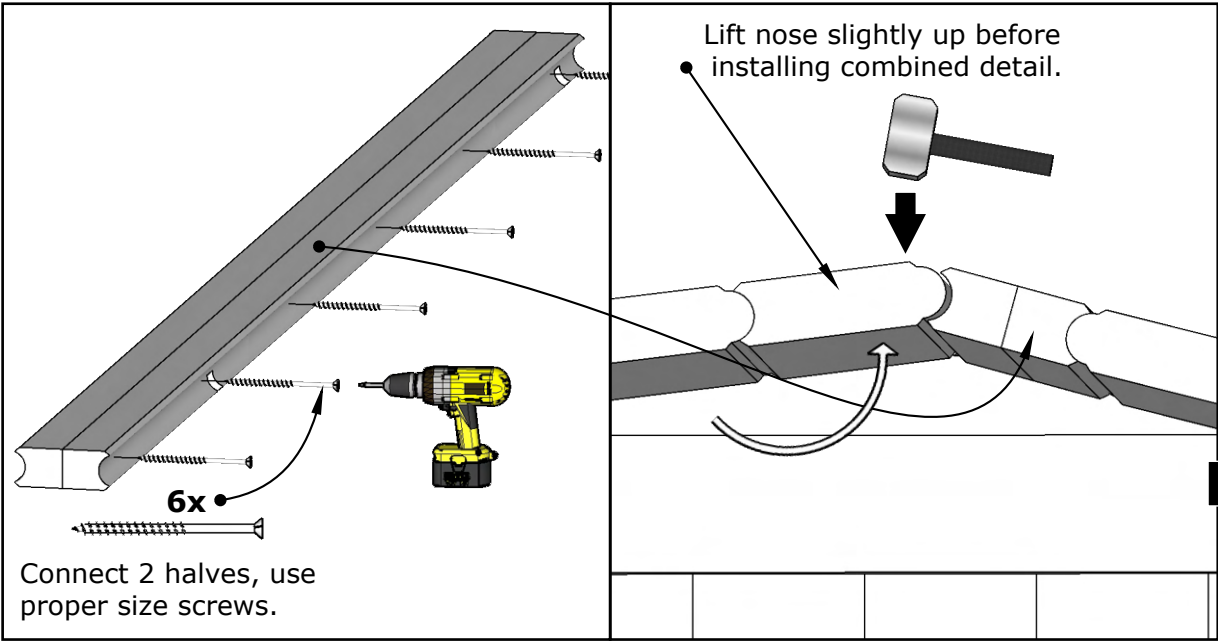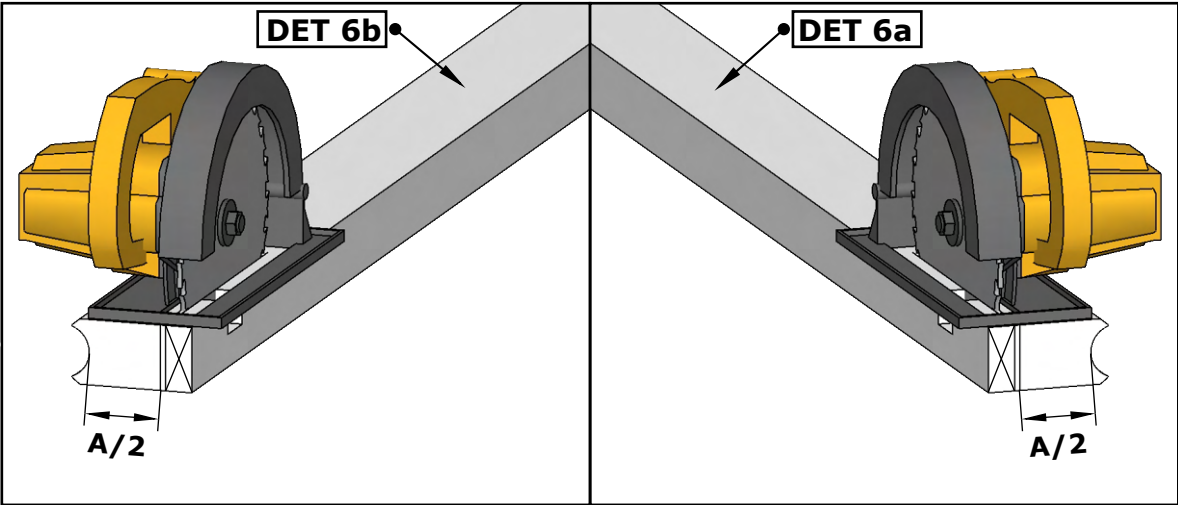


II

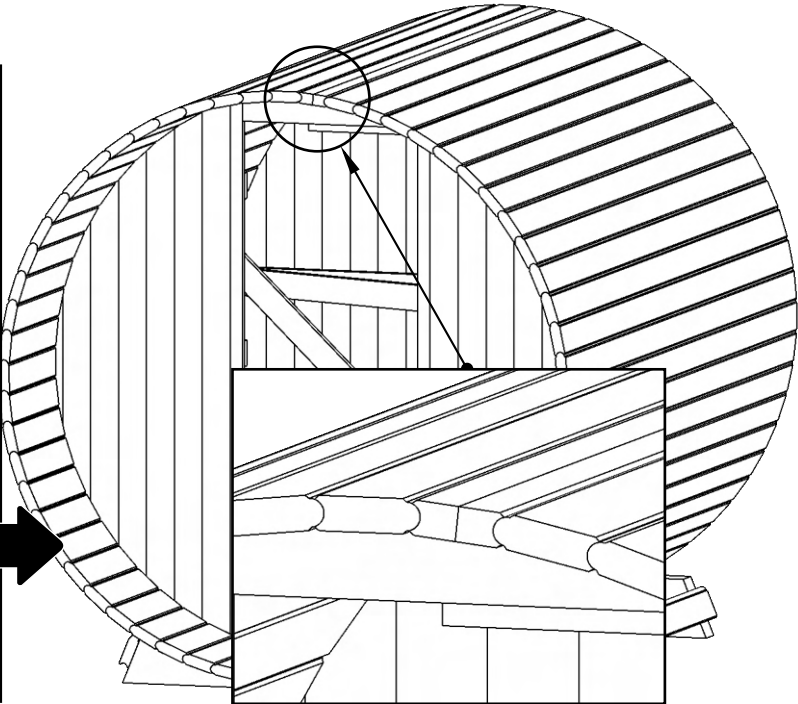


Sauna 280, Ø226

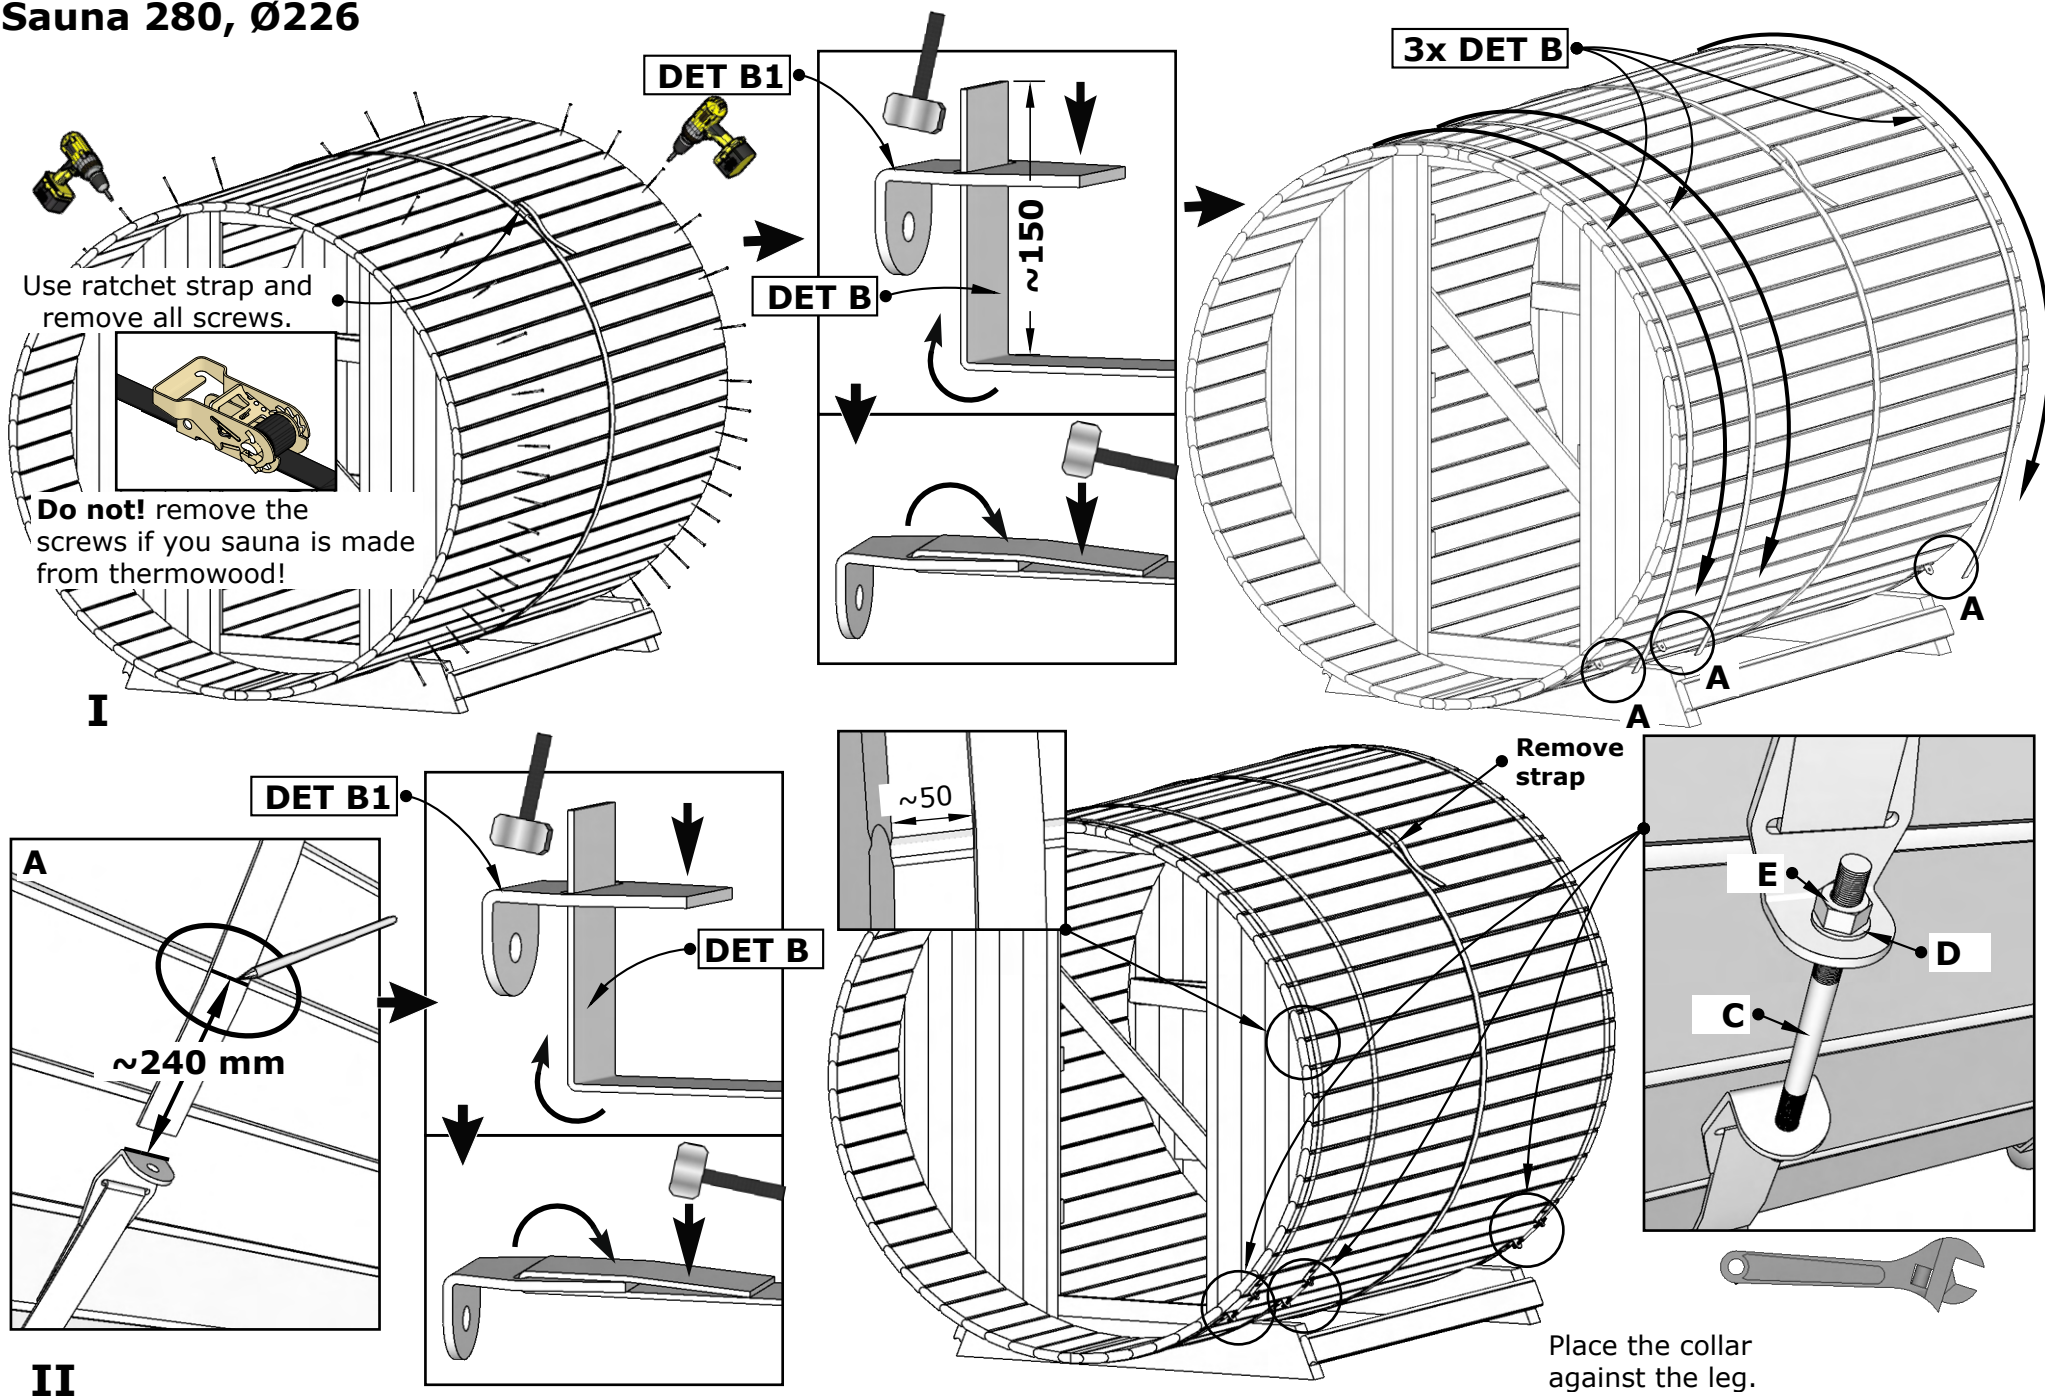



Sauna 280, Ø226

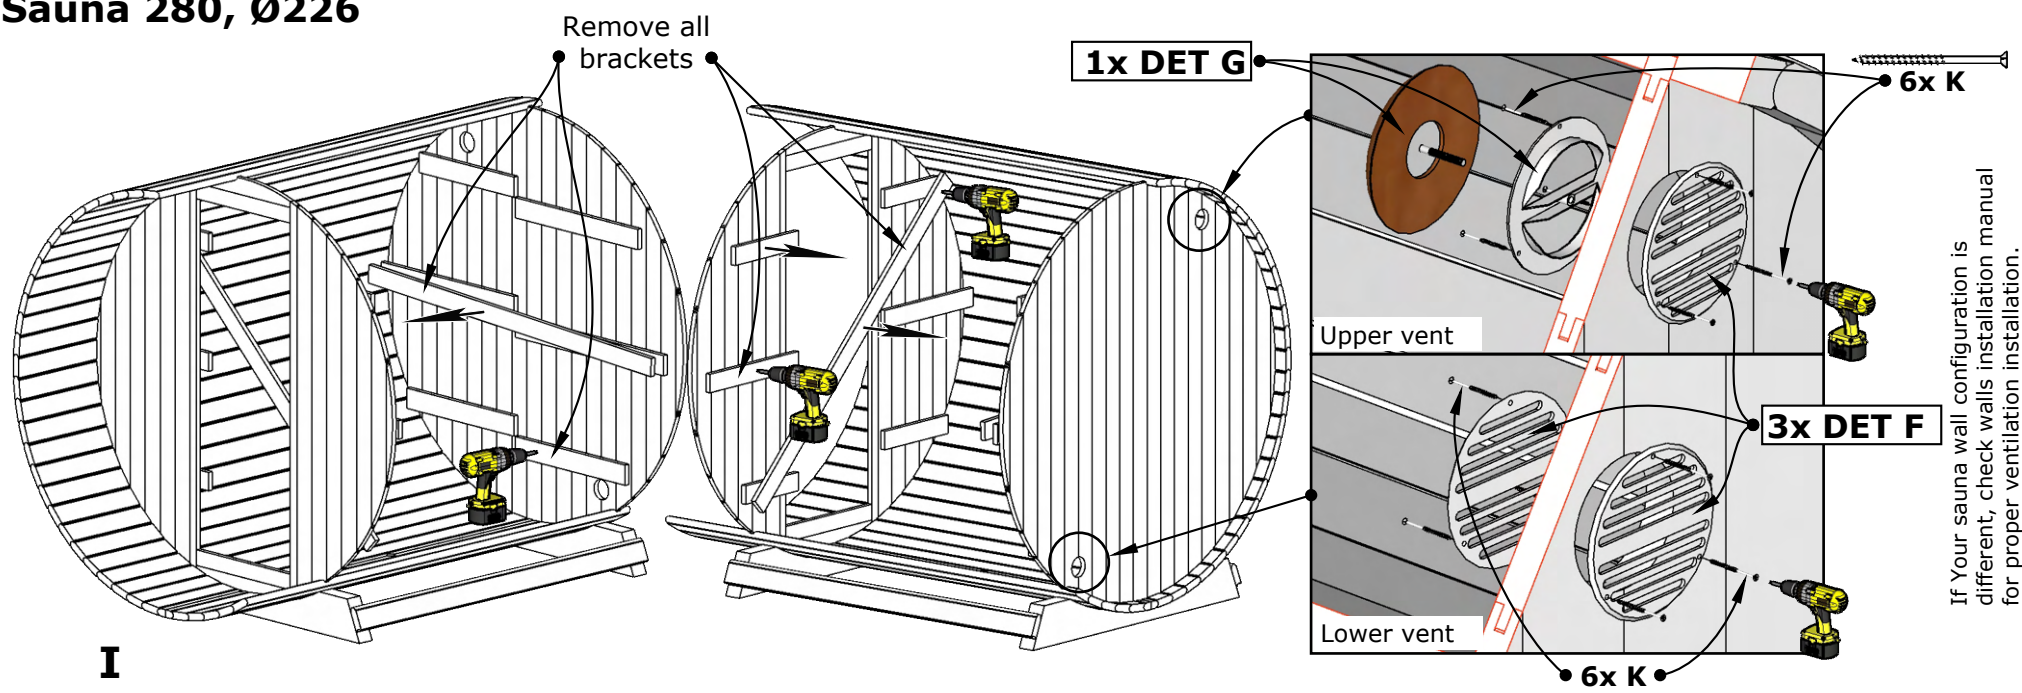


NB! If Your sauna equipped with front glass-wall, the sauna benches installation manual included in front glass-wall installation manual.

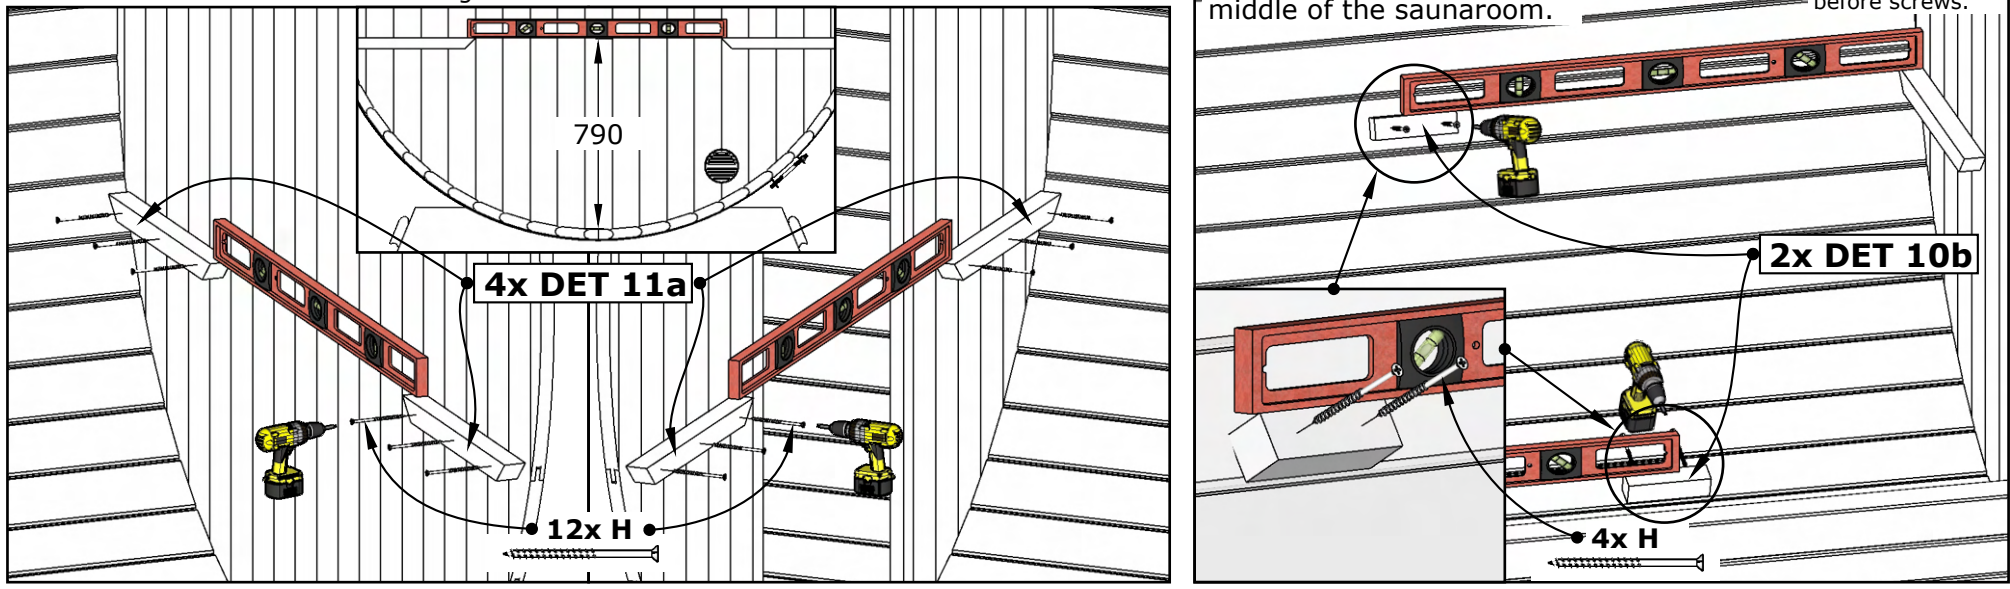

Sauna 280, Ø226

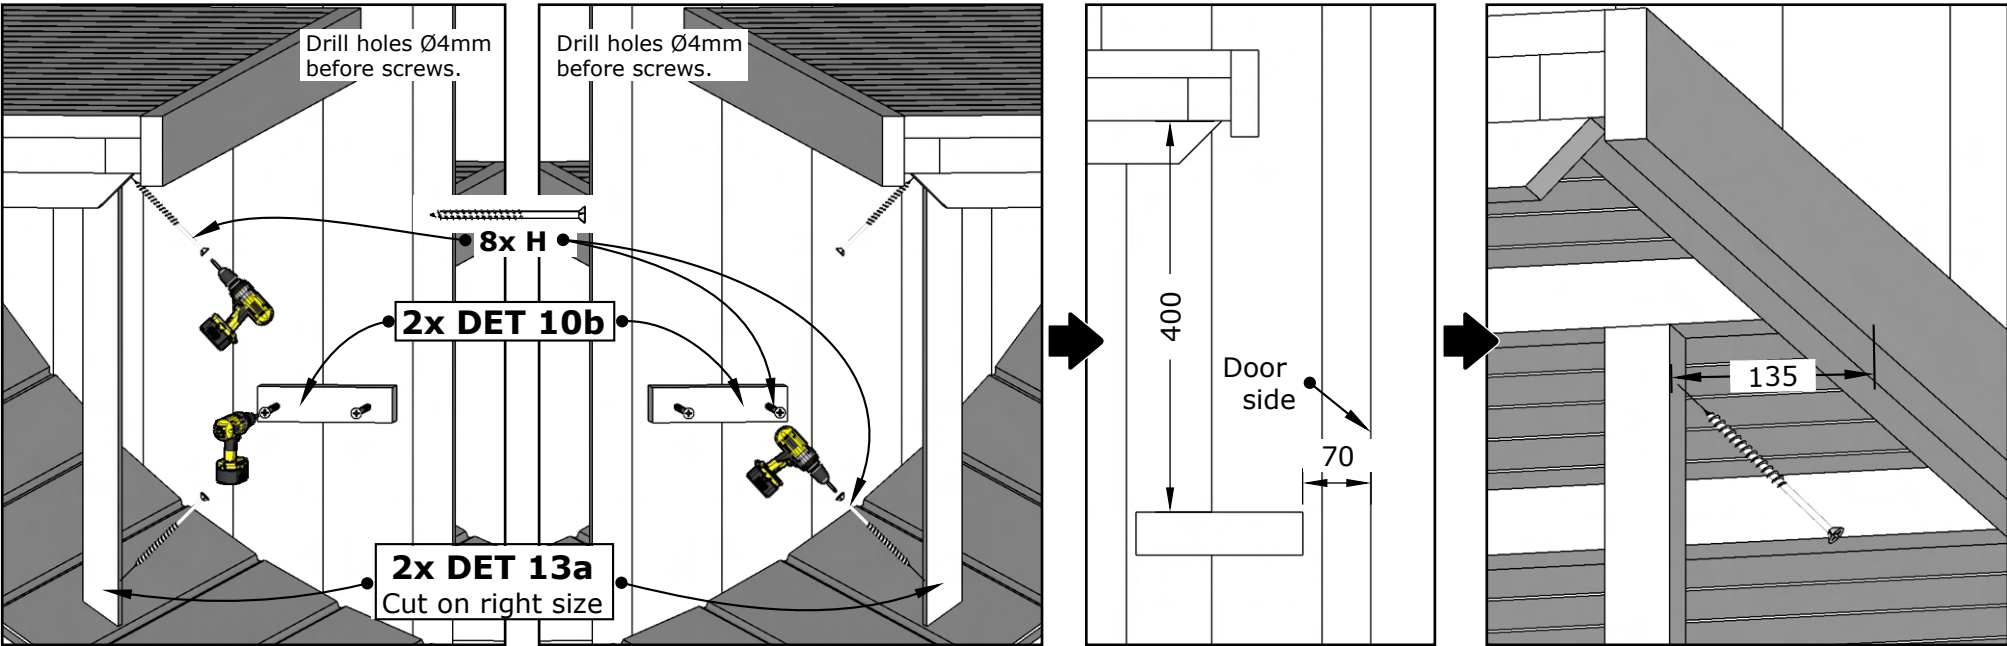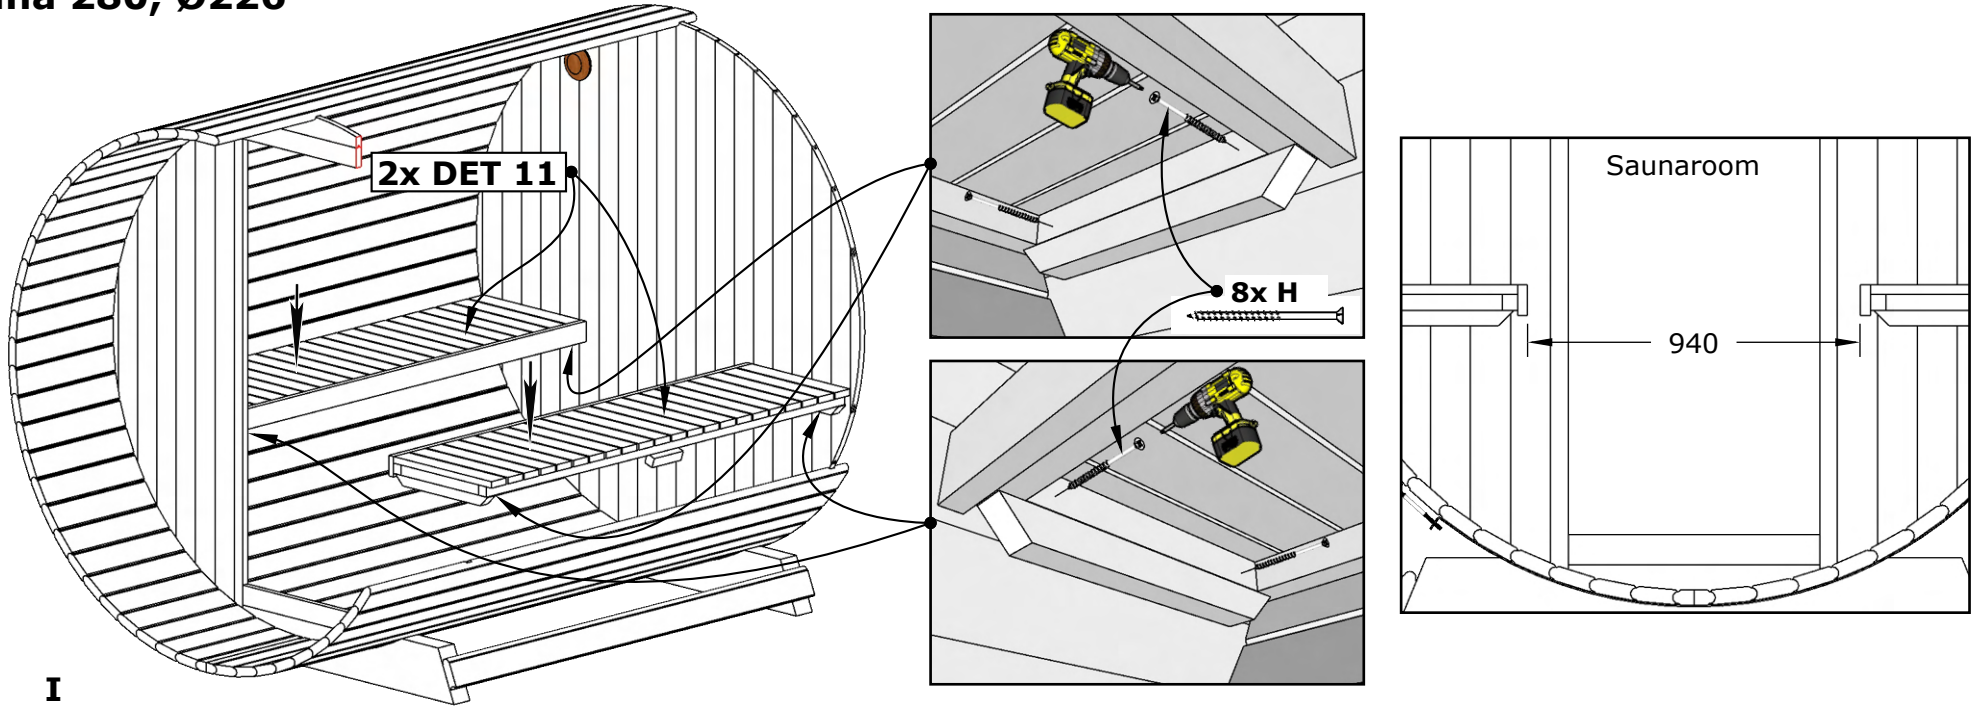

Sauna 280, Ø226

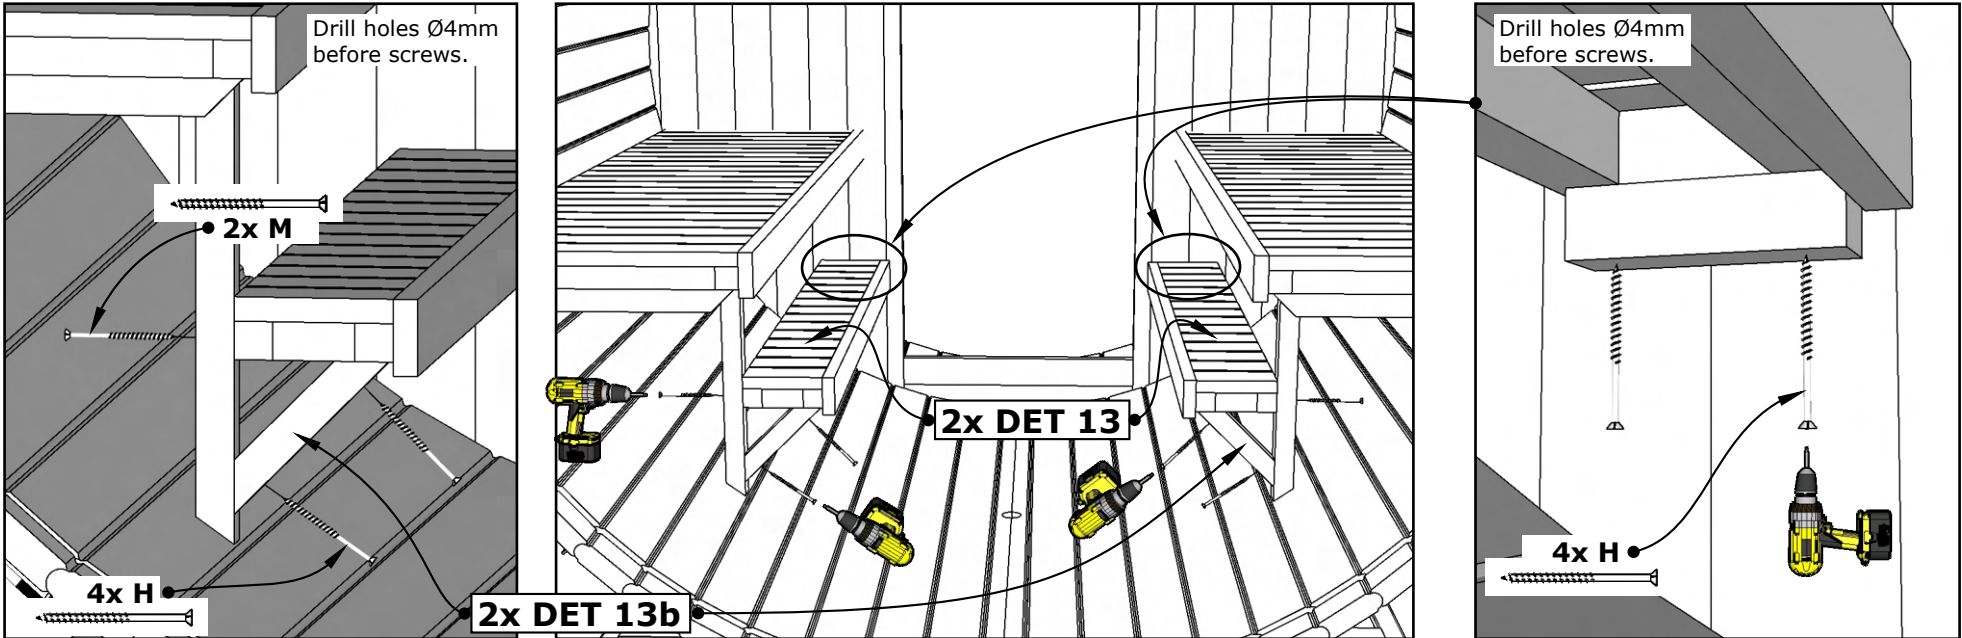


I

NB! Only if Your sauna equipped with front windows!


Mark windows opening!

Measure windows and add 5 mm. to each side

DET 8

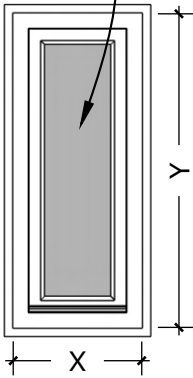

NB! Pay attention to window casement fitting!


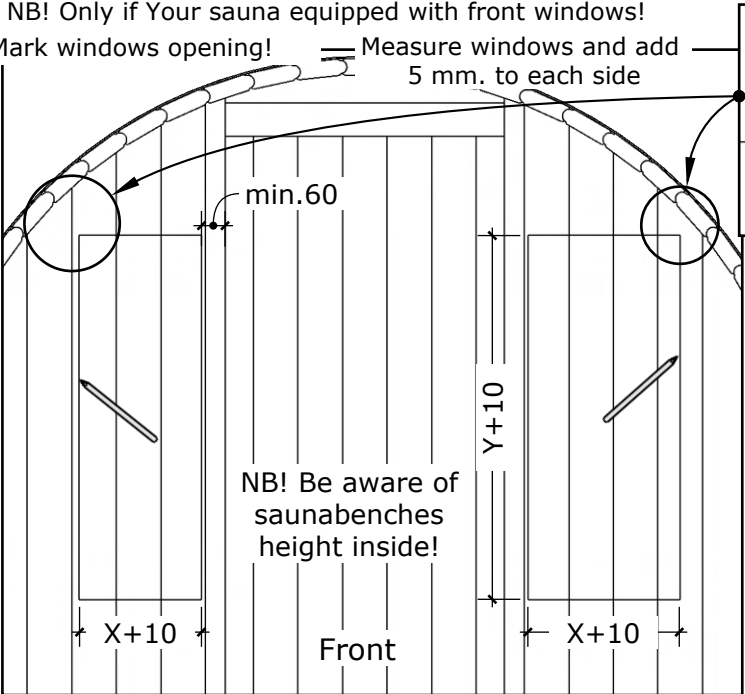


Front

NB! Only if Your sauna equipped with back windows!



Mark windows opening!

Measure windows and add 5 mm. to each side

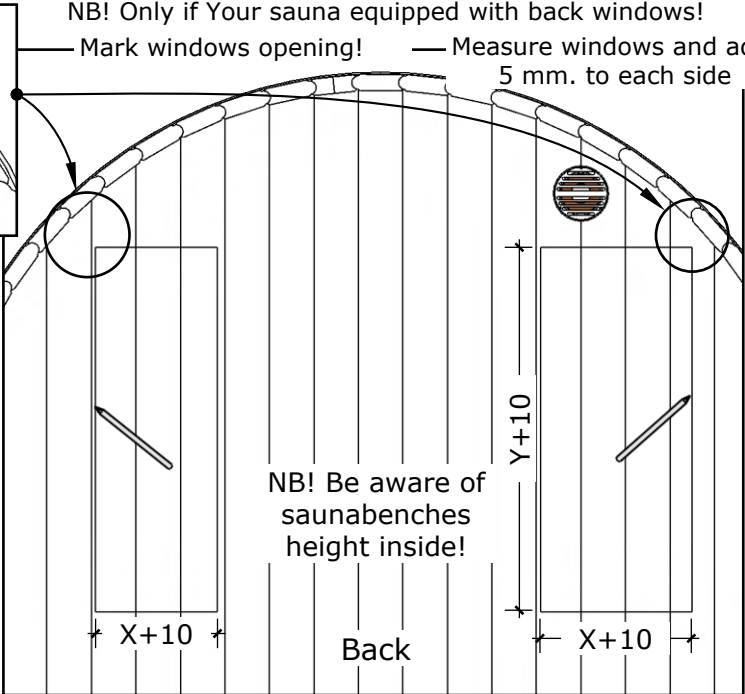
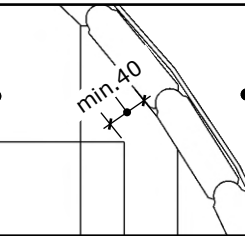


Back


Sauna 280, Ø226

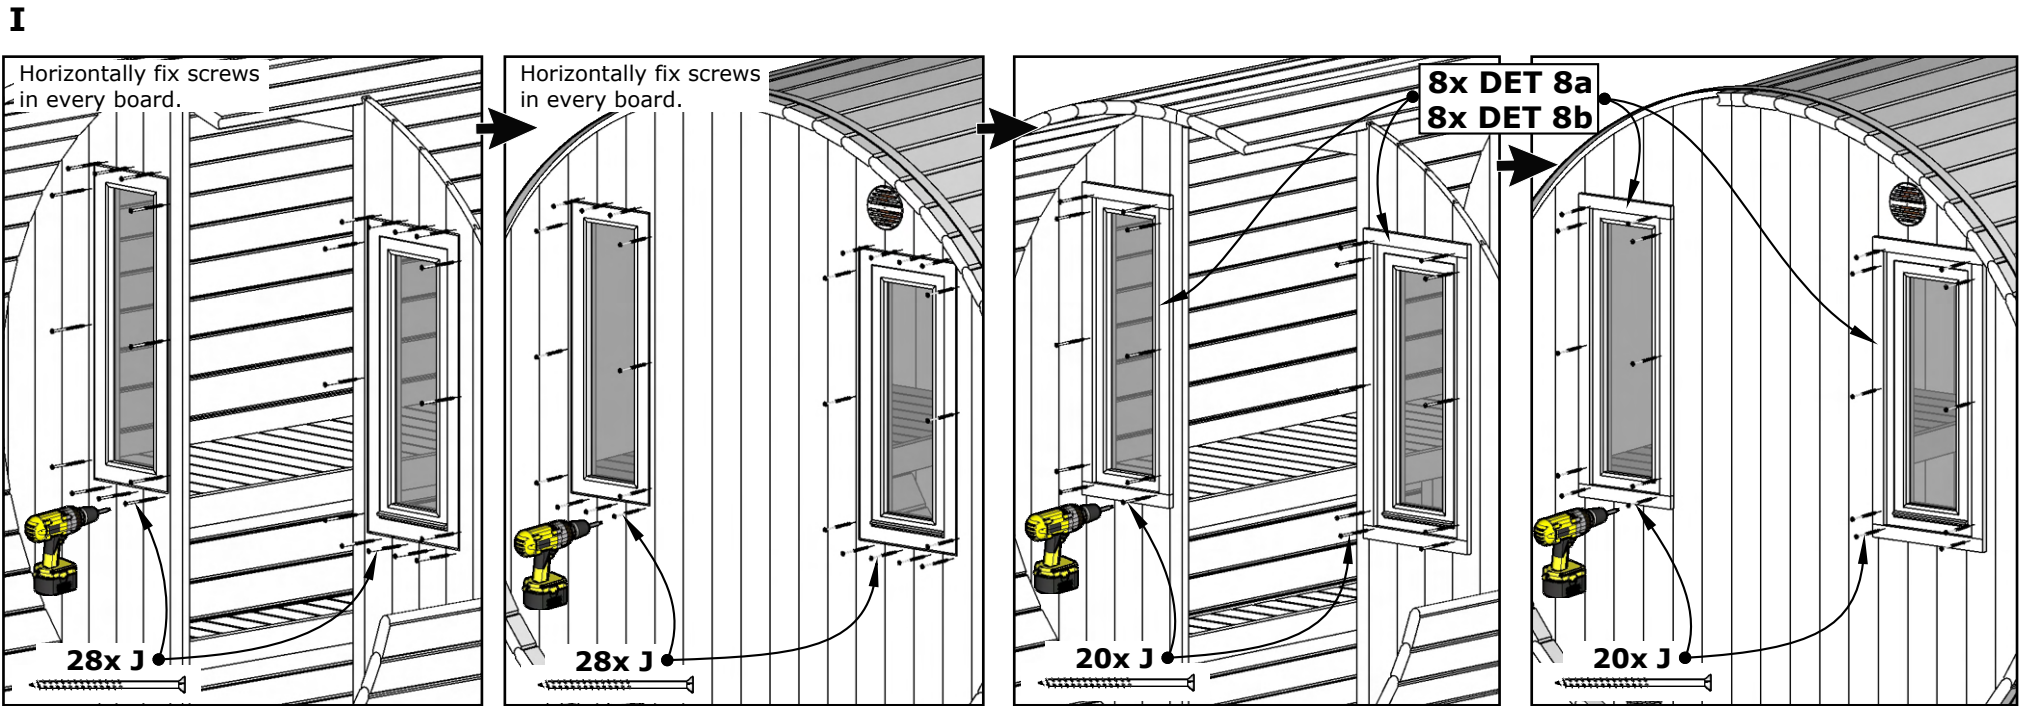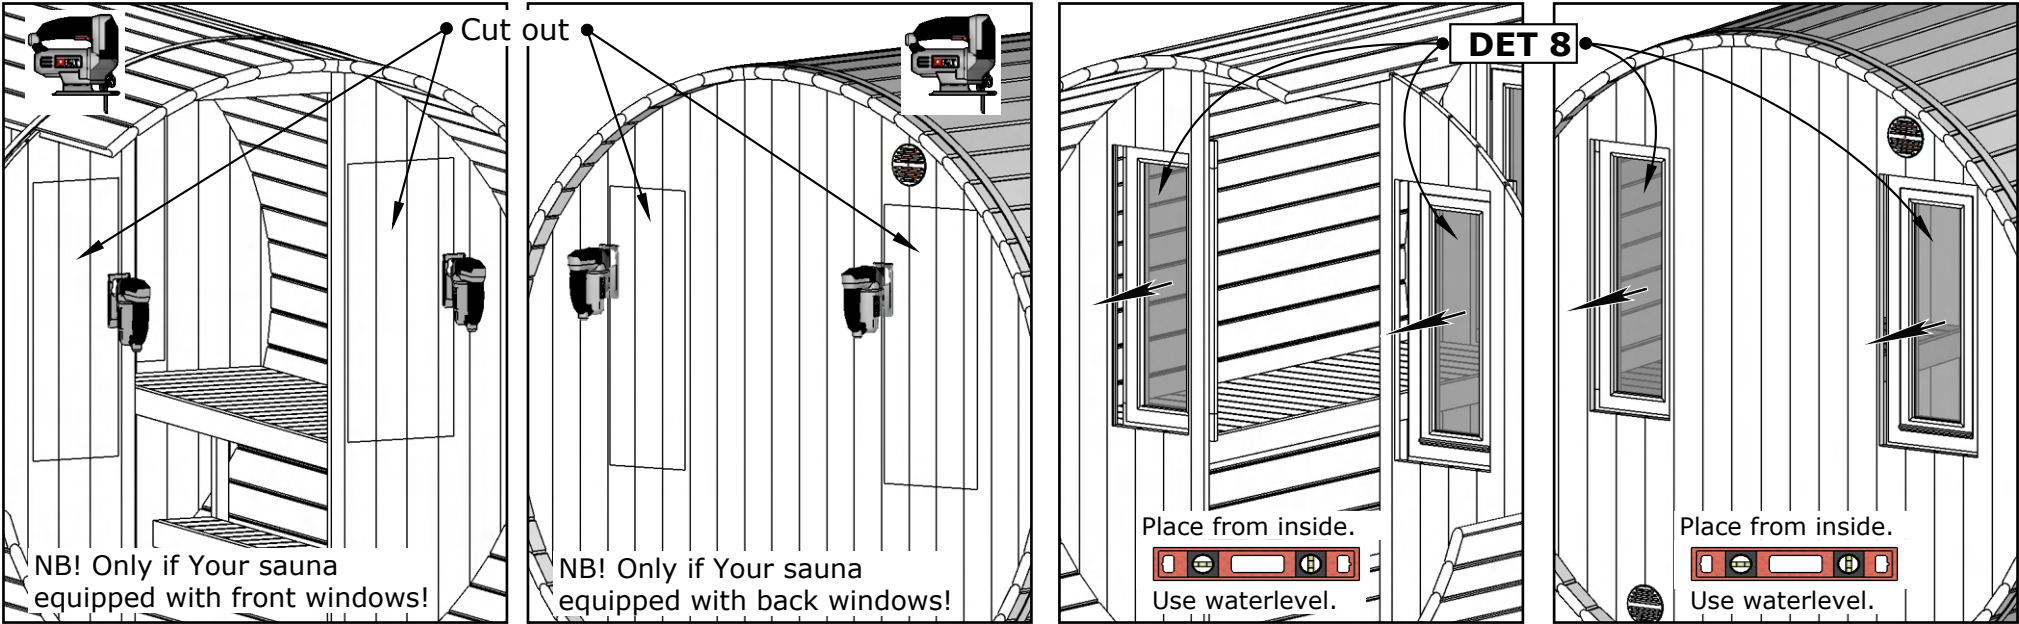



Sauna 280, Ø226

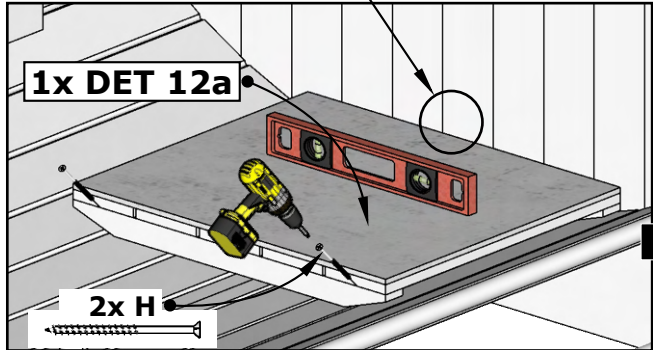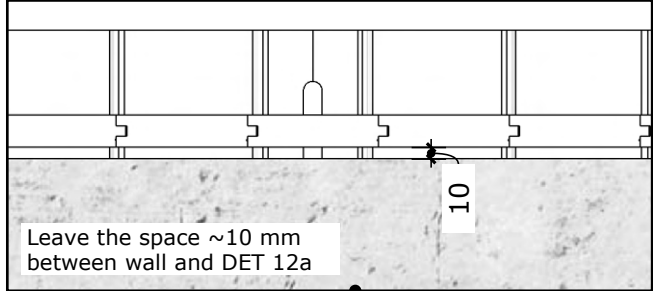


If Your sauna equipped with electrical heater, fix DET 12 b directly to the wall without DET L. Then use screws K.

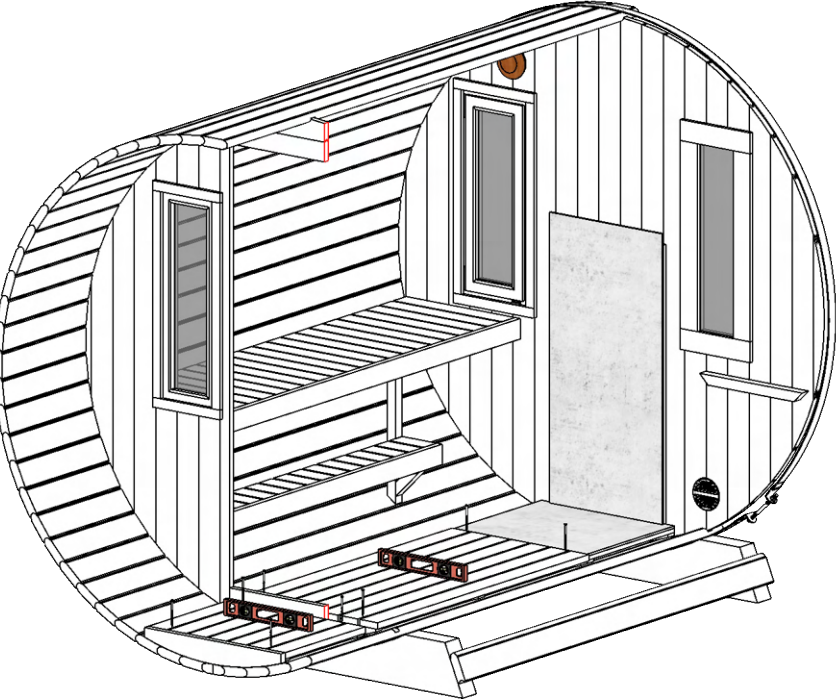


I

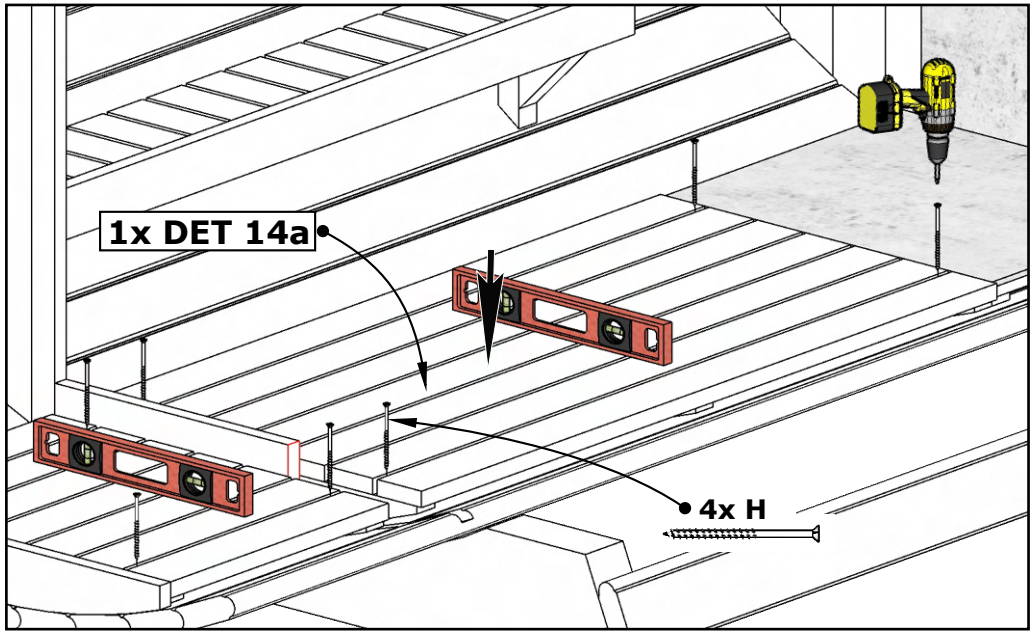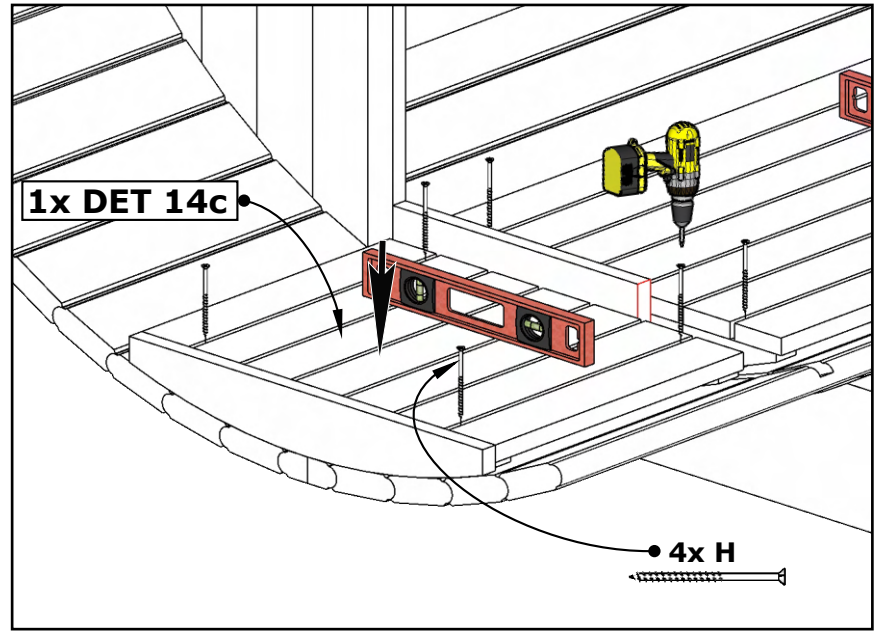


Sauna 280, Ø226

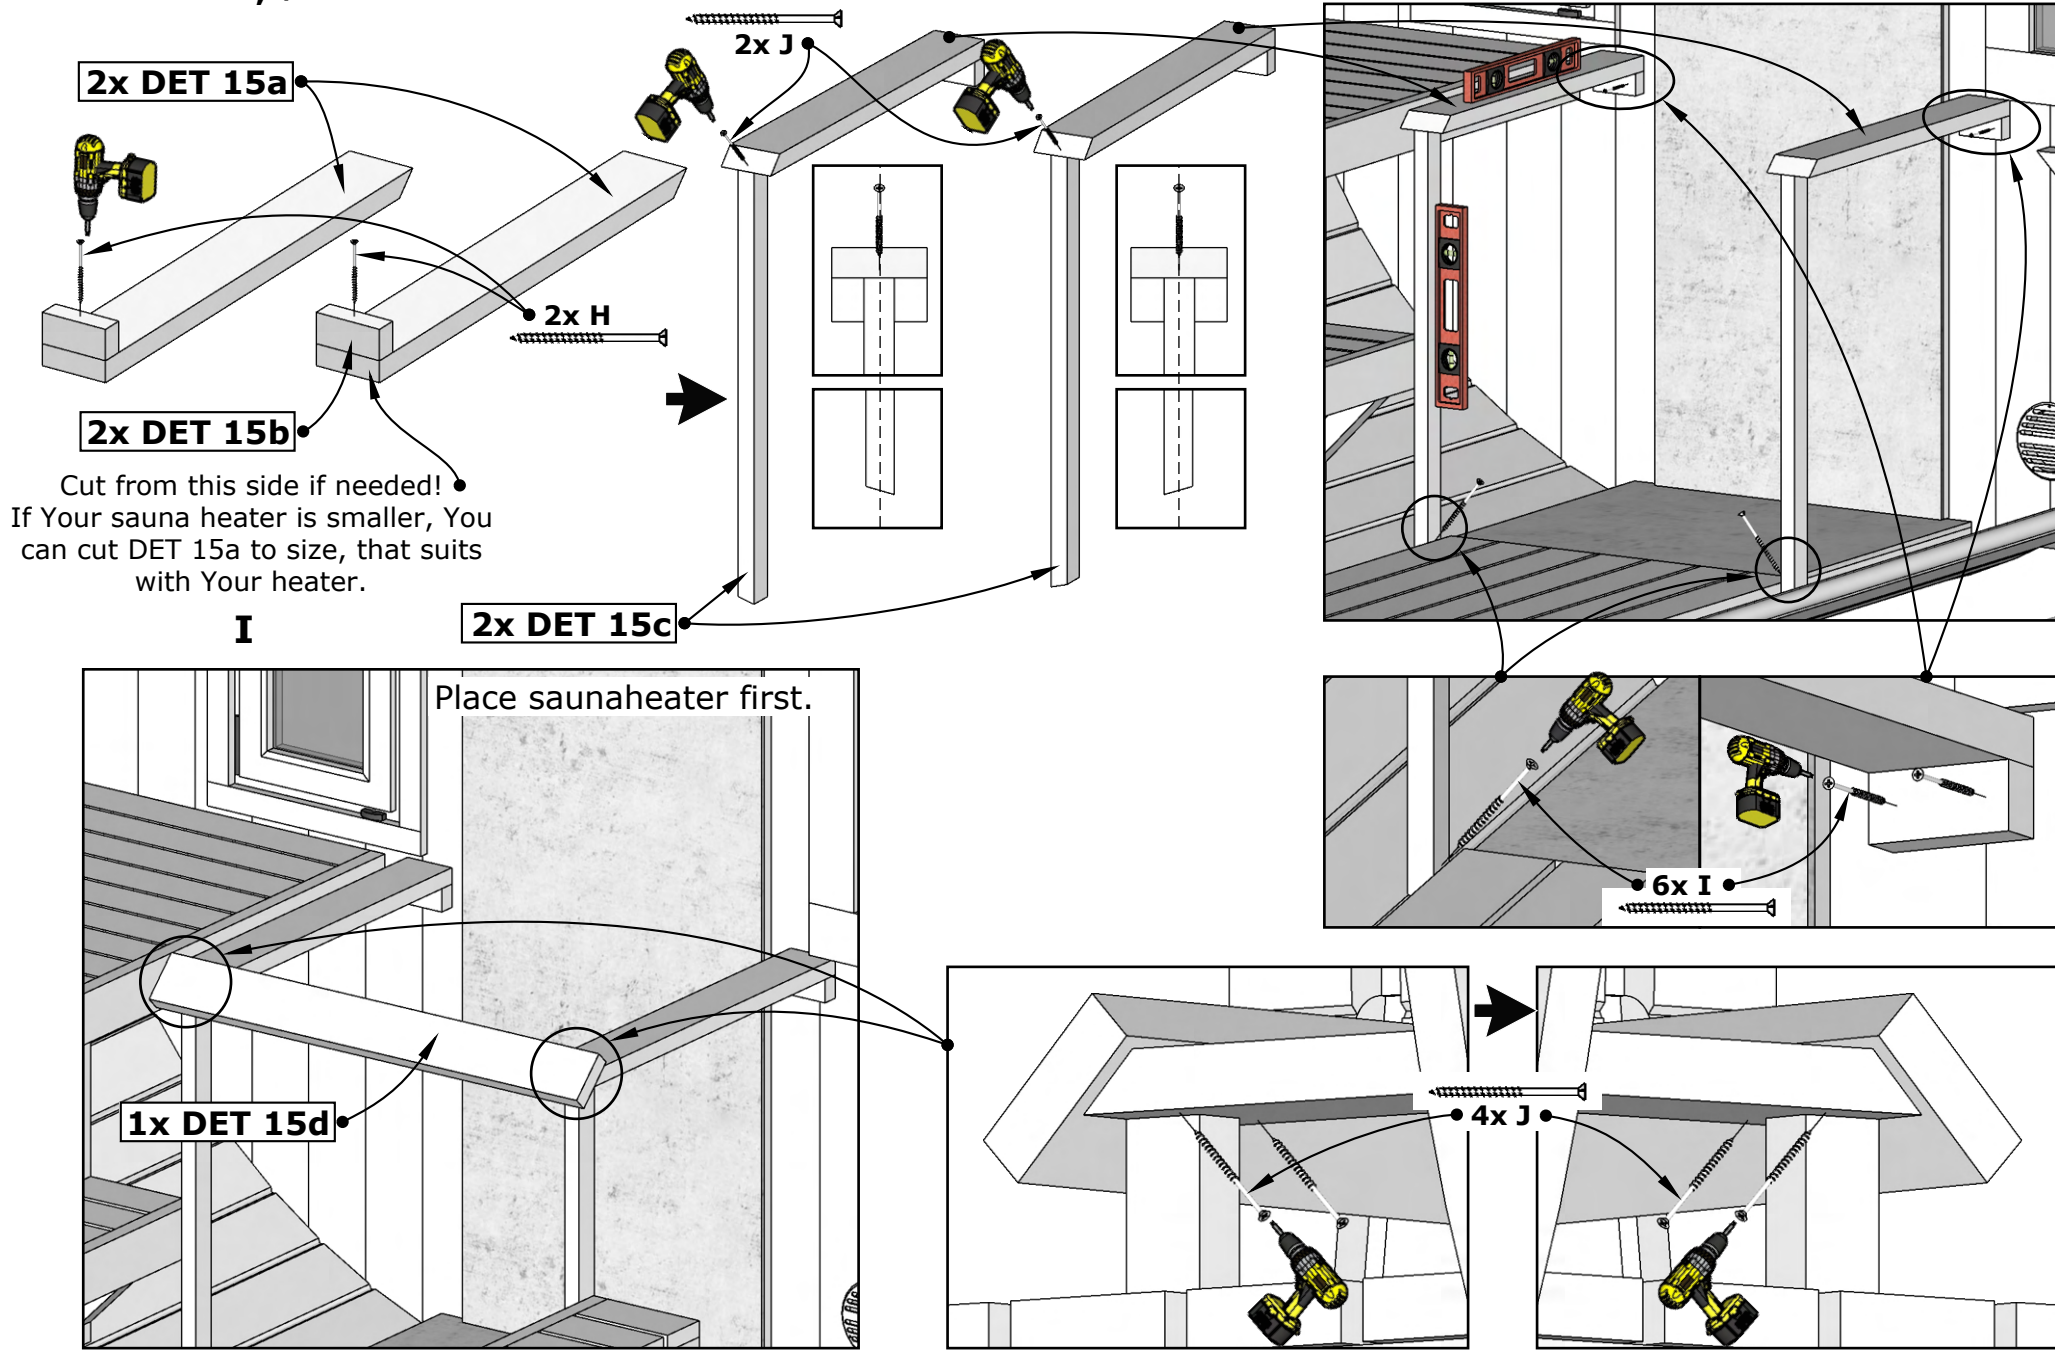

Sauna 280, Ø226

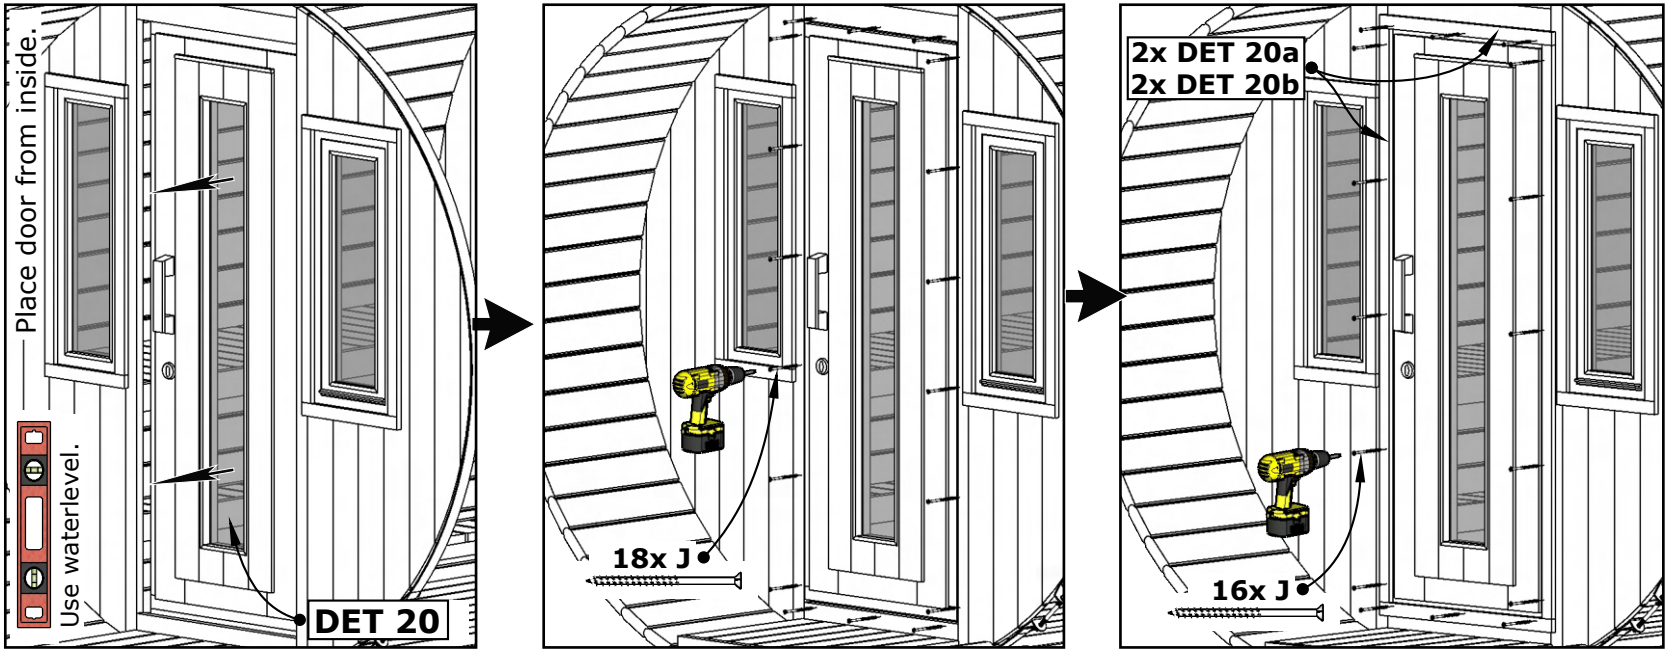


I

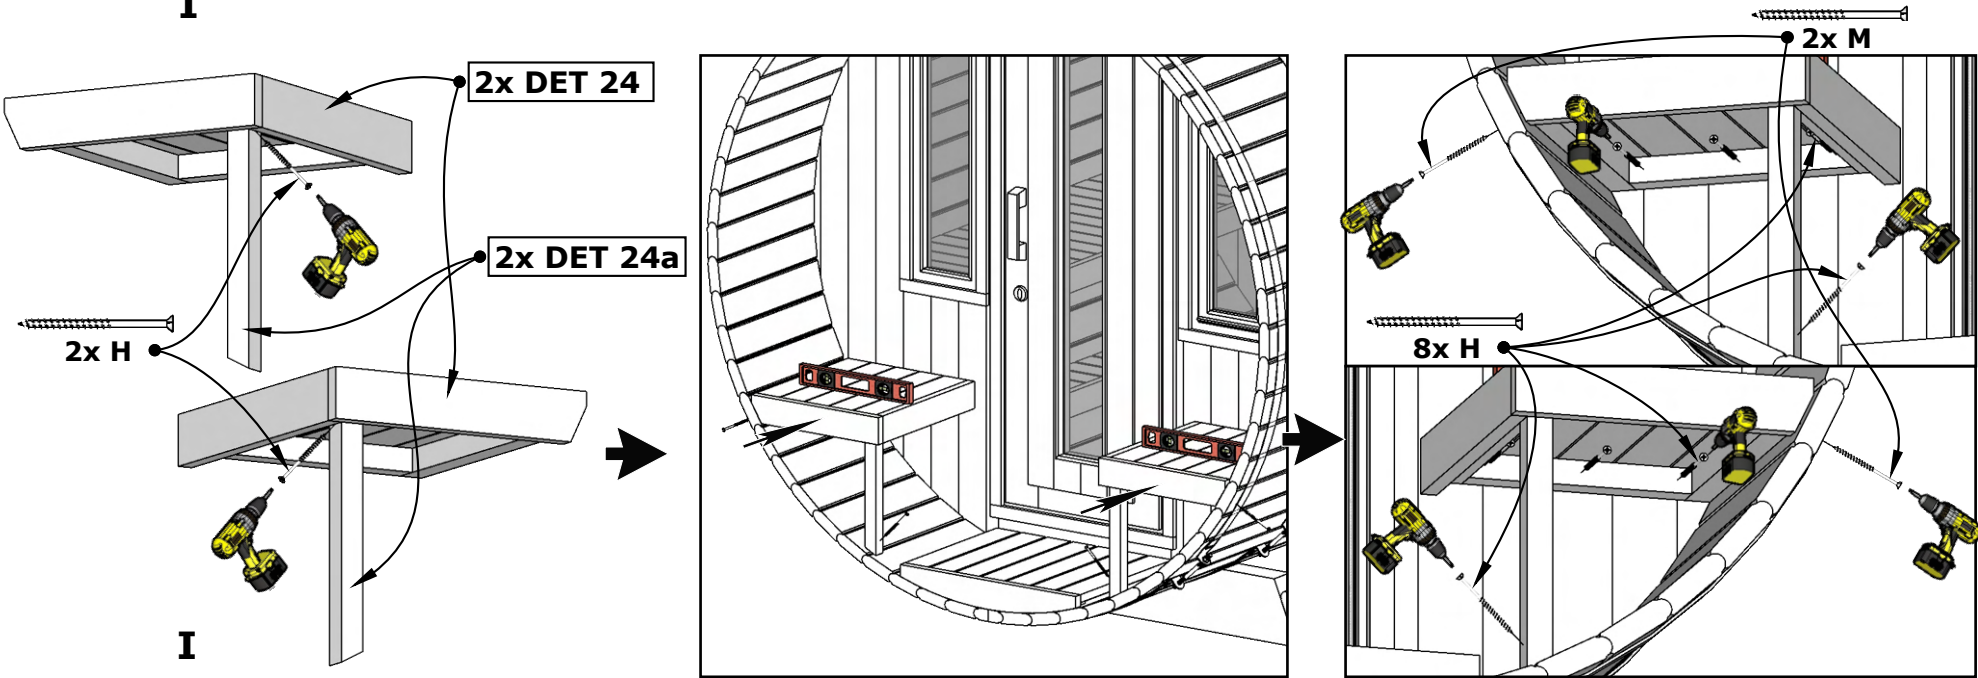


I





Sauna 280, Ø226

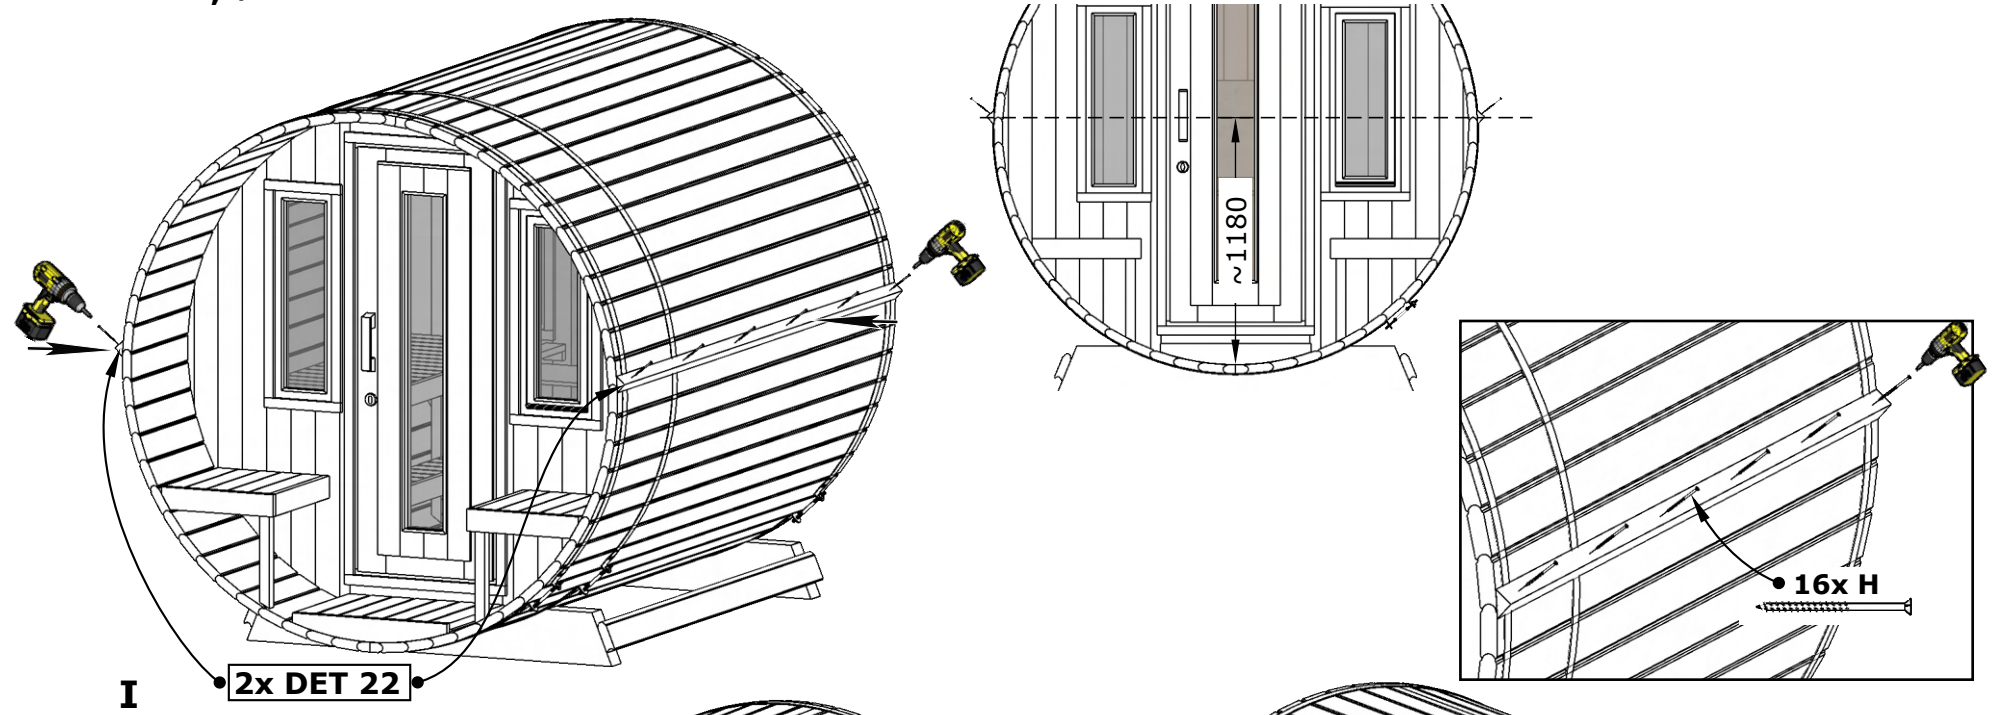


NB! Check also shingles installation manual inside shingles package.

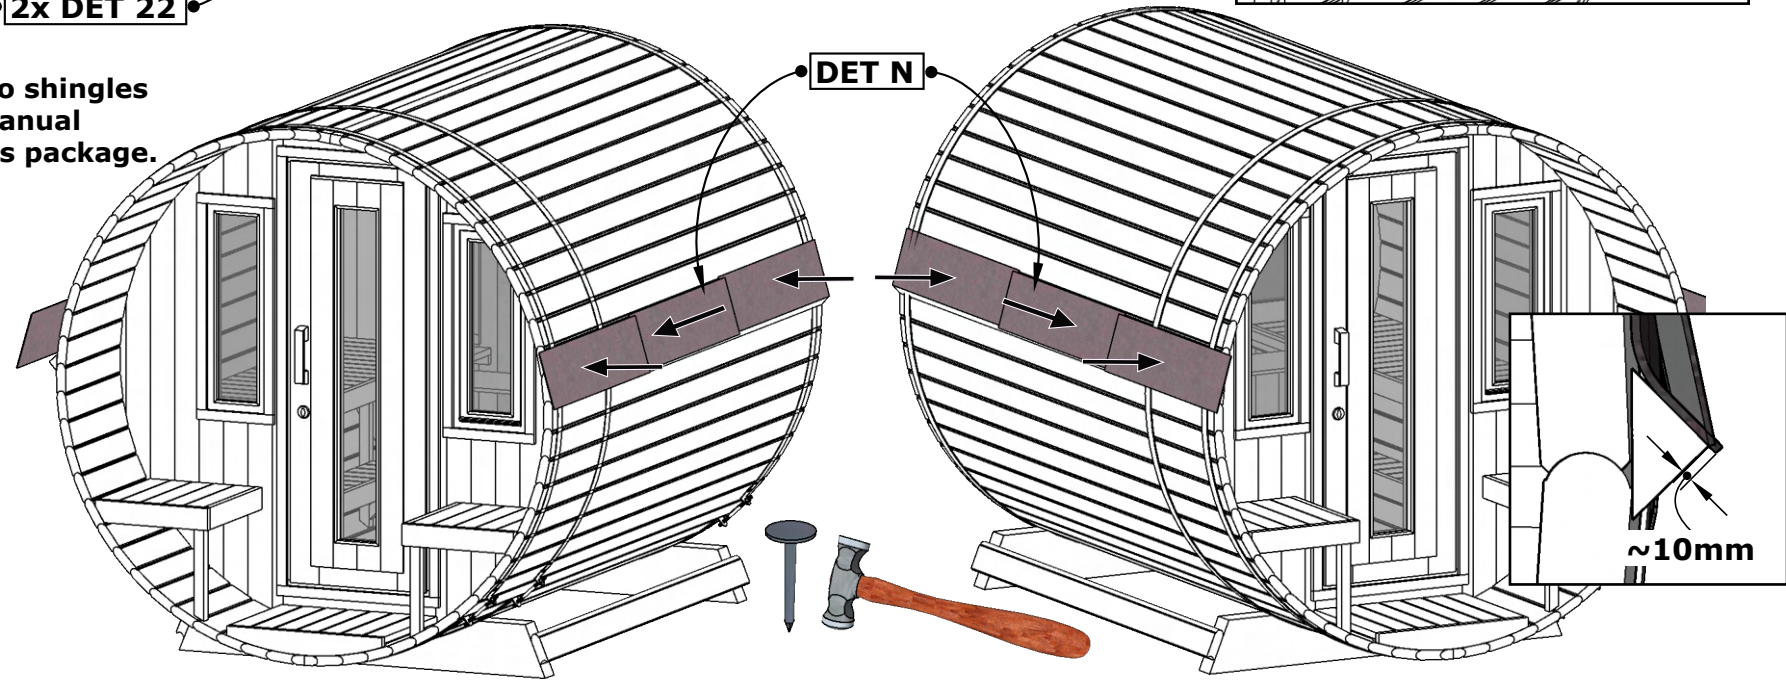

Sauna 280, Ø226

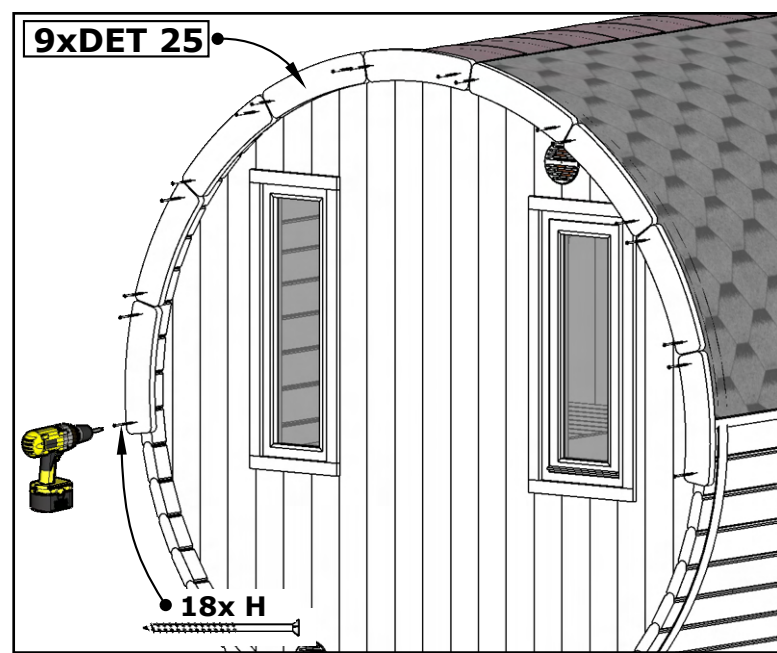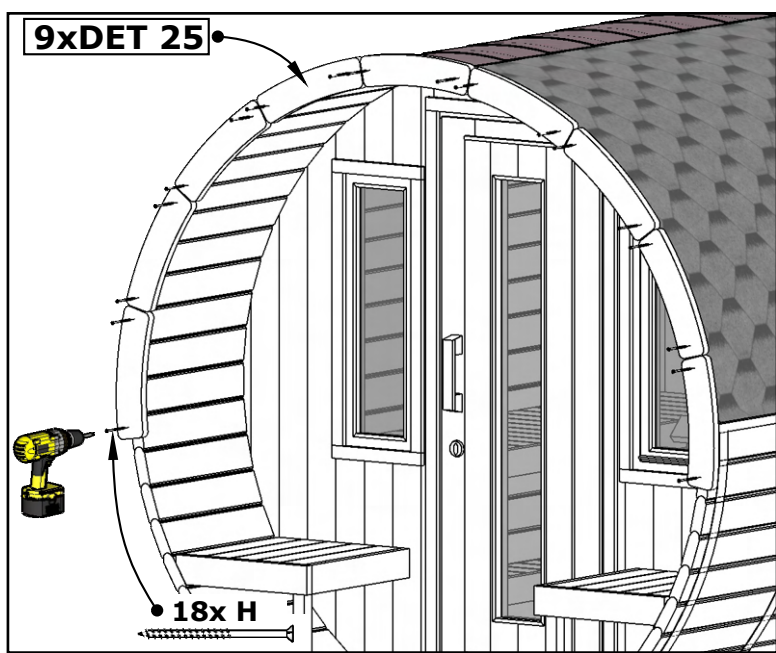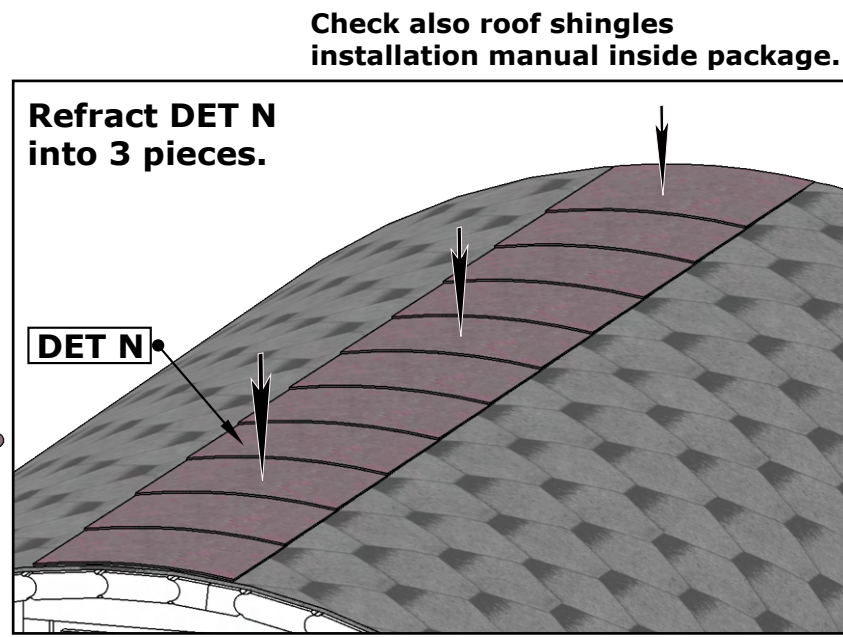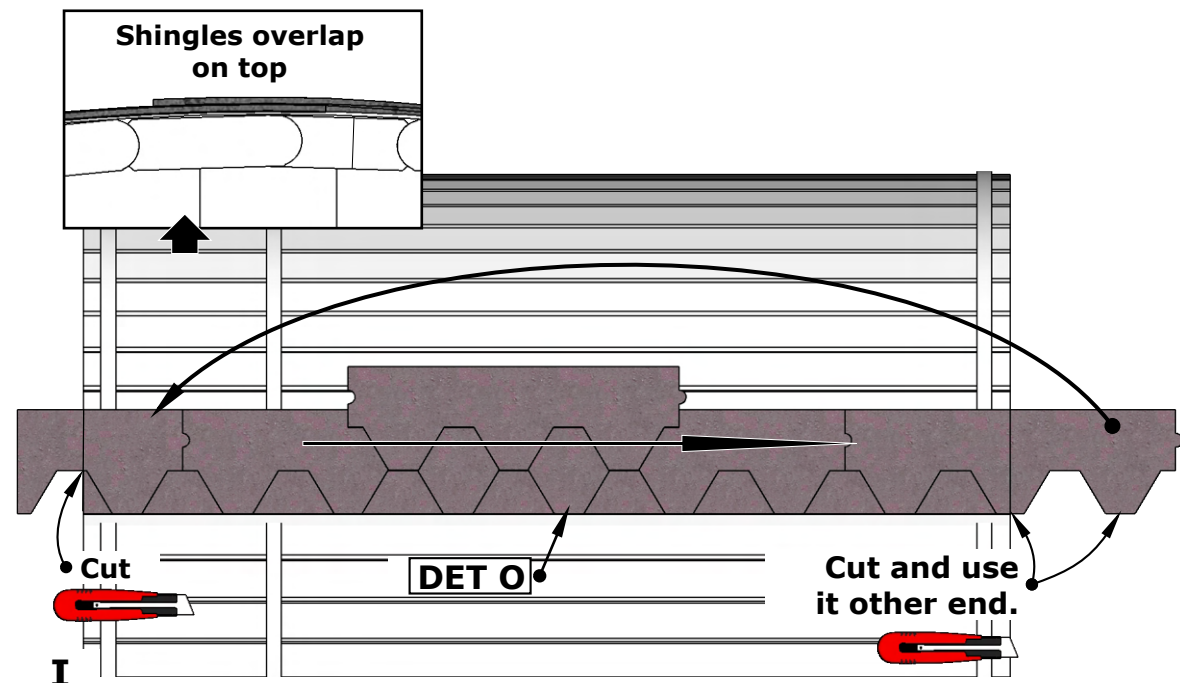

Sauna 280, Ø226

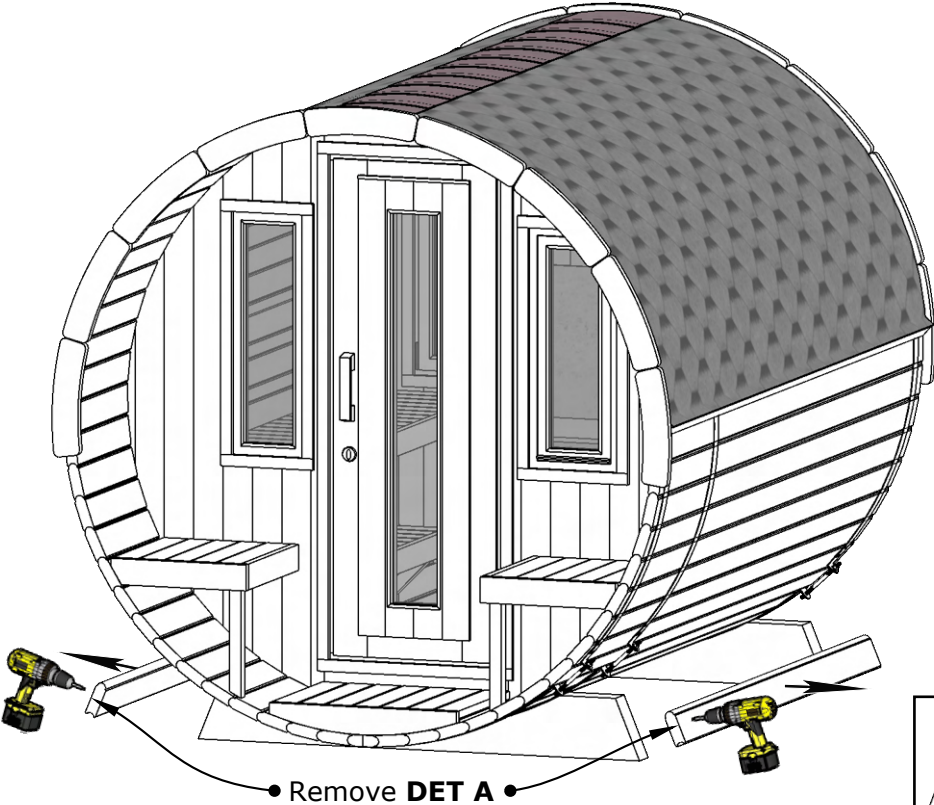

NB! Backrests are optional!

