
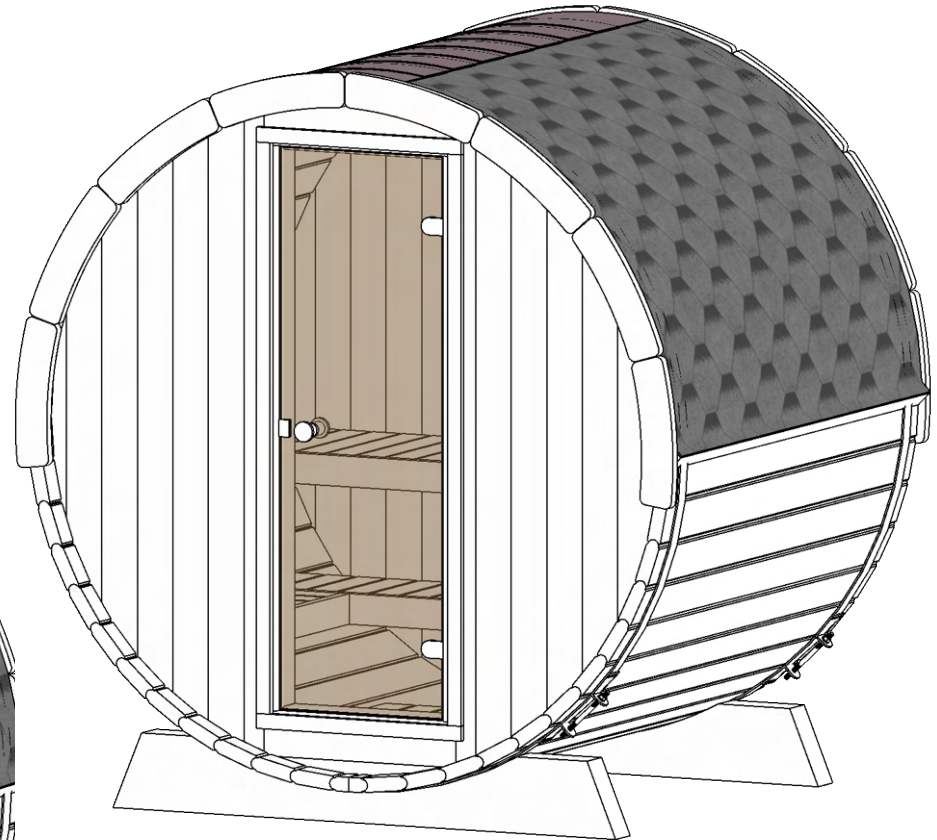



Sauna 160, Ø200

**NB! Please read whole manual
before start.**


**All given measurements
are in millimeters!**

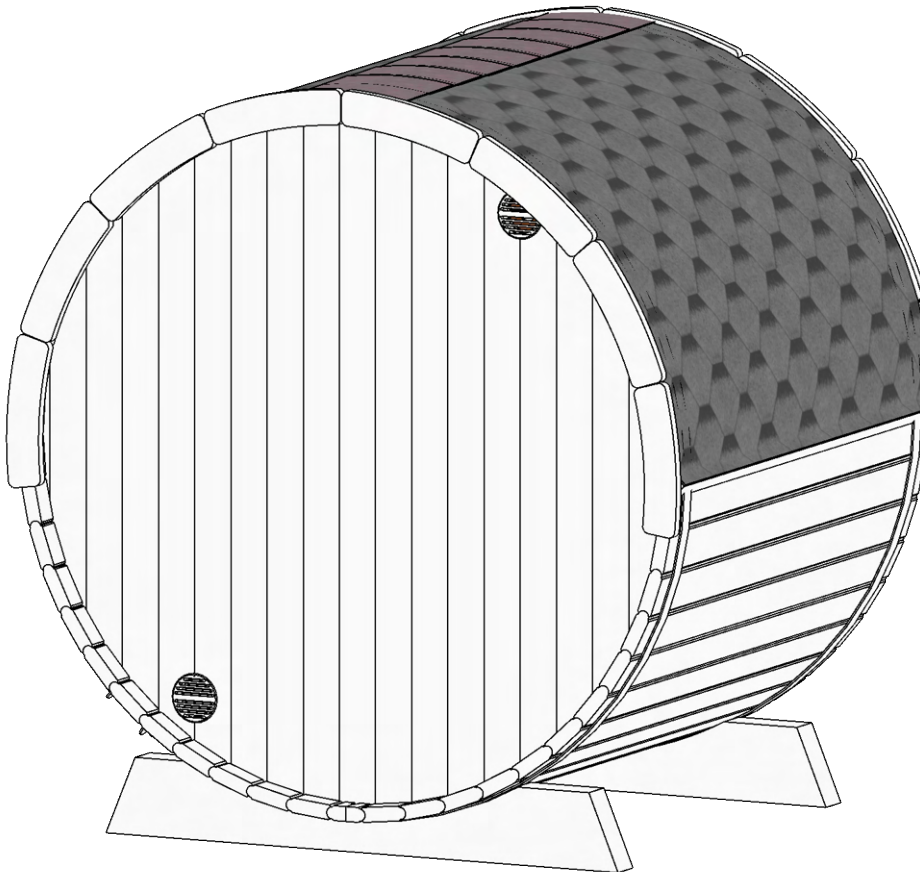


(PES)

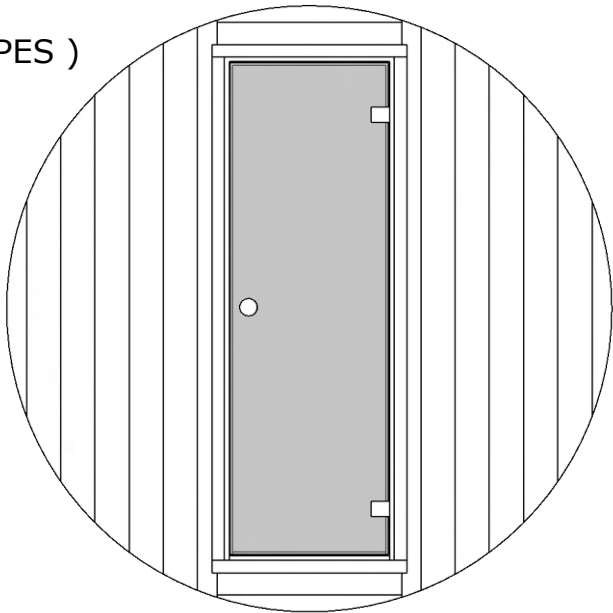


(TKE)

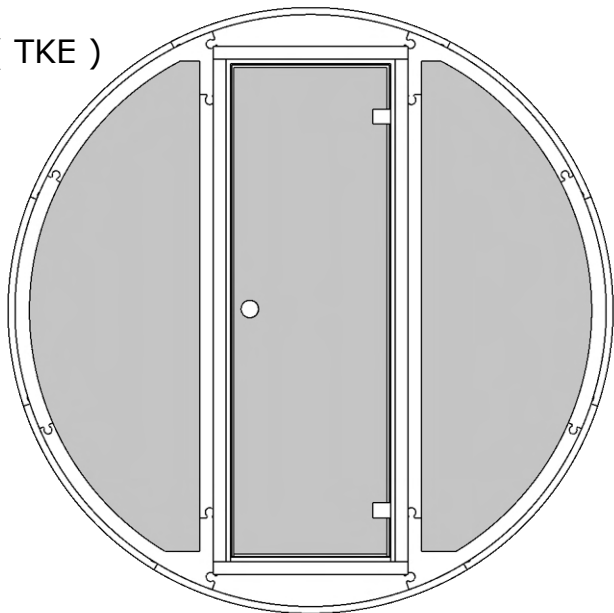

(PTS)




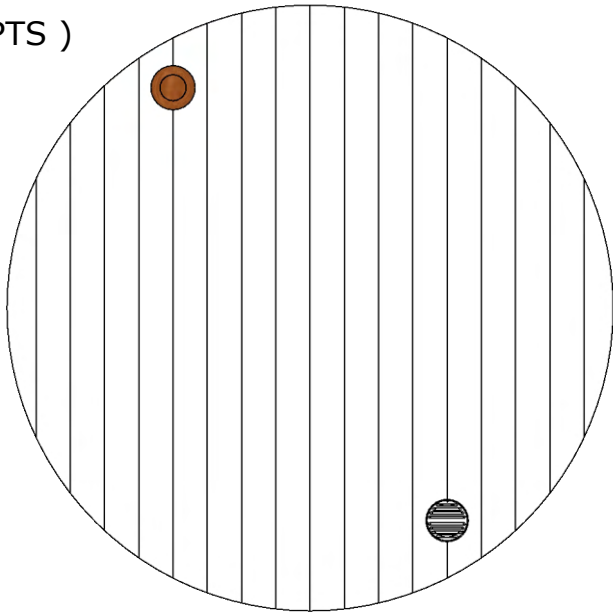


(PK)

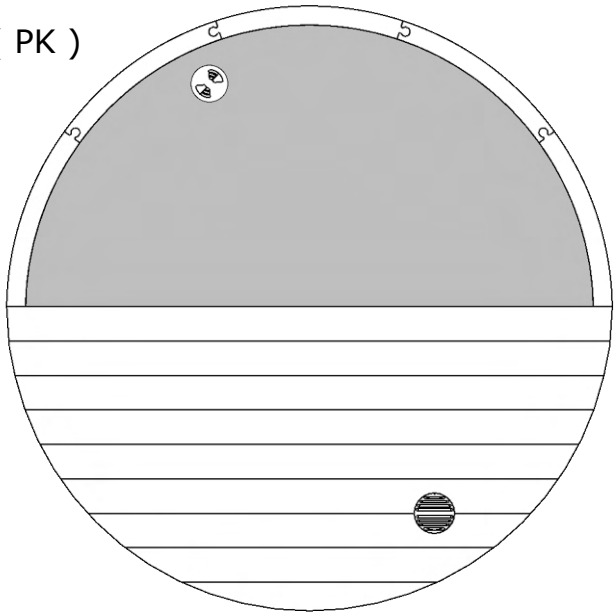


Wooden front wall assembly


Details

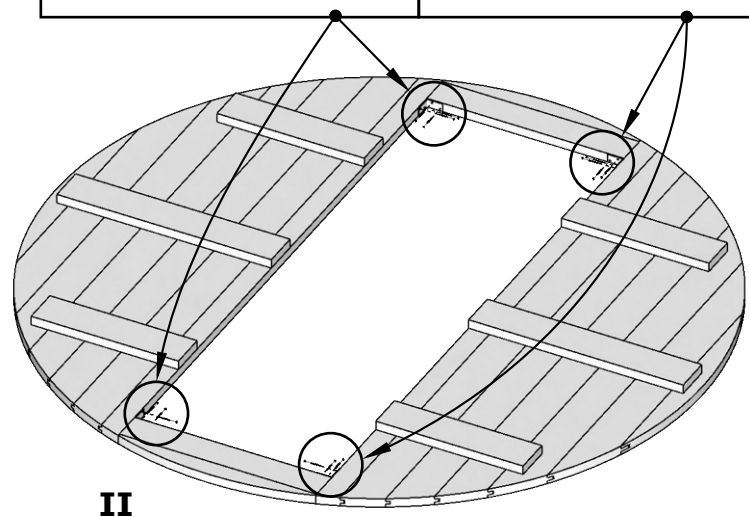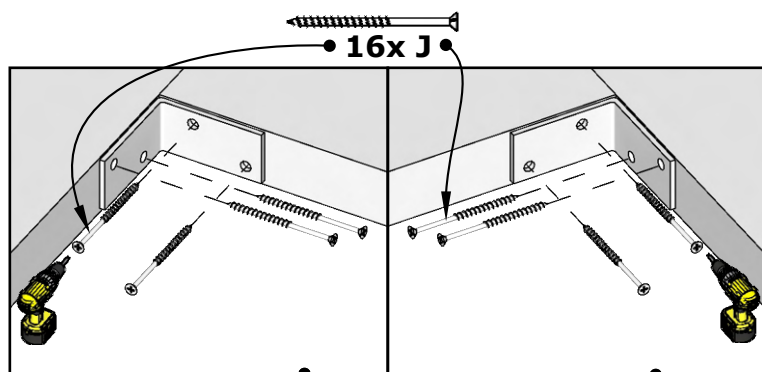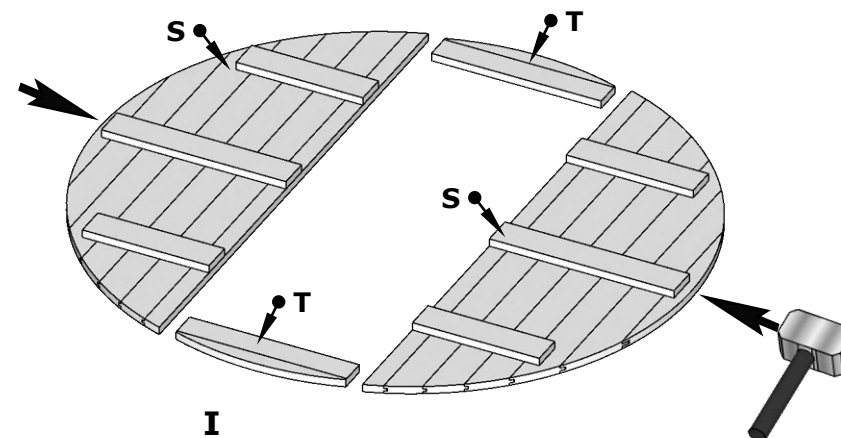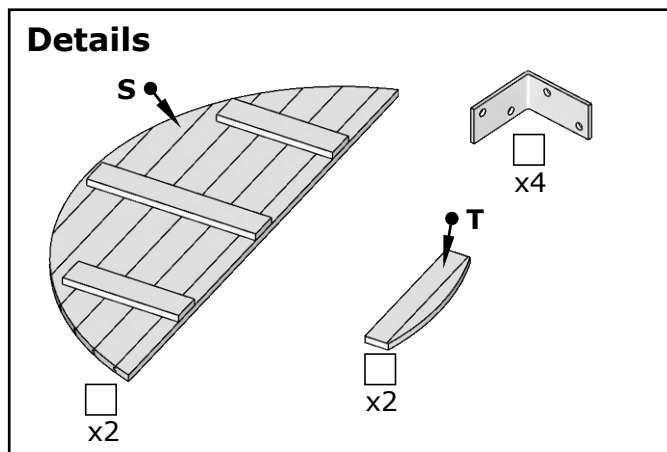



Cut board from pallet L= $\sim$ 1900mm.
Fix it diagonally to make wall
more rigid during the installation.

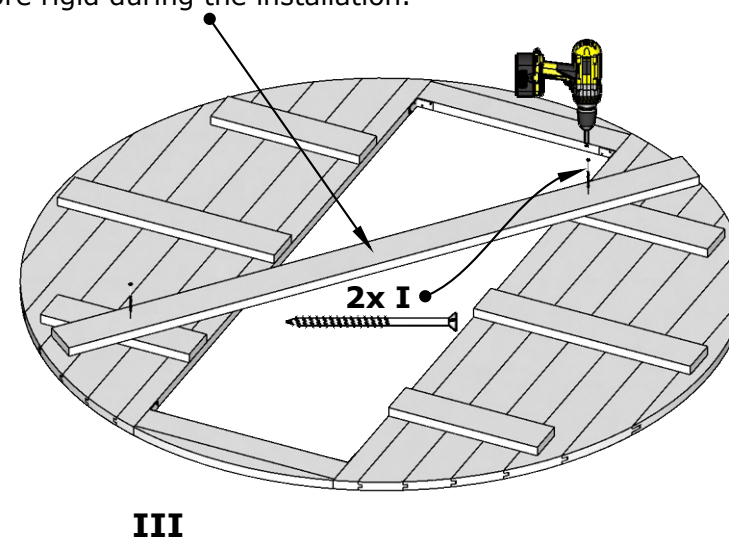

Wooden back wall assembly

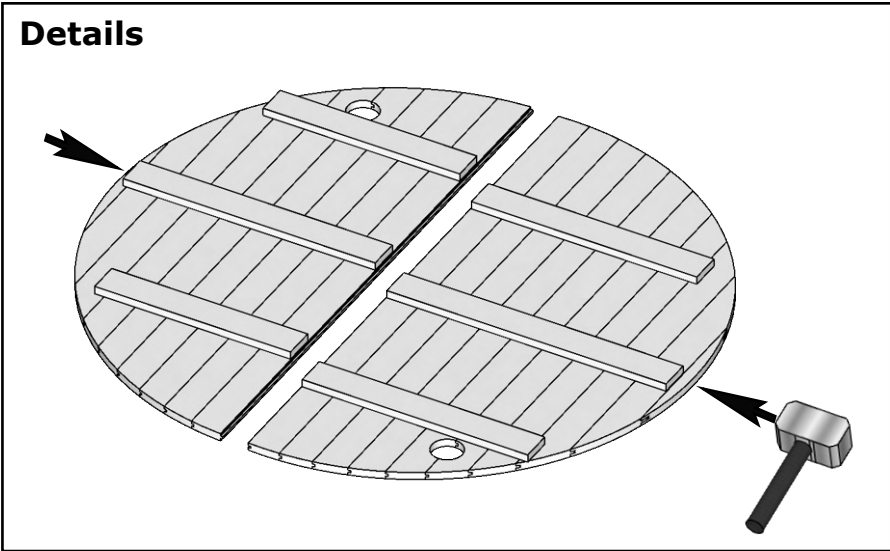


Cut board from pallet
L= ~1900 mm.

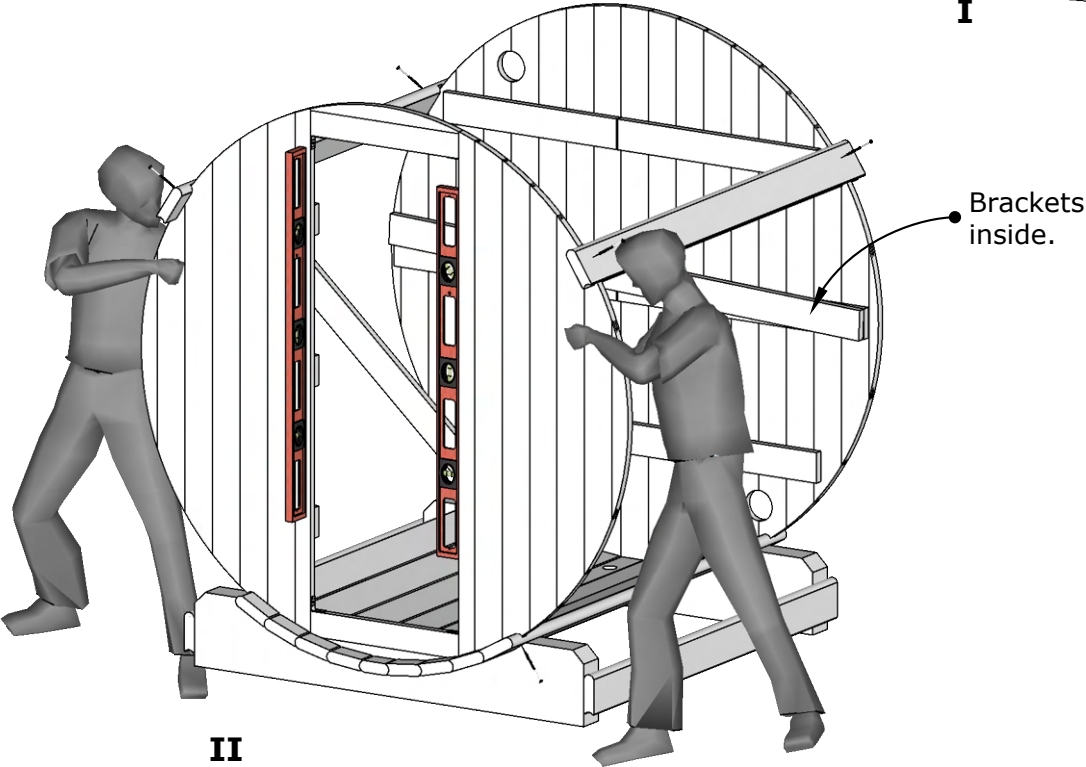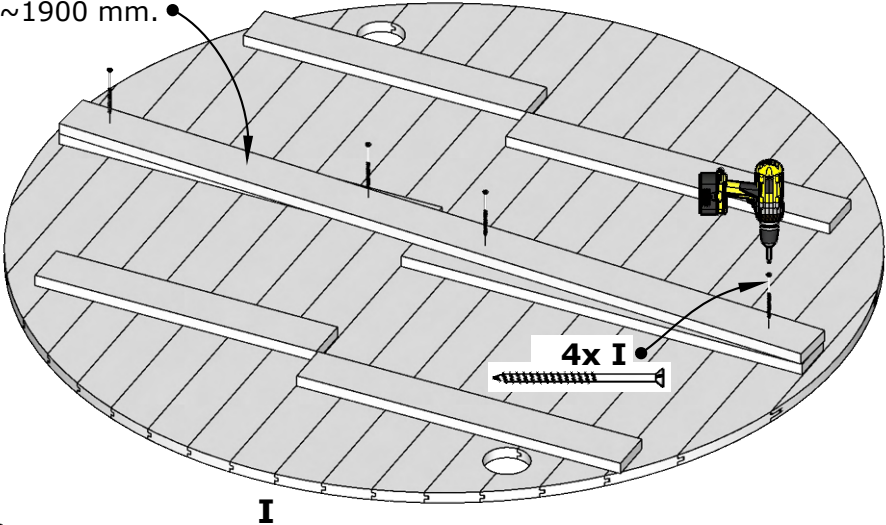






Details list.




Sauna 160, Ø200

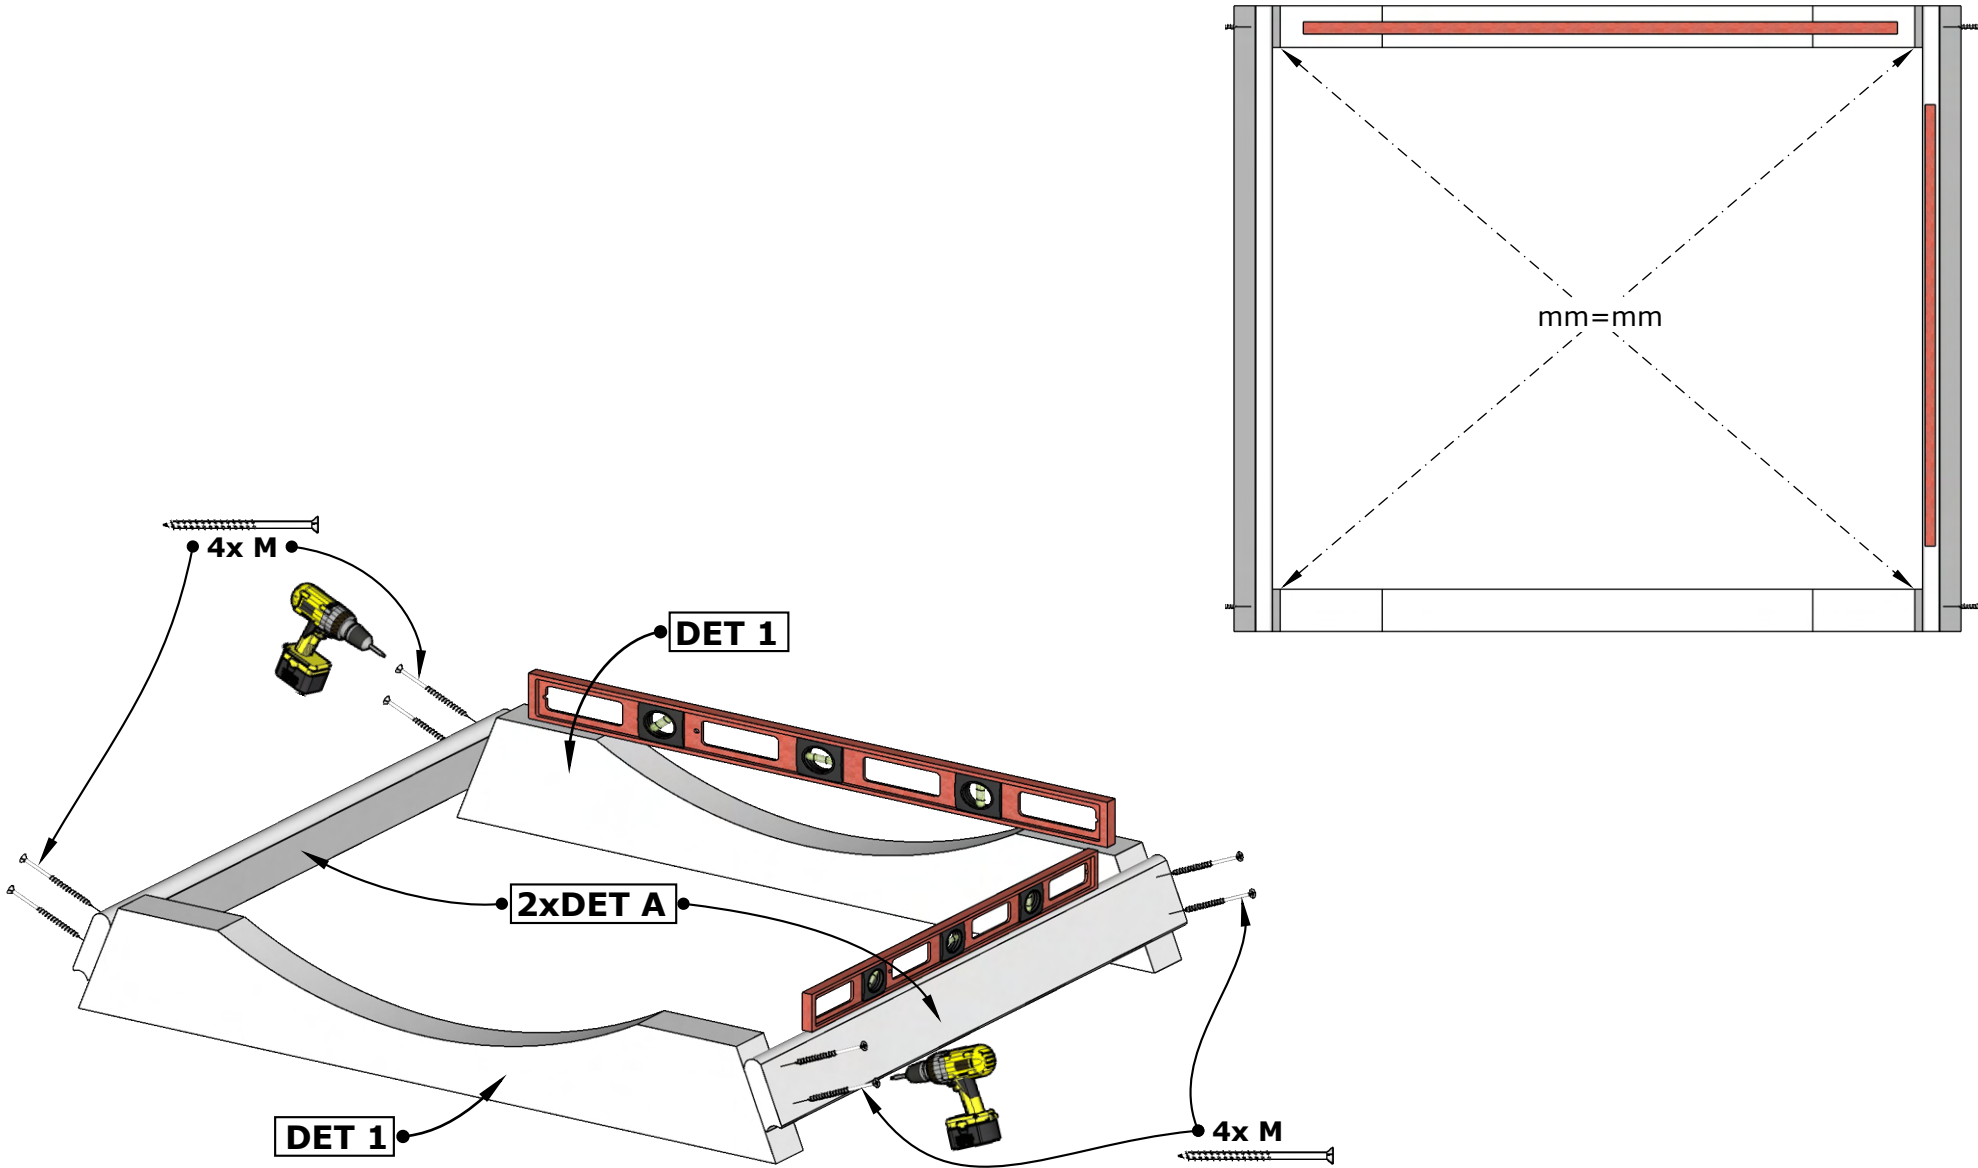


Sauna 160, Ø200

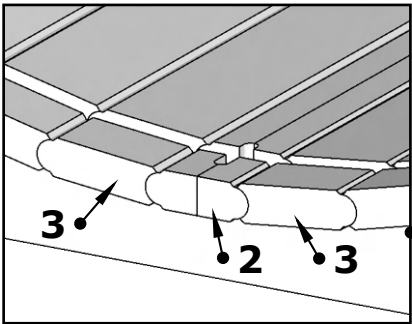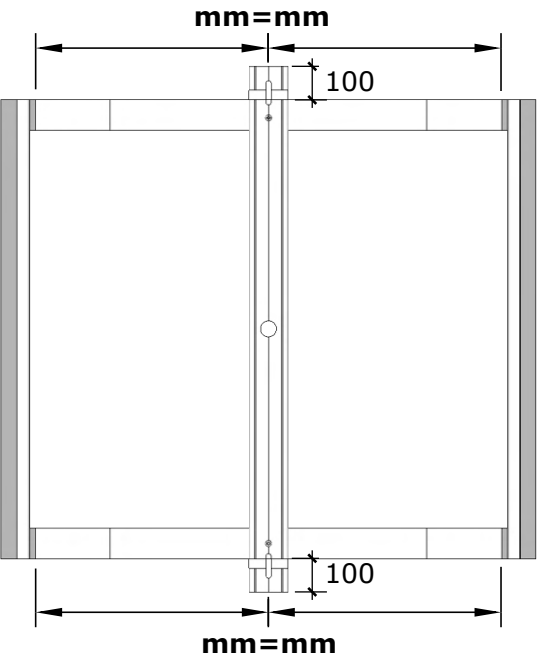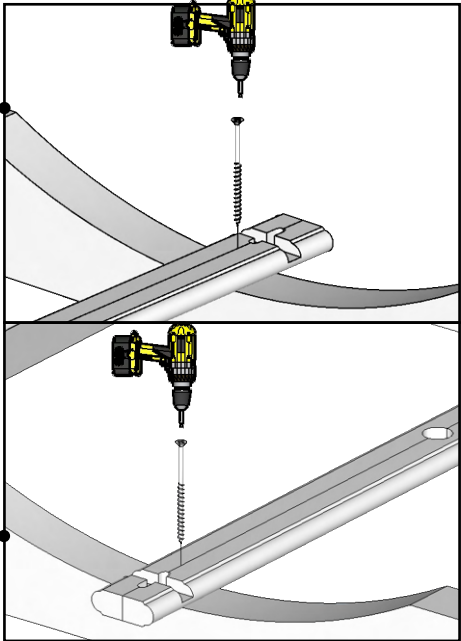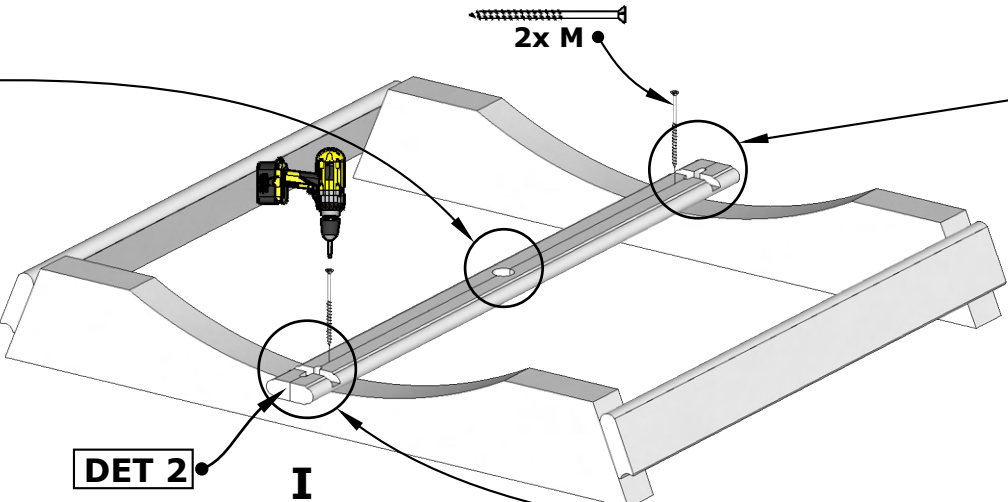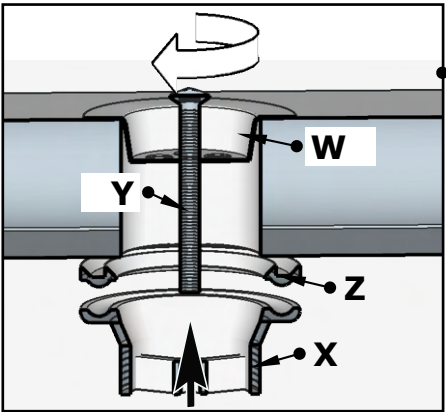


DET 3

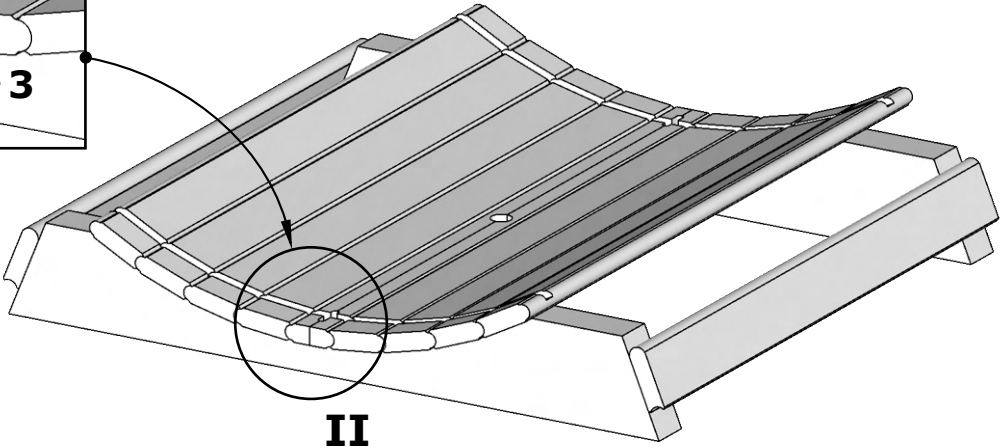


Sauna 160, Ø200

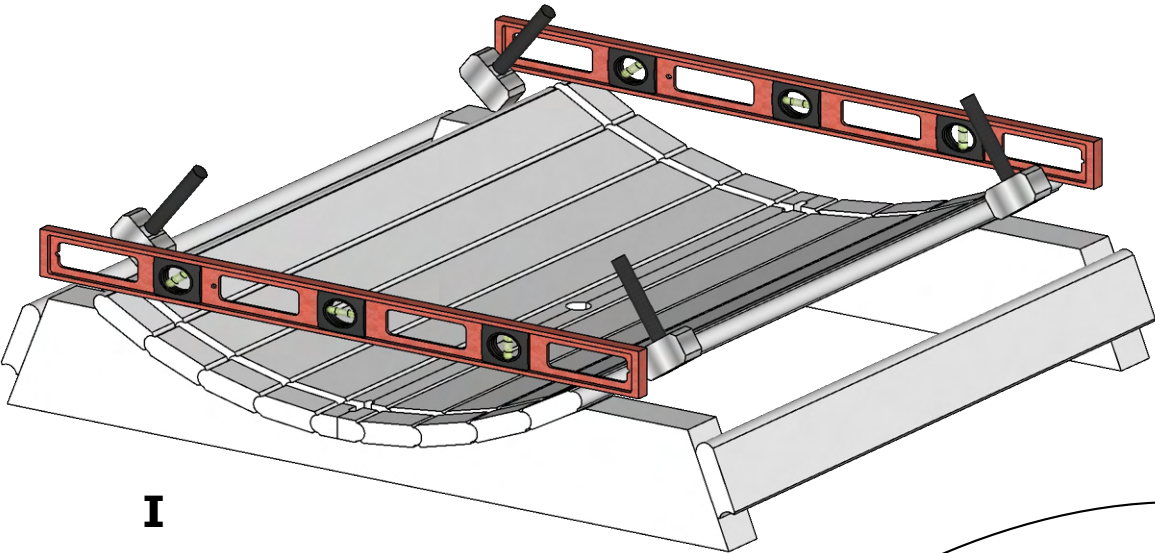

I

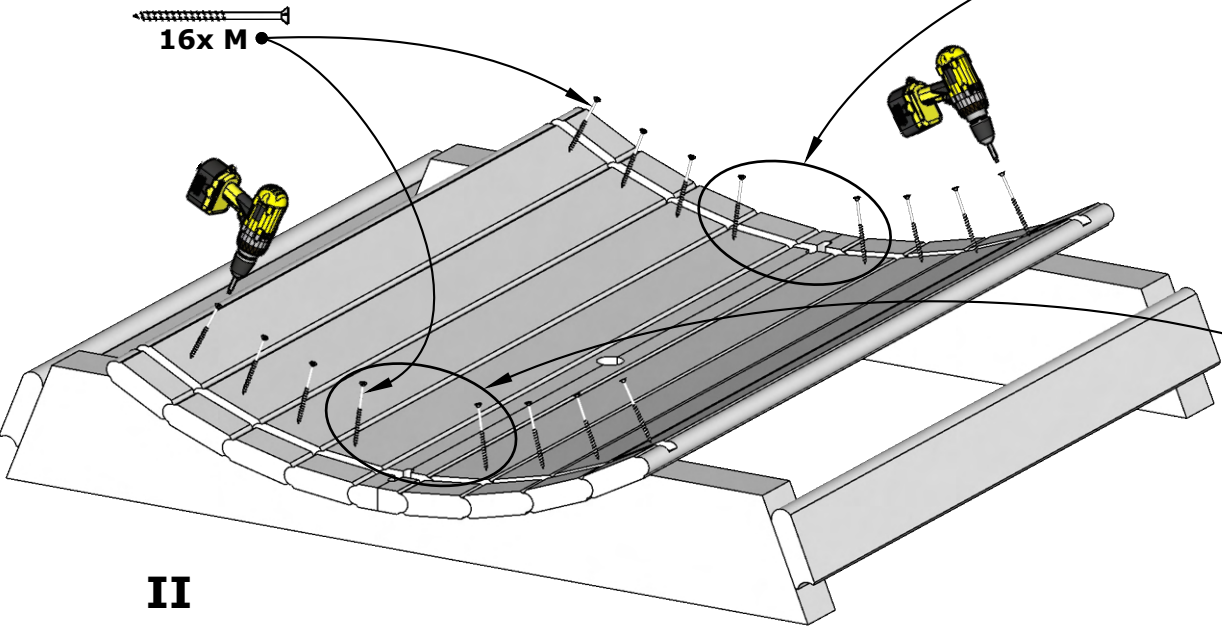

II

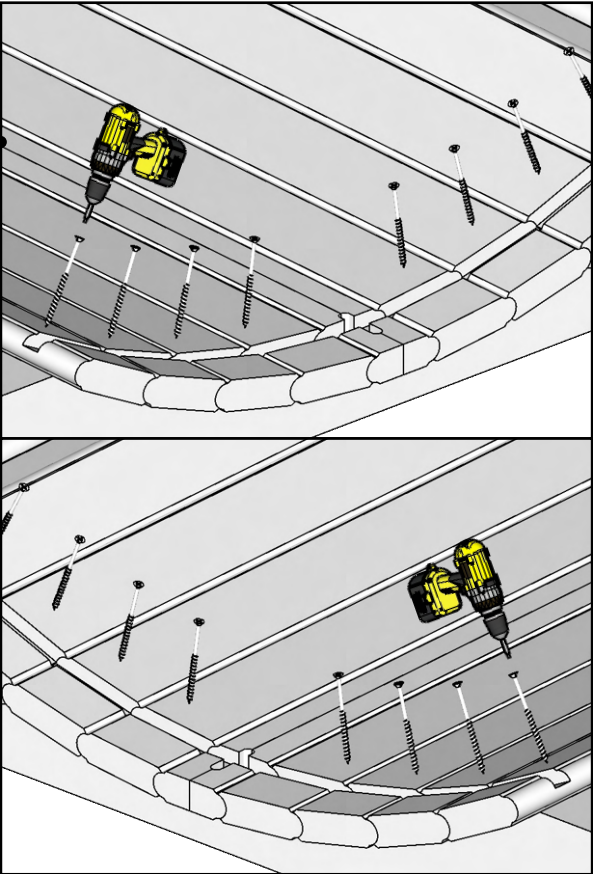

Sauna 160, Ø200




Check walls installation
manual on extra pages!



Sauna wall configuration
depends on Your model!

DET 3


Fix temporarily to
support walls.

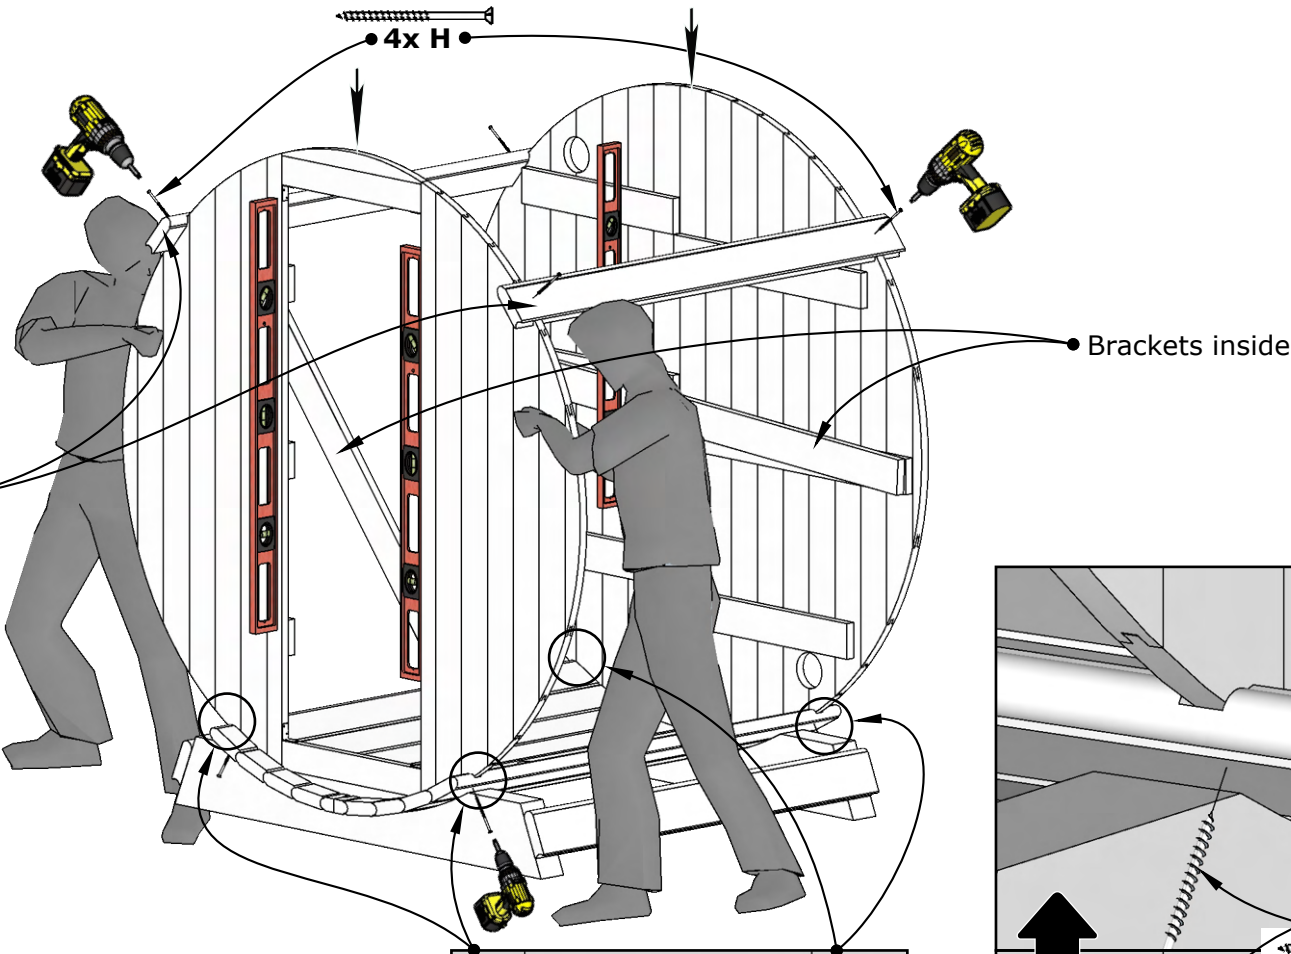

Important! Leave
the gap ~7 mm.

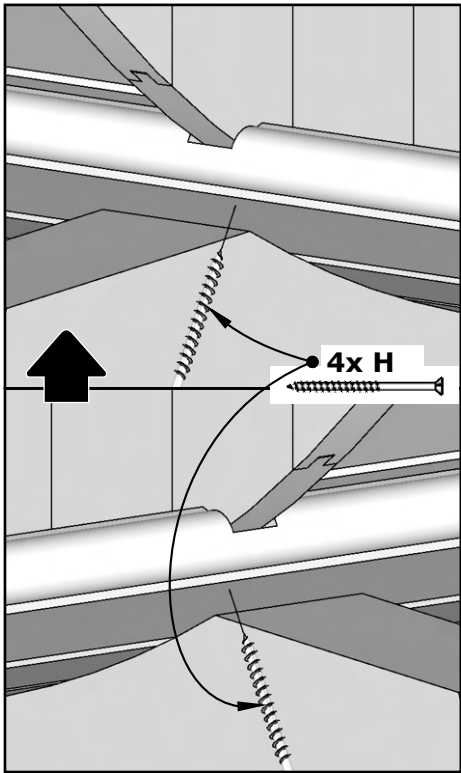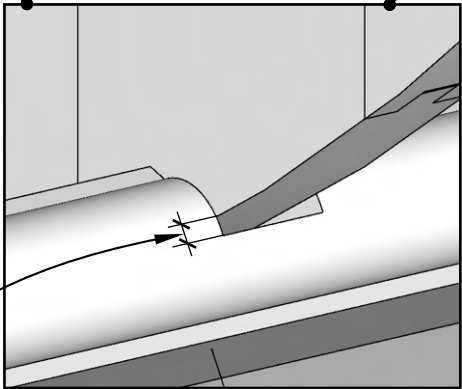


Sauna 160, Ø200


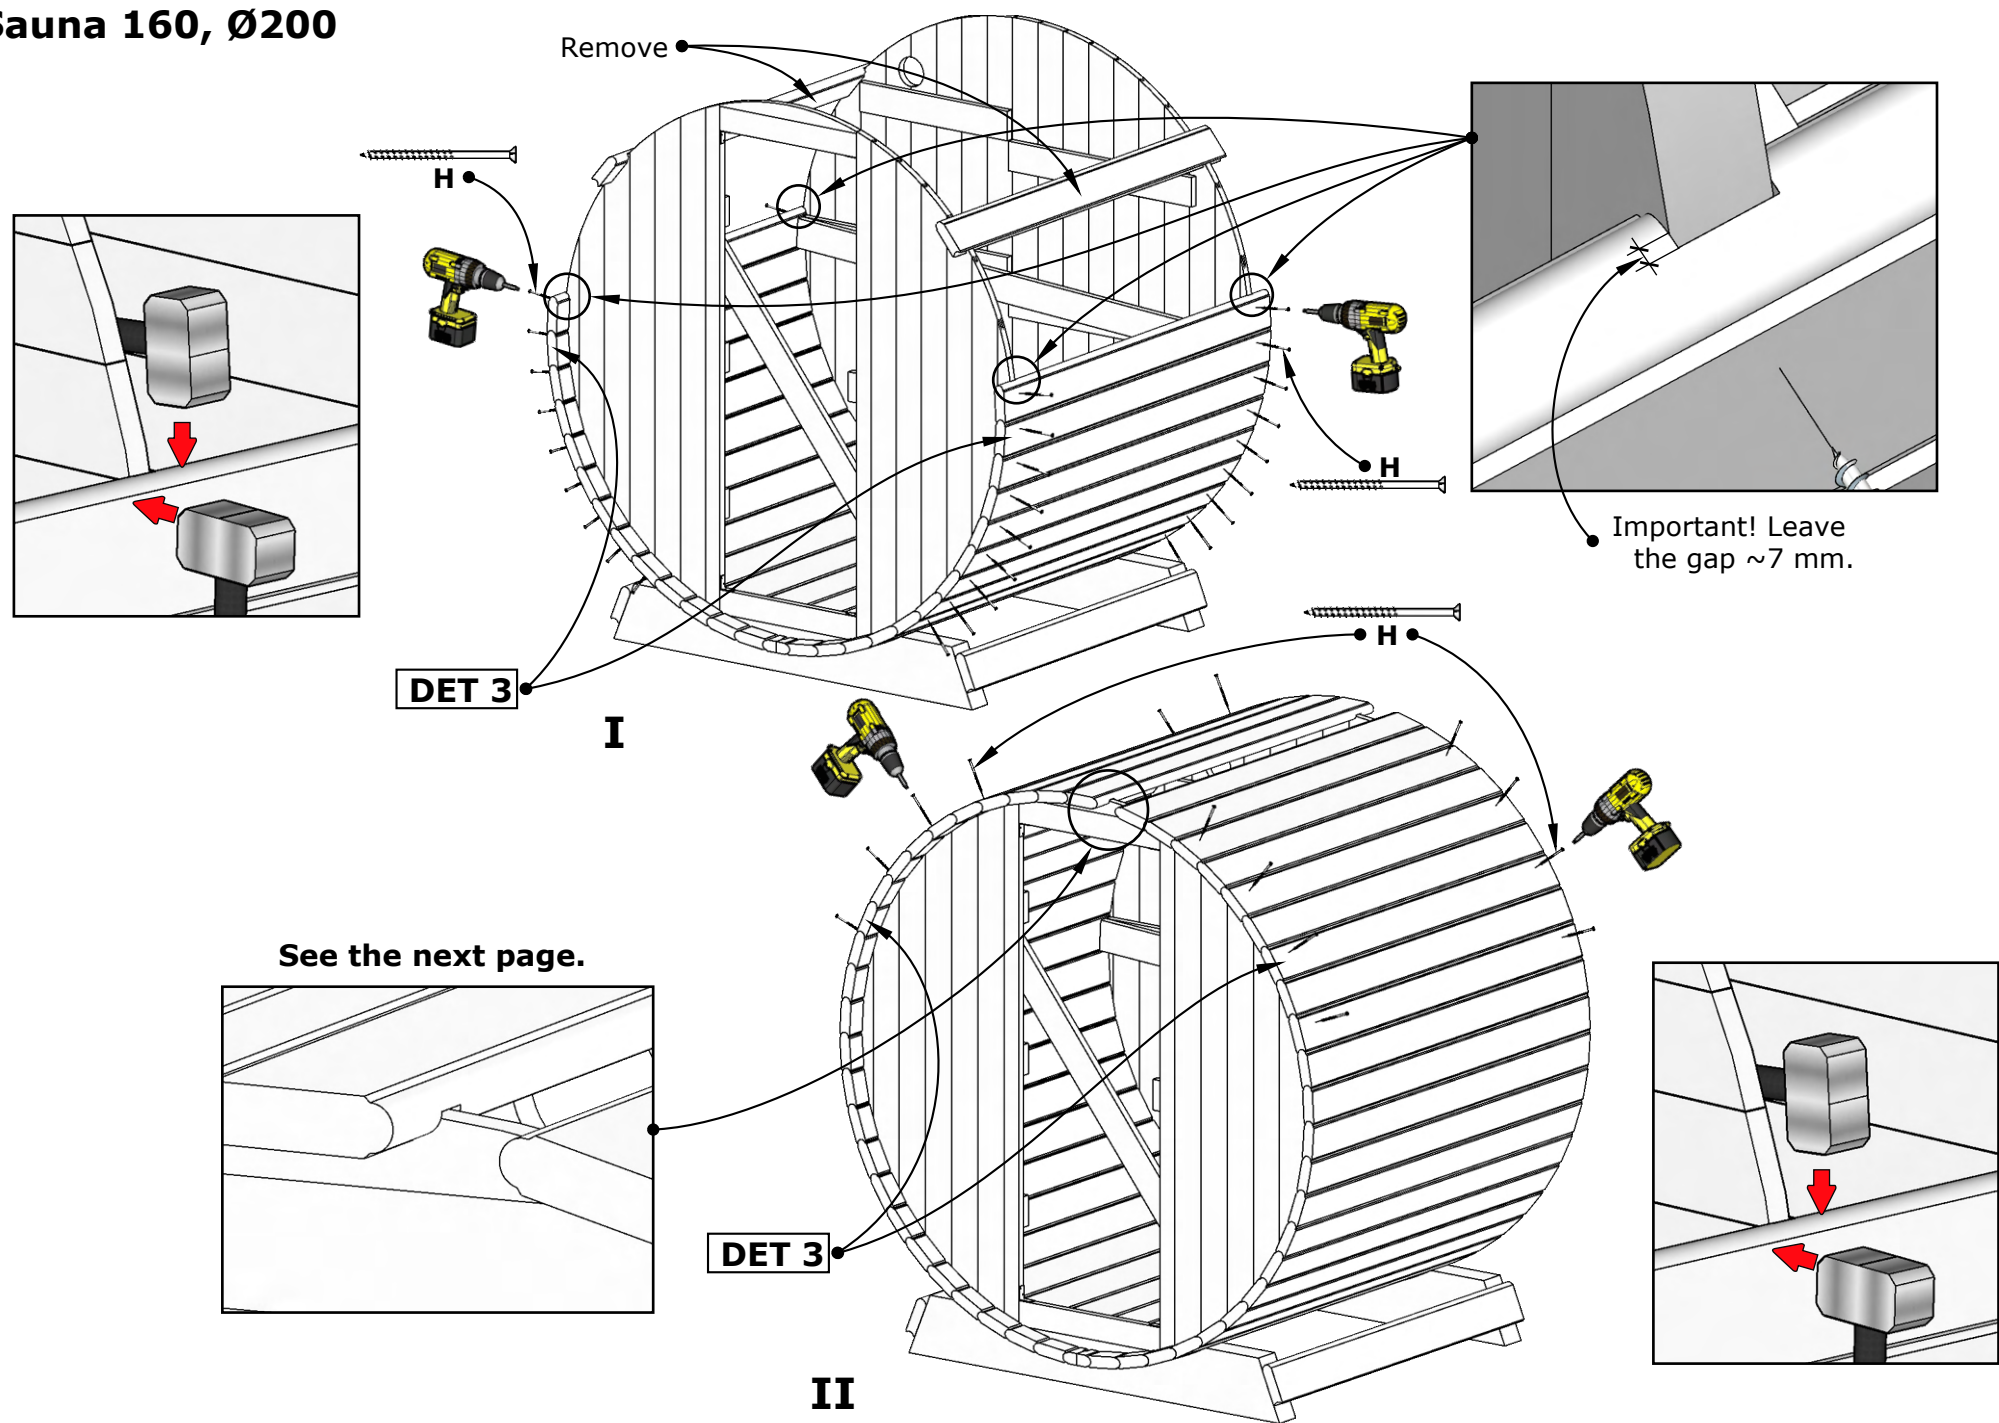


See the next page.


Sauna 160, Ø200

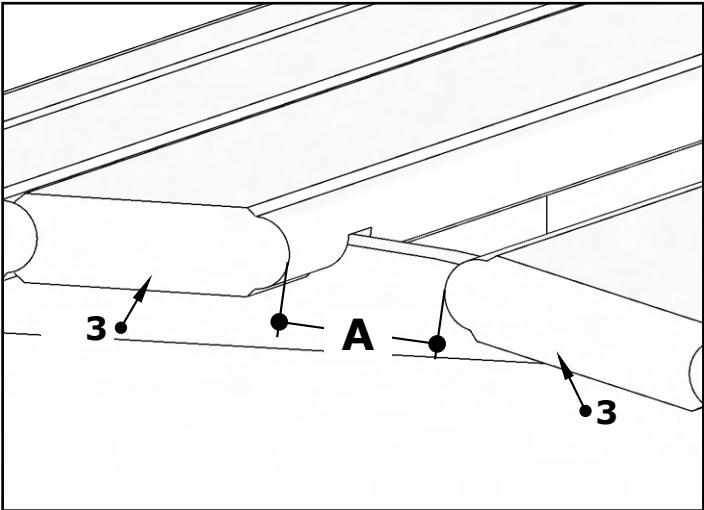


I

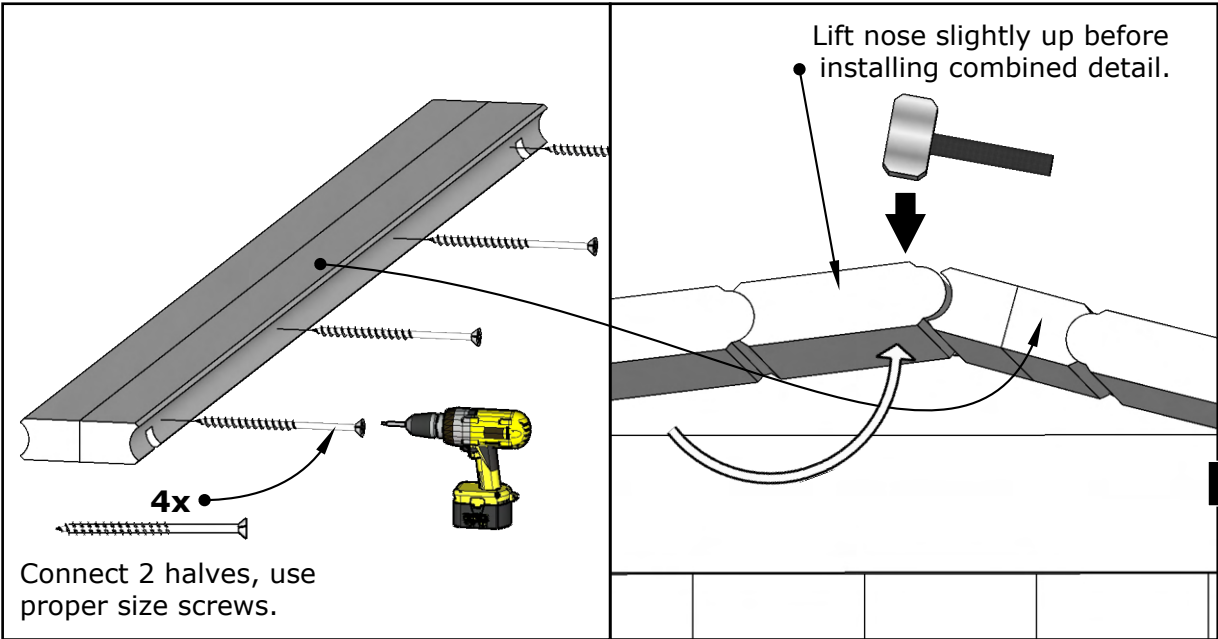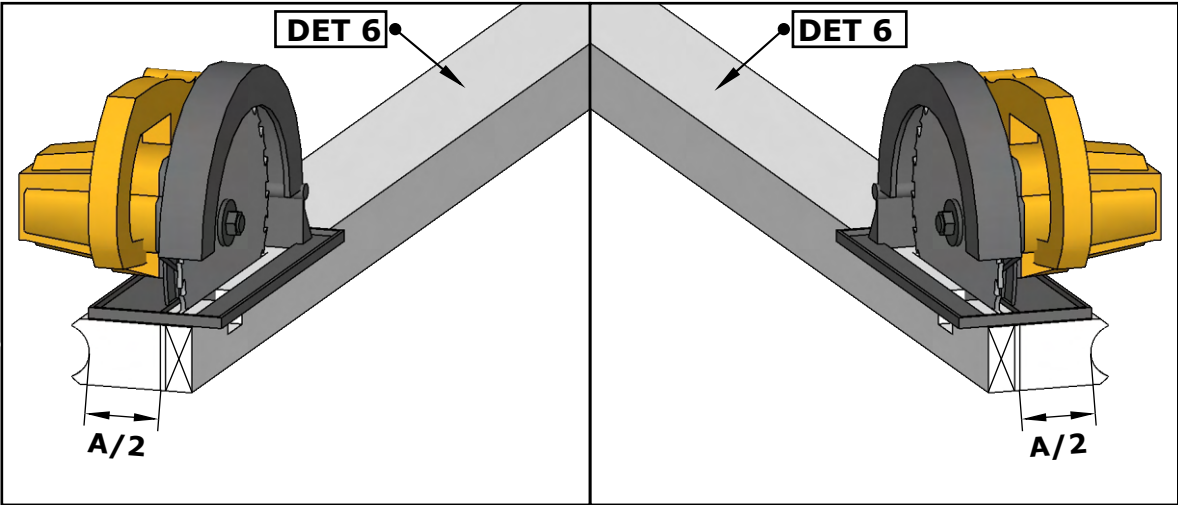



II

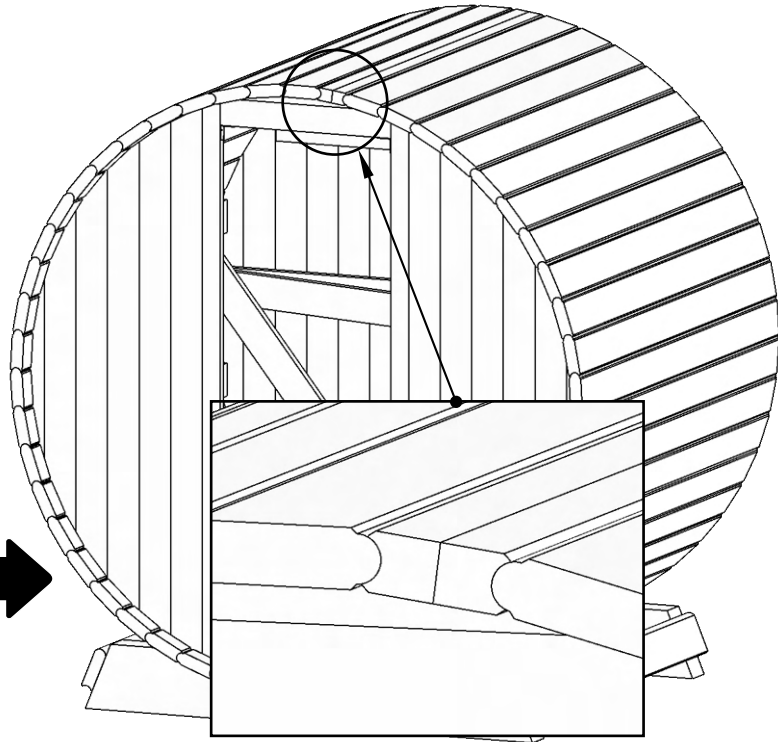








Sauna 160, Ø200

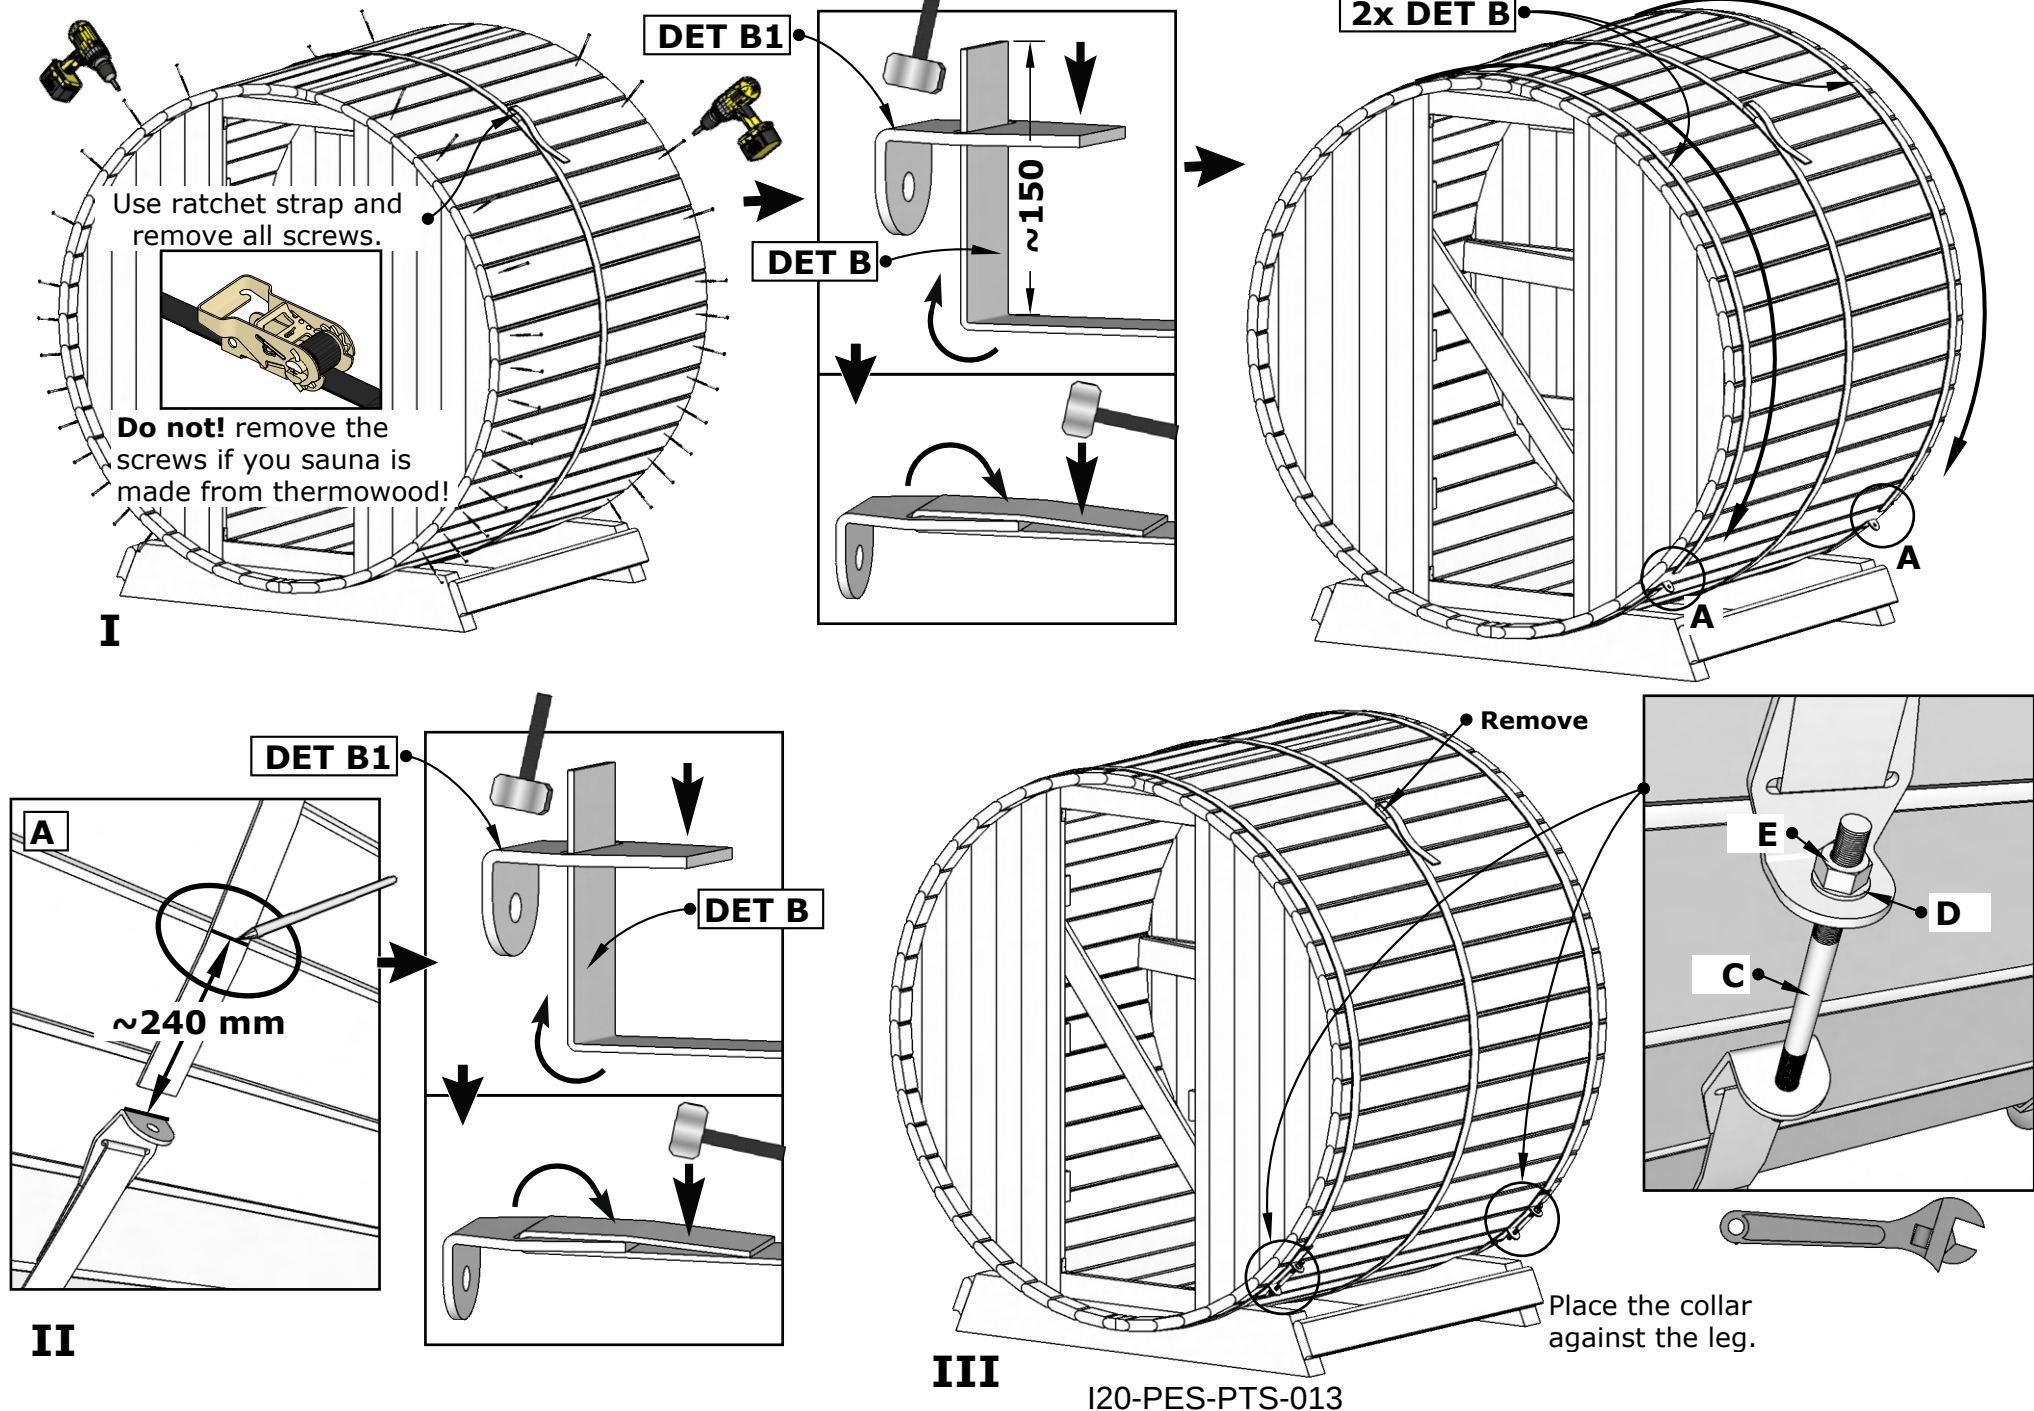


Sauna 160, Ø200

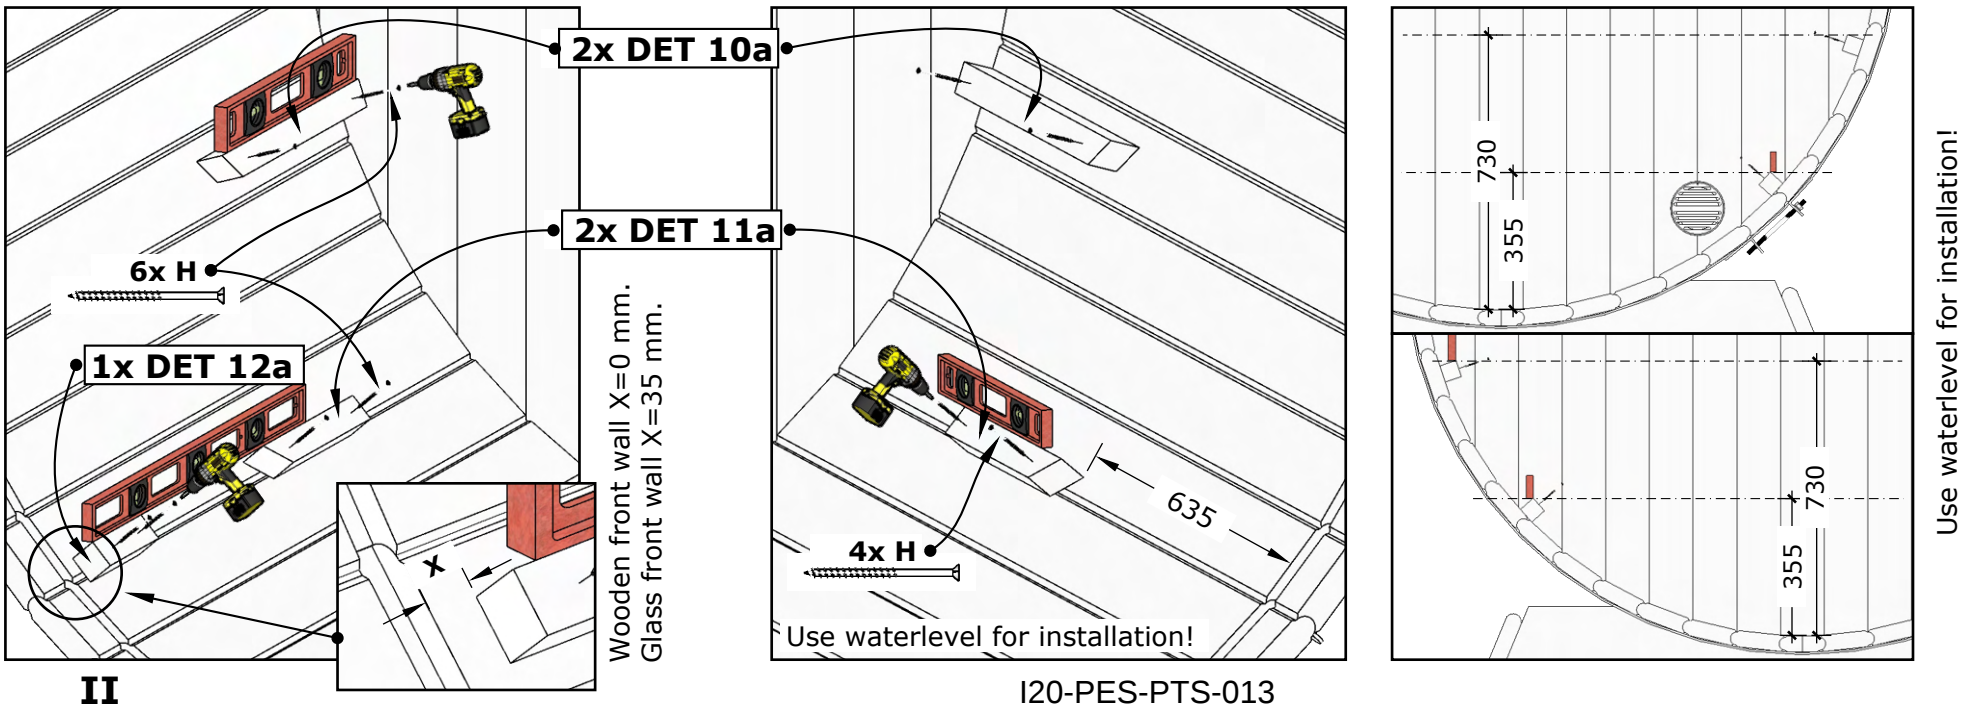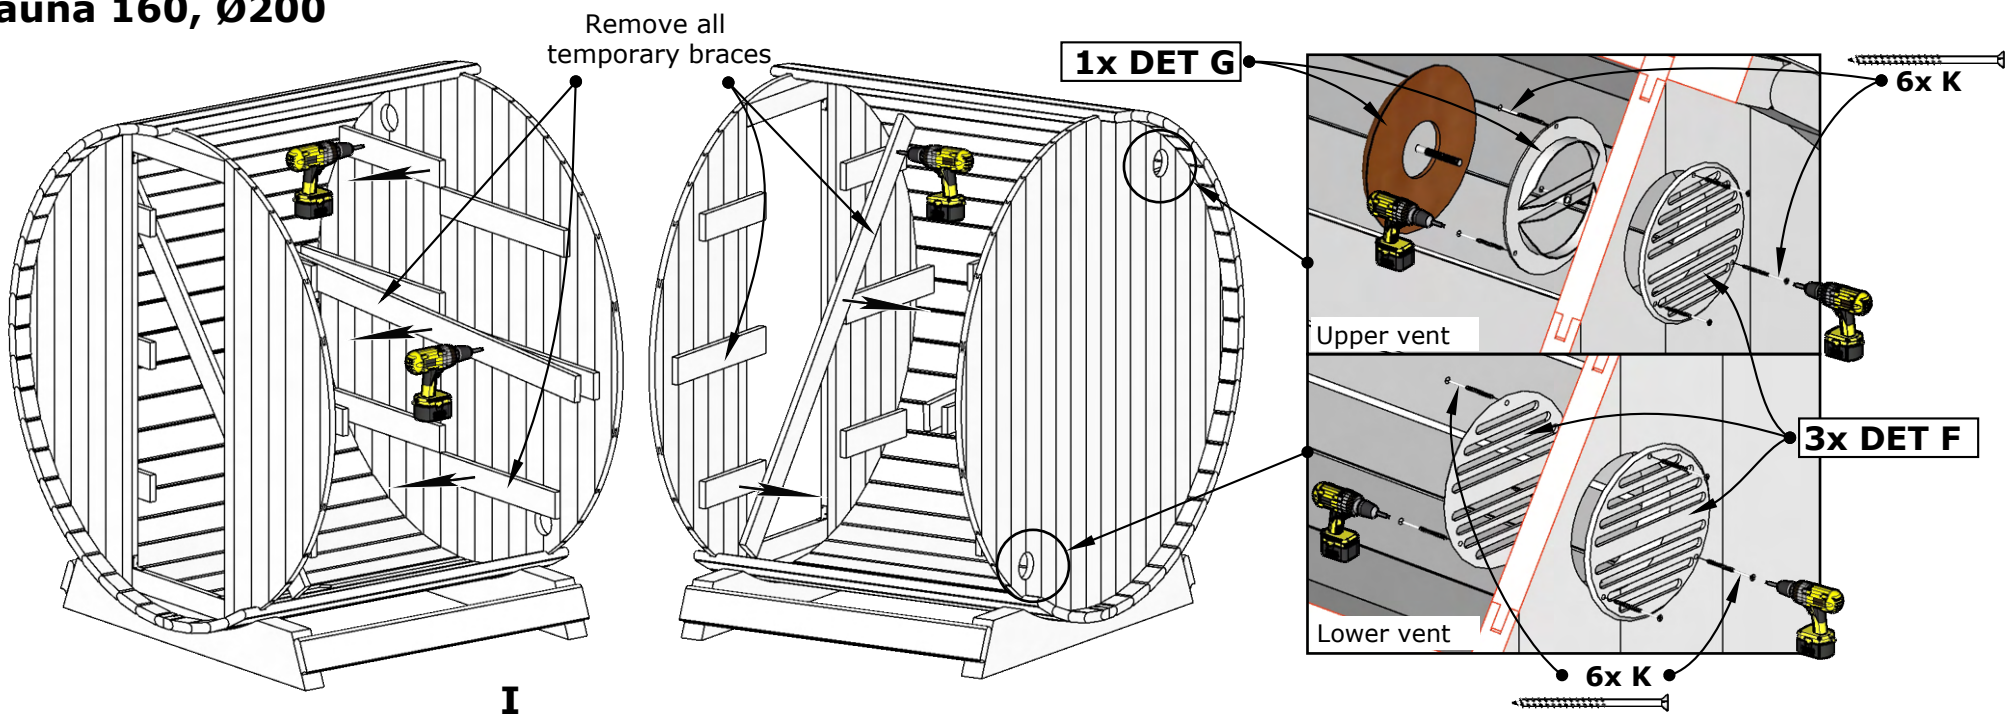

Sauna 160, Ø200

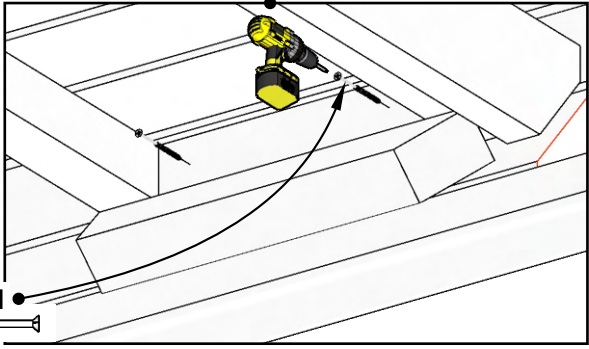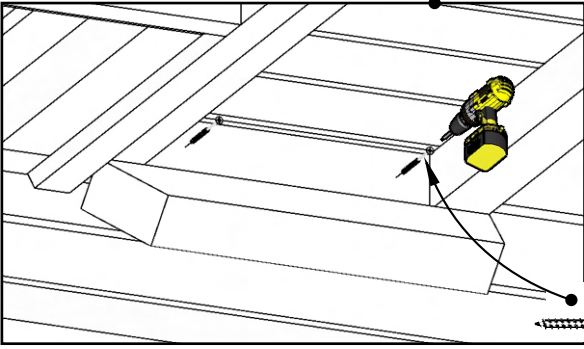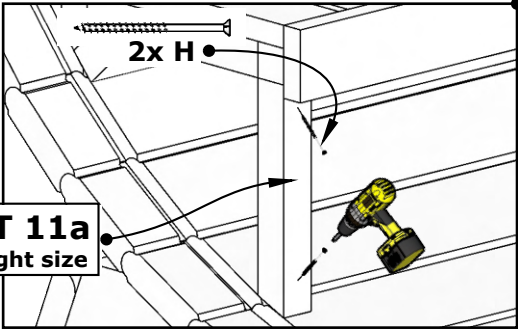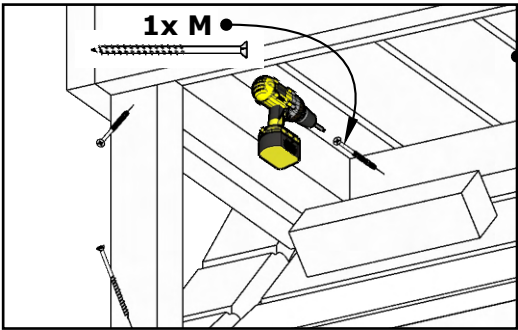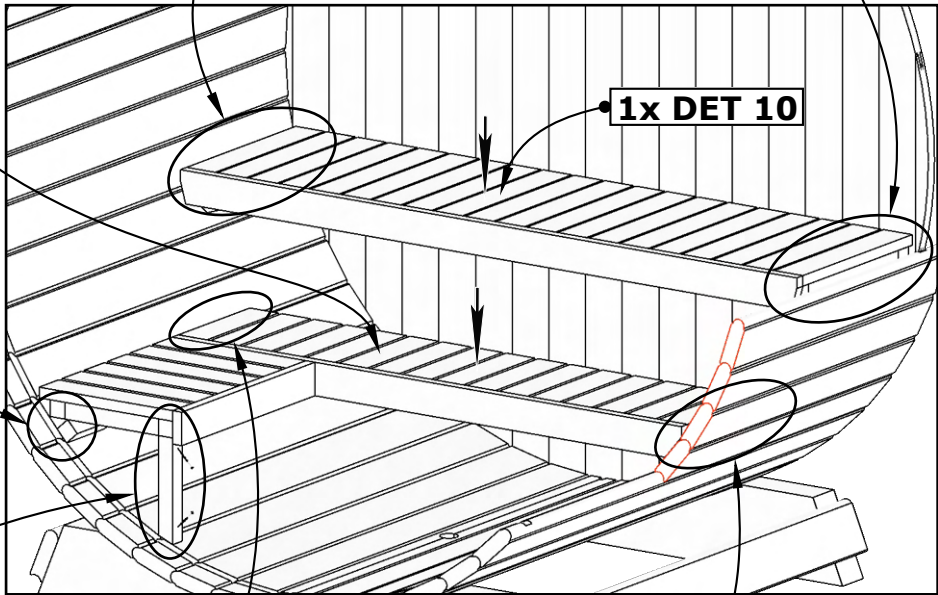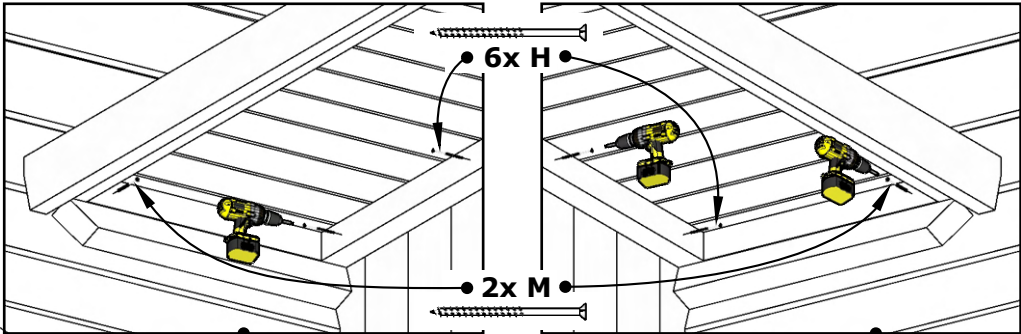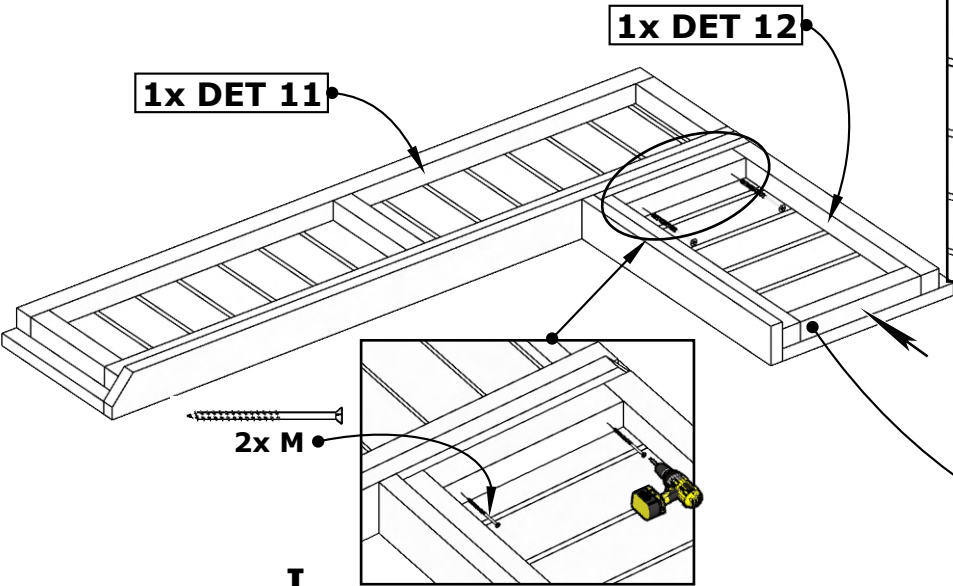


Sauna 160, Ø200

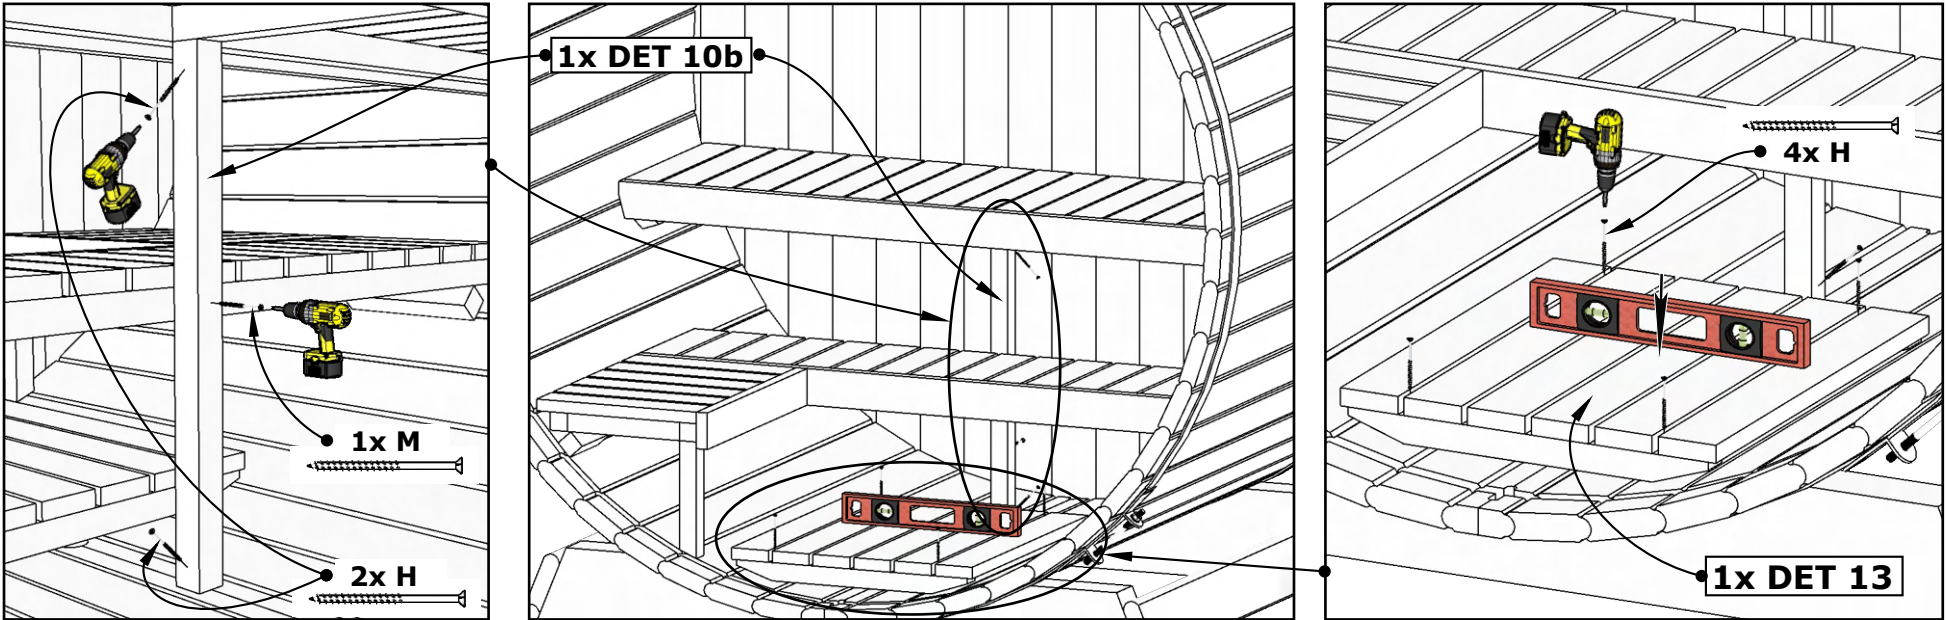


I

X= Front wall thickness
Wooden front wall 28mm.
Glass front wall 42mm.

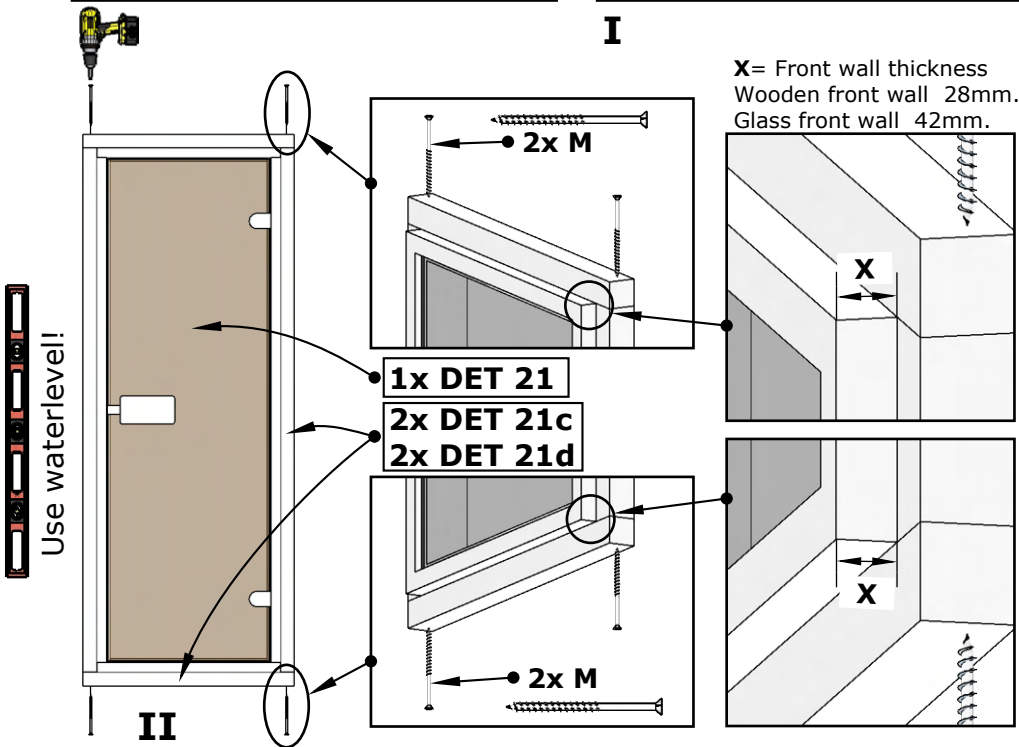


II

10.

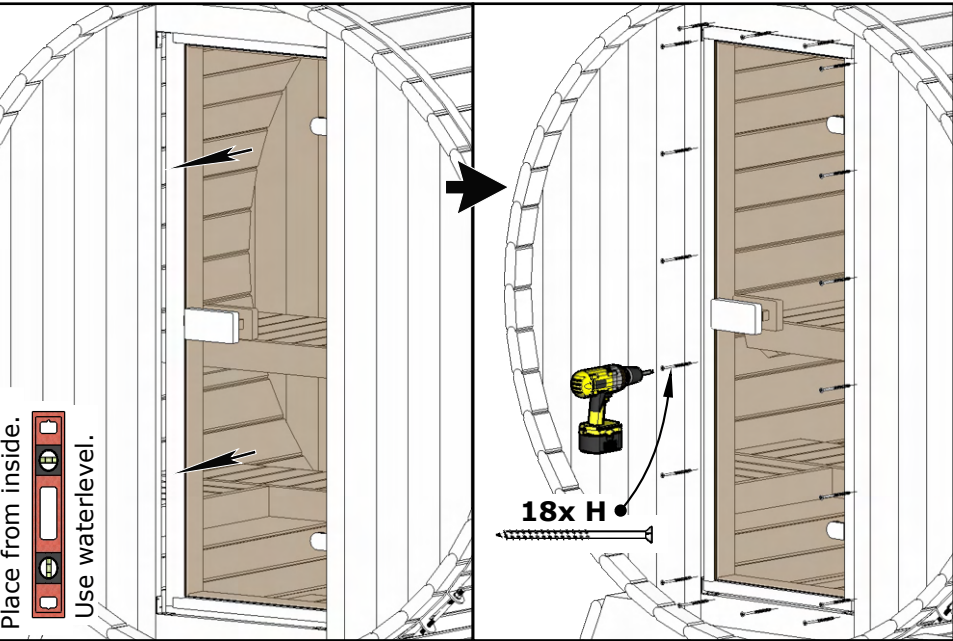




I20-PES-PTS-013

Sauna 160, Ø200

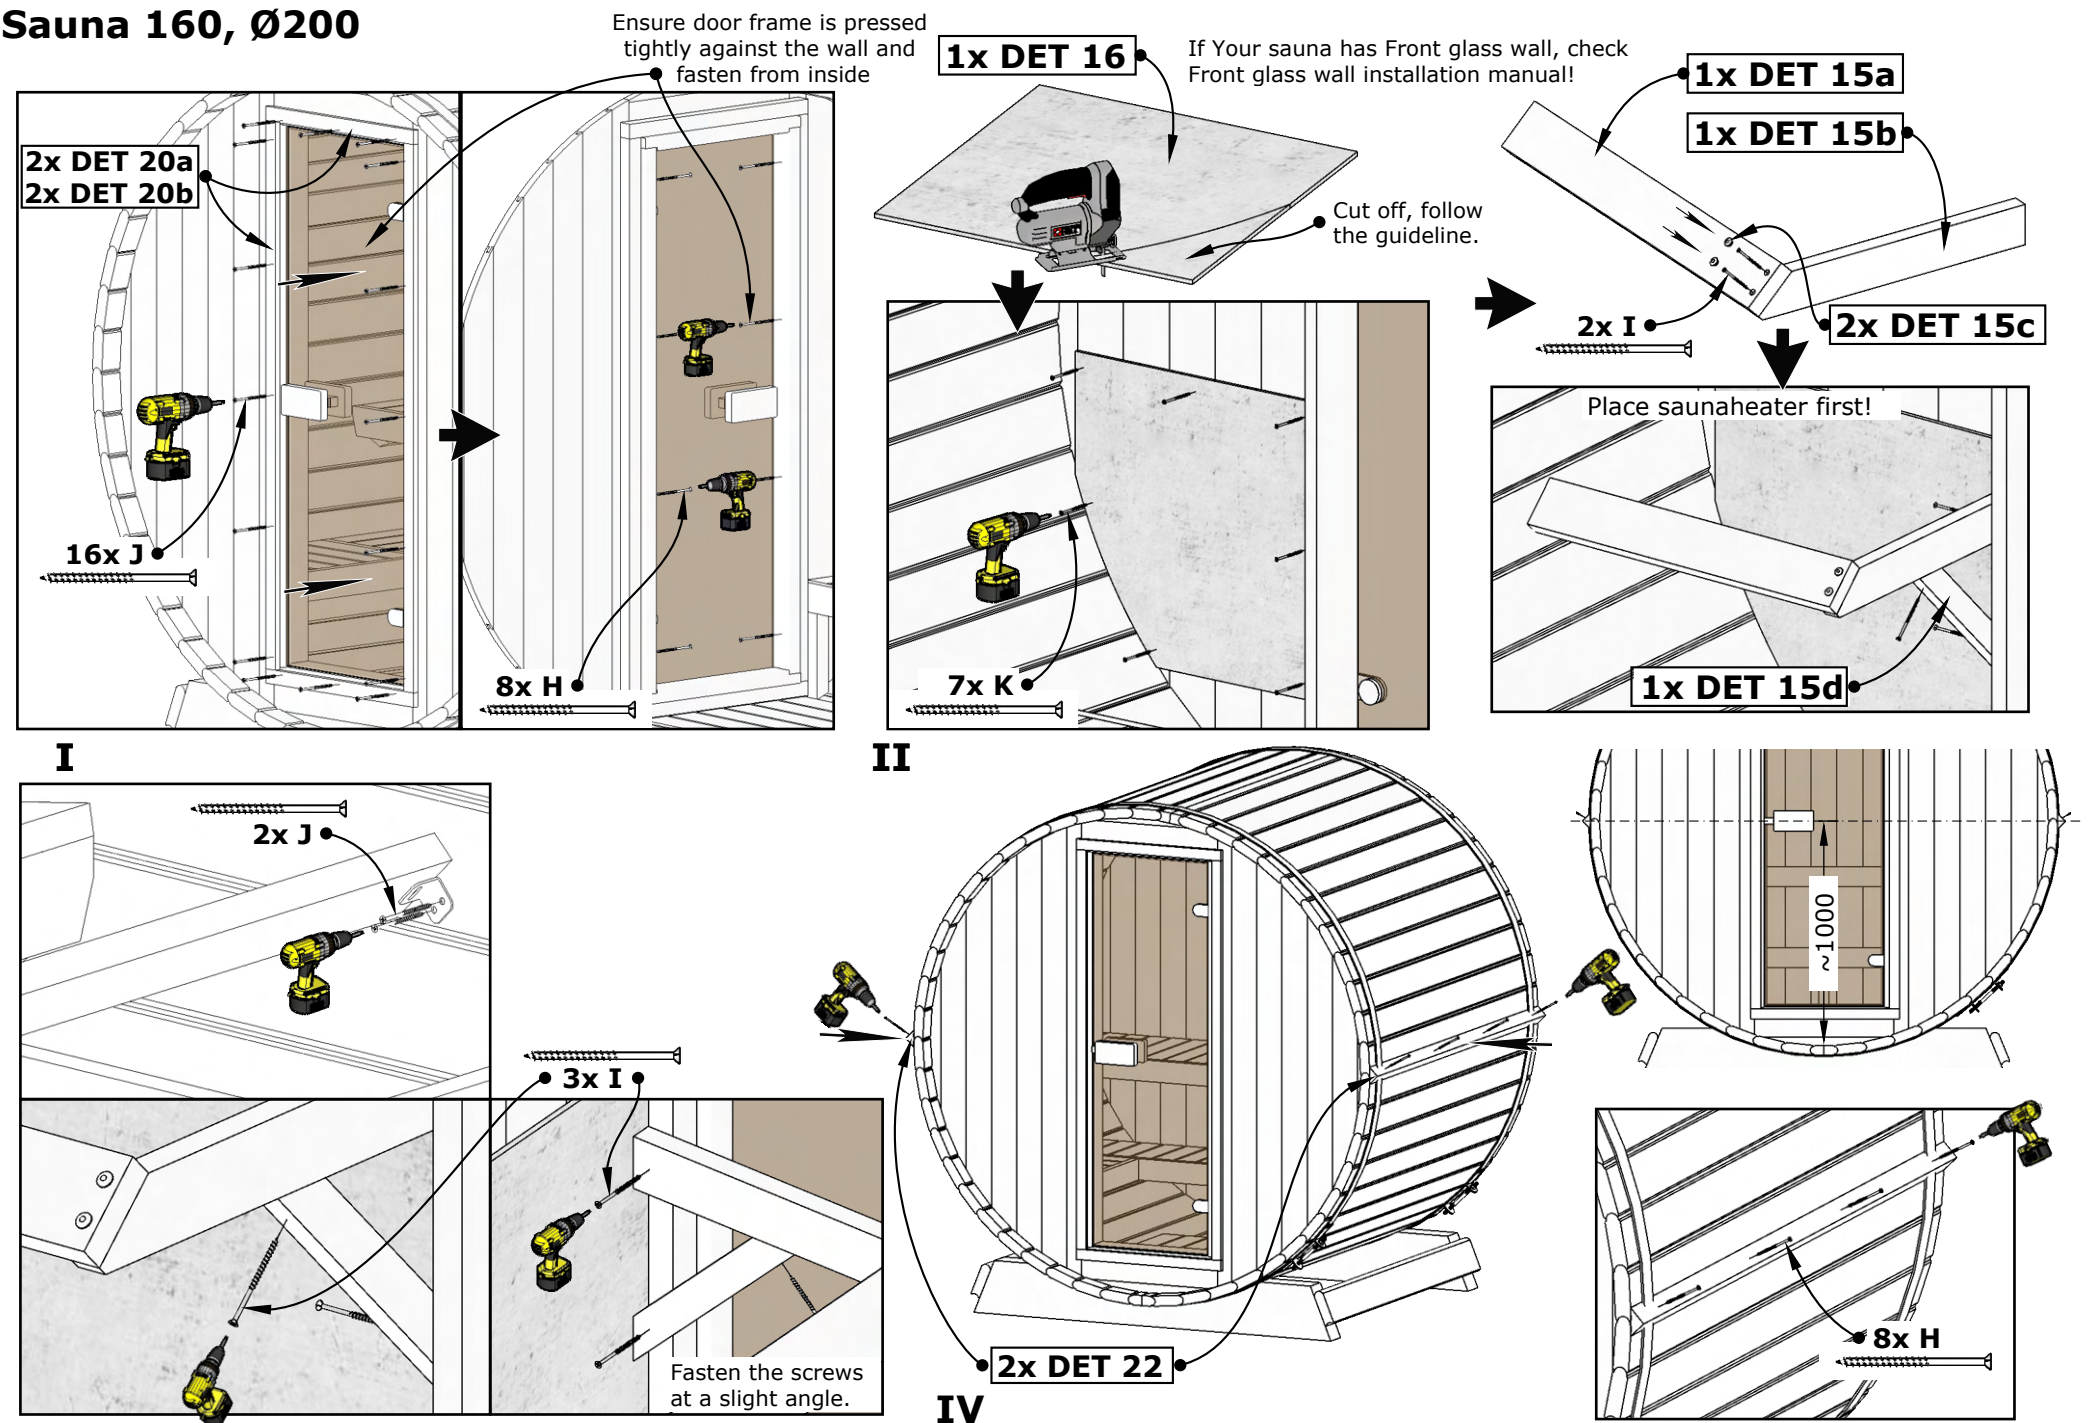


Sauna 160, Ø200



NB! Check also shingles installation manual inside shingles package.

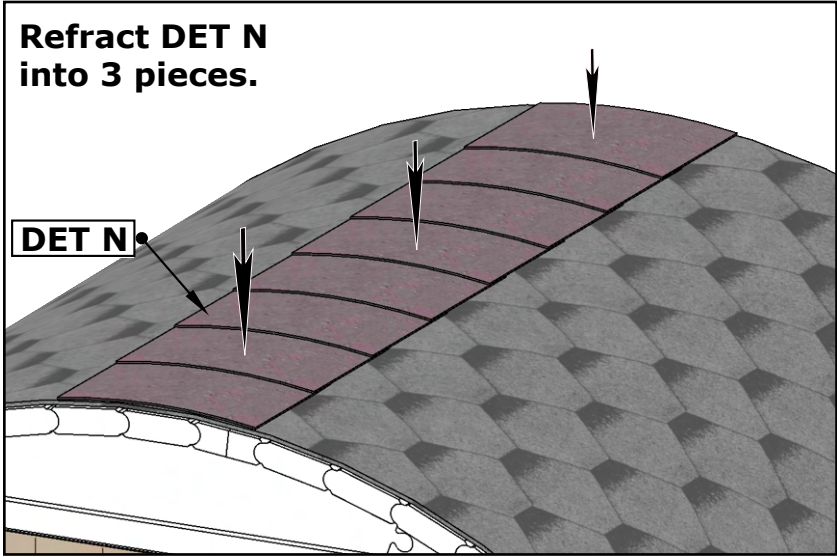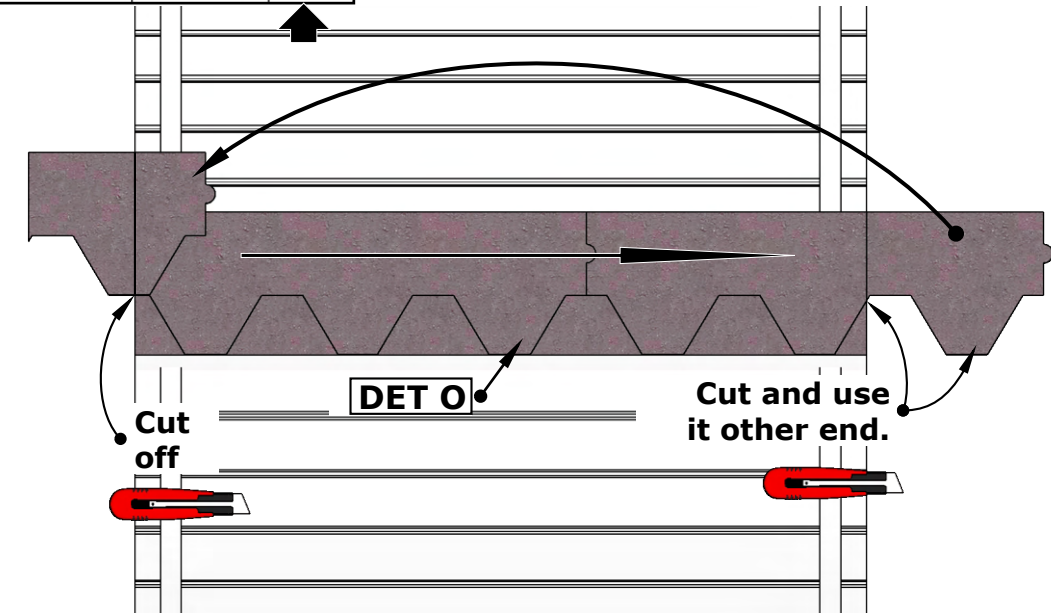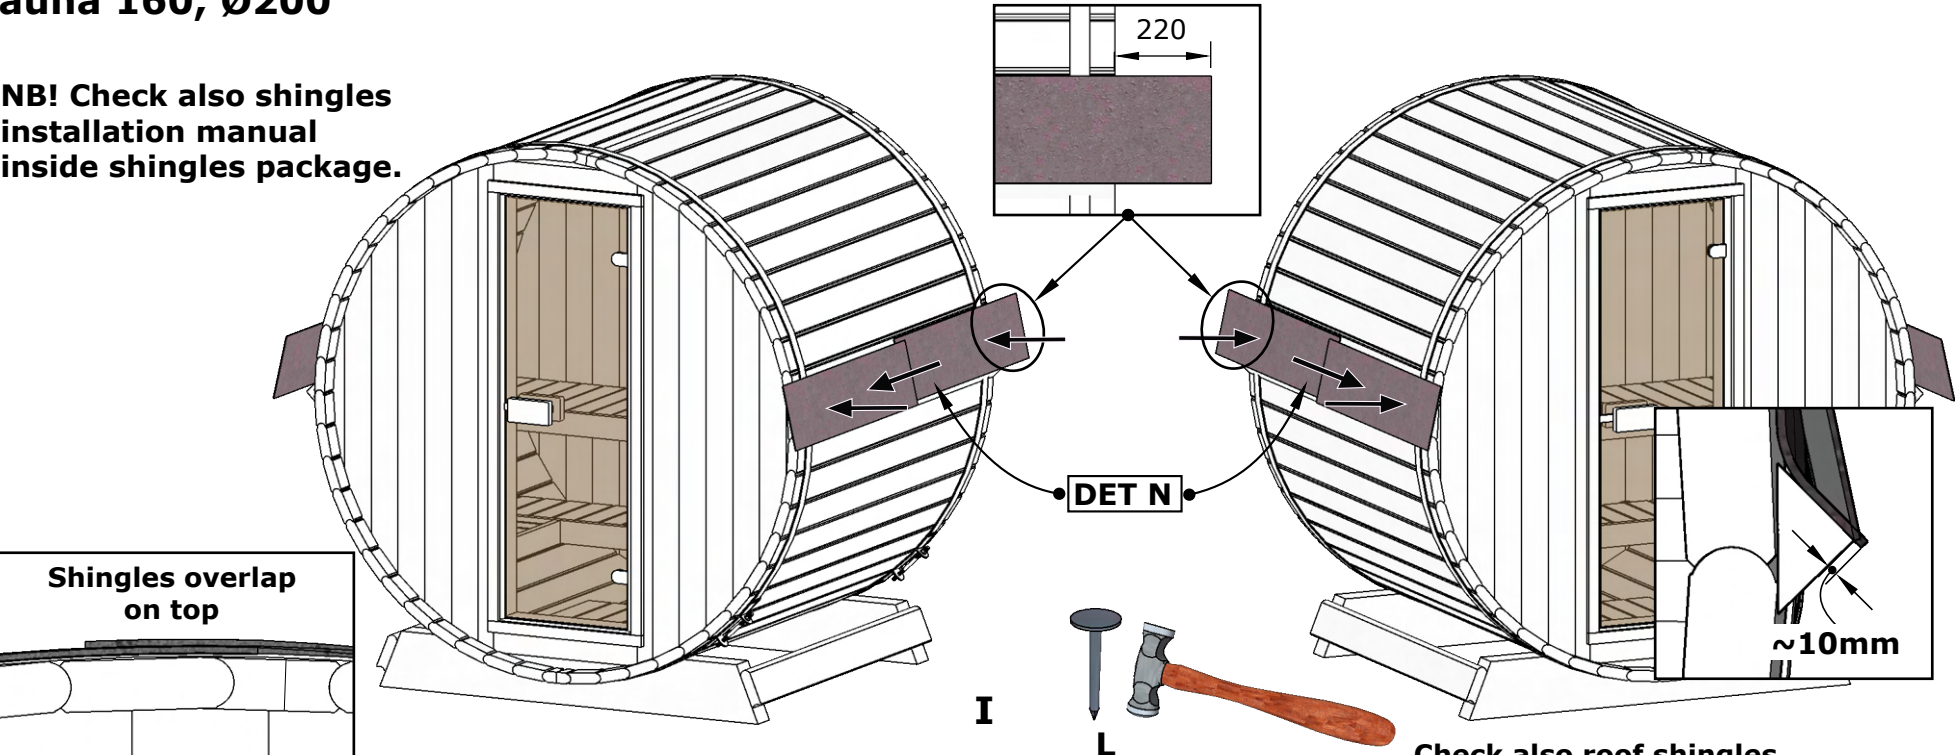

Sauna 160, Ø200

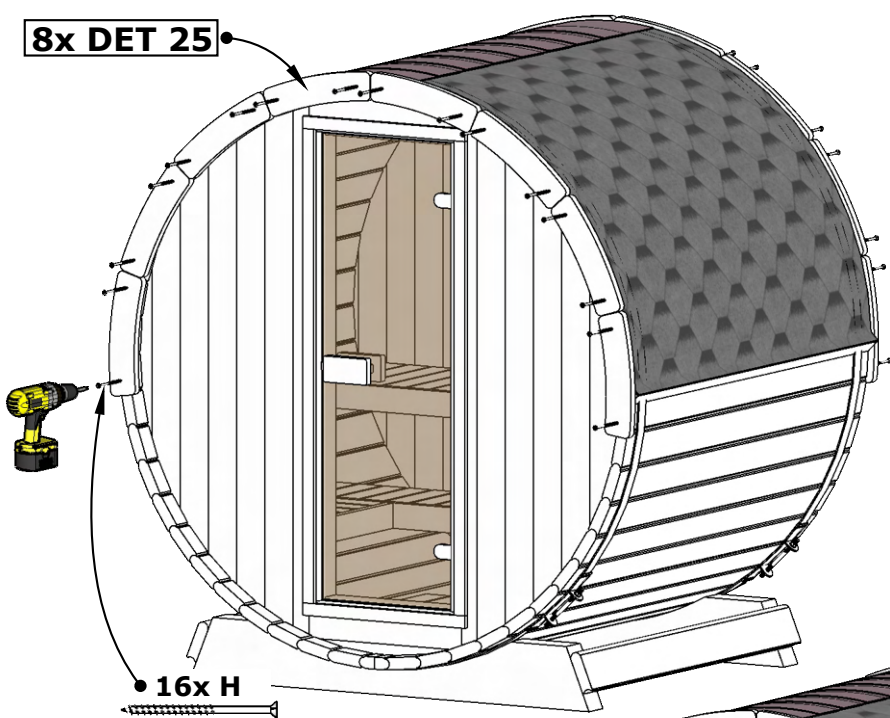

I

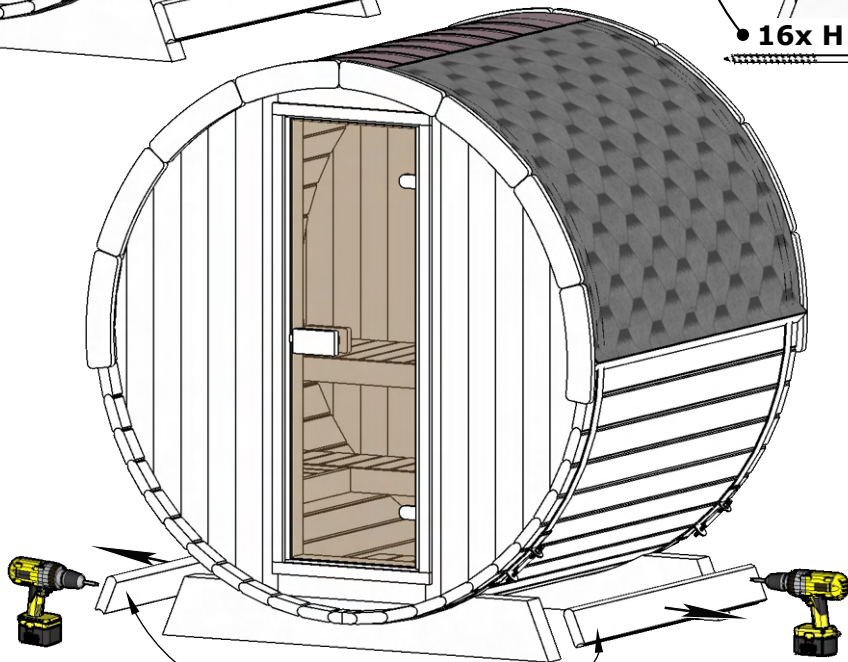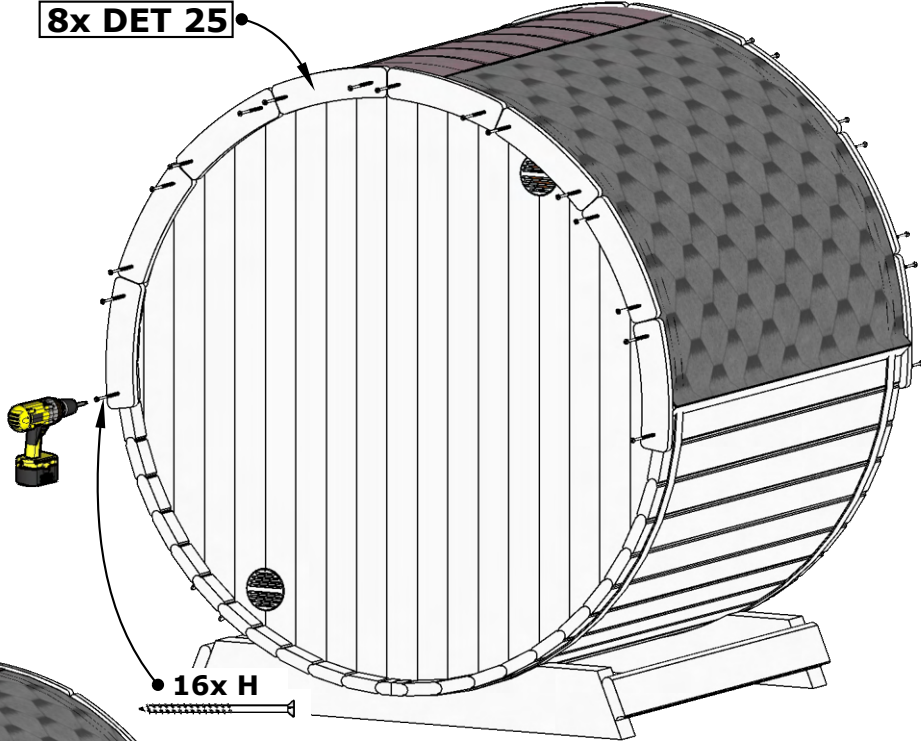

II

Remove DET A